

# ROUGH COUNTRY

## CHEVY 07-19 1500/2500HD/3500HD CREW CAB TR2 RUNNING BOARD

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If questions exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure adequate clearance between all components.

### Kit Contents:

1-DR Board  
1-PASS Board  
3-DR Bracket  
1-PASS Front Bracket  
1-PASS Front Bracket Top

### Tools Needed:

10mm Socket or Wrench

### Hardware Included:

1-8mm-1.25 Lock Nut  
1- 8mm Flat Washer  
11-8mm Body Clip  
1-Flag Bolt  
24-M8-1.25 x 28mm Hex Bolt




### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




## INSTALLATION INSTRUCTIONS


1. Beginning on DR side, (6 ea.) body clips in mount locations an along the pinch weld locations. **See Photo 1.**
2. Loosely attach the DR side brackets to body clips. **See Photo 2.**

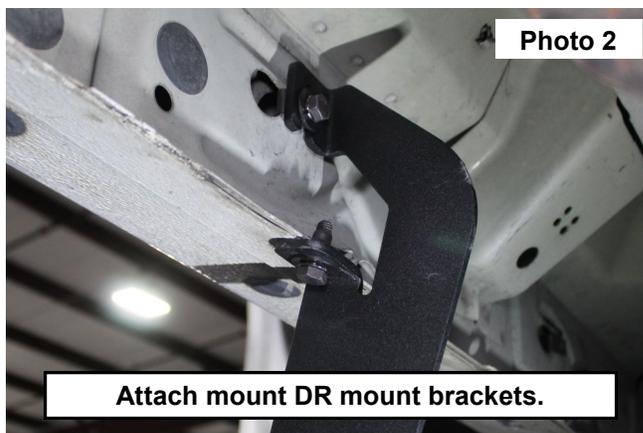


3. Align step to mount brackets and loosely install step to mount brackets. **See Photo 3.**
4. Beginning on PASS side, repeat step 1. **NOTE: There will be no clip for pinch weld on the PASS front mount bracket. See Photo 4.**

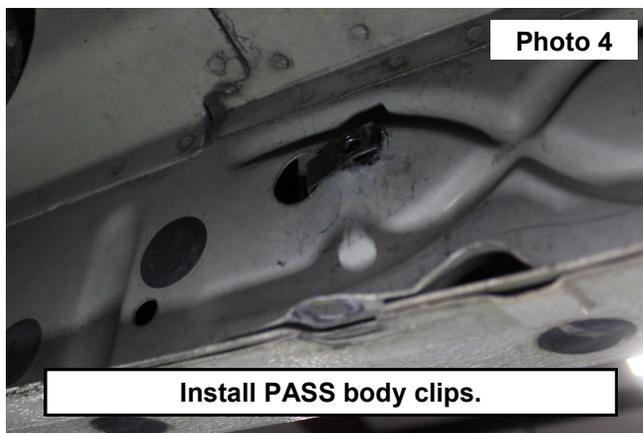

5. Insert (1 ea.) 8mm-1.25 x 28 into body clip on PASS front clip and loosely install the PASS top front bracket. Install the flag nut through bottom of top bracket and pinch weld. **See Photo 5.**
6. For the PASS side, loosely mount the other (2) mount brackets on vehicle. **See Photo 6.**

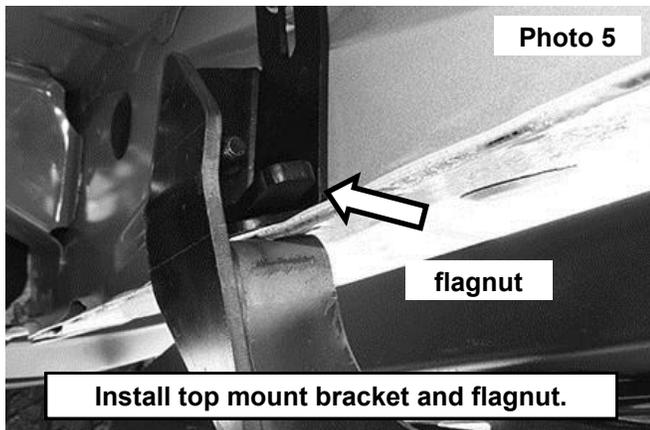

7. Align step to brackets and loosely install step. **See Photo 7.**
8. Using a 10mm socket, tighten all hardware at this time. **See Photo 8.**

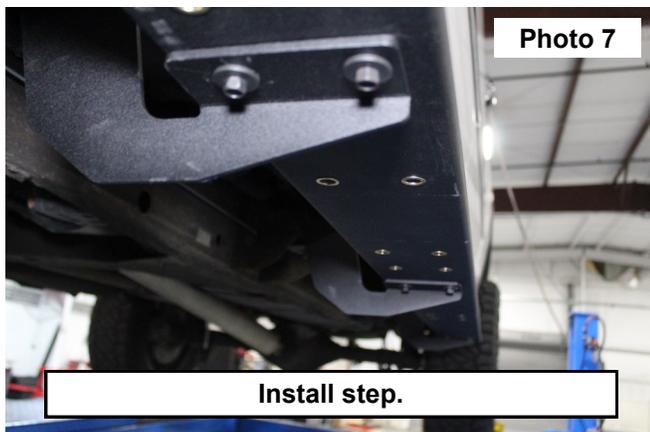

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyer's responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

