

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

### Ford 2021 Bronco Rear Adjustable Track Bar

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

#### KIT CONTENTS:

Track Bar Assembled x1

#### TOOLS NEEDED:

16mm Wrench or Socket  
17mm Wrench or Socket  
24mm Wrench or Socket  
15mm Wrench or Socket




#### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





## INSTALLATION INSTRUCTIONS

1. With the vehicle on the ground. Make sure the vehicle is in park and the front and back of the tires are chocked.
2. Loosen and remove the axle end of the track bar using a 24mm wrench and socket. **See Photo 1.** Retain hardware.
3. Remove the frame end of the track bar using a 24mm wrench and socket. Then remove the track bar from the vehicle. **See Photo 2.** Retain hardware.

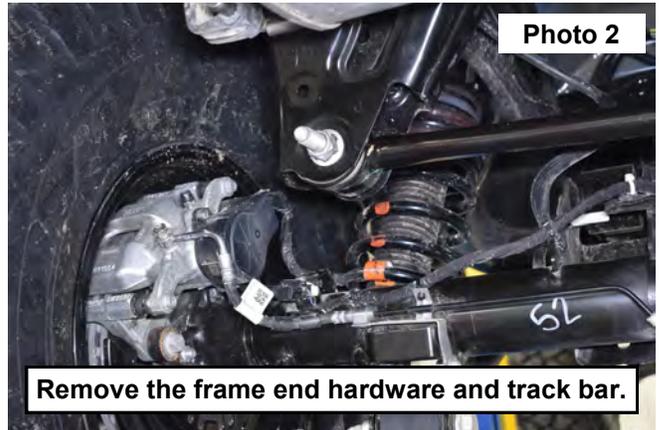



4. Loosen the 2 bolts on the clamps of the adjustable collar using a 16mm wrench on the bolt and a 17mm socket on the nut. **See Photo 3.**
5. Place the track bar into the frame end mount and secure using the OE bolt and nut. **See Photo 4.**

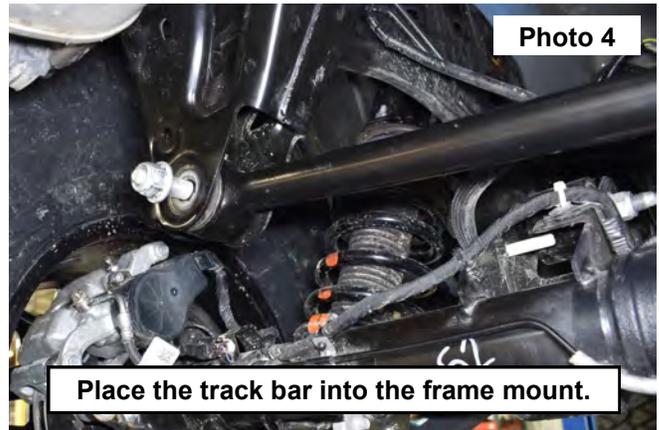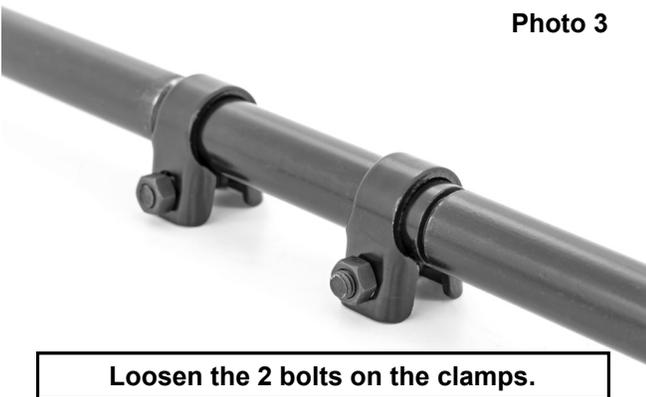

6. Track bar is shown installed into the axle mount using the OE bolt. **See Photo 5.**
7. Track bar is shown installed into the 7" kit axle mount track bar bracket using the 14mm bolt supplied in the track bar bracket kit. **See Photo 6.**



8. Tighten the track bar bolts using a 24mm wrench and socket. **See Photo 7.**
9. Measure the rear tracking of the vehicle. Using the adjustment collar adjust the axle center to the vehicle. Then tighten the 2 bolts in the clamps on the adjustable collar using a 16mm wrench on the bolt and a 17mm socket on the nut. **See Photo 8.**

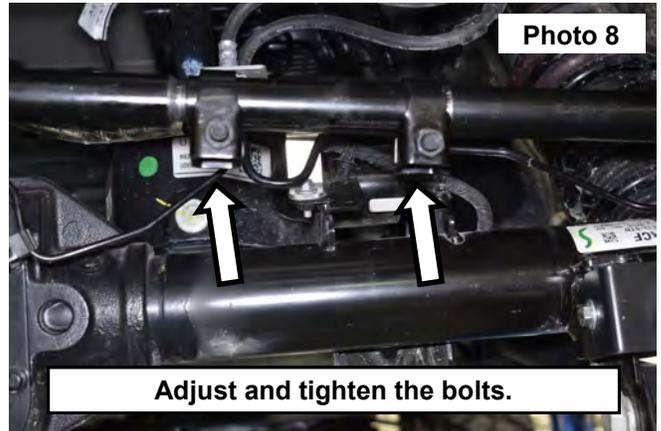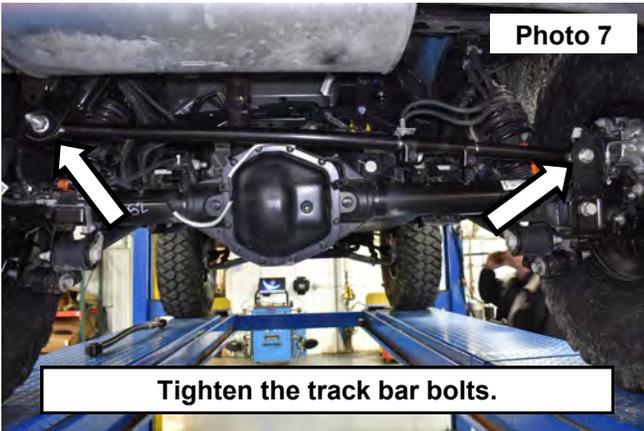

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



