

ROUGH COUNTRY

SUSPENSION SYSTEMS®

Ford 09-14 F150 (All Models)

Thank you for choosing Rough Country for all your lighting needs.

▲ NOTICE

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go. If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

Tools Needed:

11/64" Drill
10mm Socket
7mm Socket/Wrench
Flat Screwdriver
Drill Motor
Reciprocating Saw




By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.




1. Park the vehicle on a smooth level surface.
2. Using a 10mm socket remove the grille from the vehicle. Save factory hardware for reuse. **See Photo 1.**
3. Using a reciprocating saw, cut out the inside of the grille. **See Photo 2.**





4. Remove the cut out portion. **See Photo 3.**
5. You should only be left with the outer grille housing. **See Photo 4.**

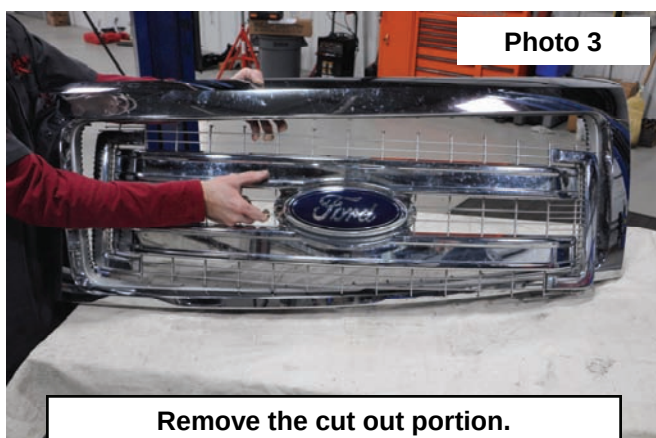

6. Install the supplied grille mounts, on the studs using the supplied flange nuts. **See Photo 5. **Do not tighten.****
7. Place the Rough Country grille into the factory grille shell. Mark and drill using an 11/64" drill. **See Photo 6.**

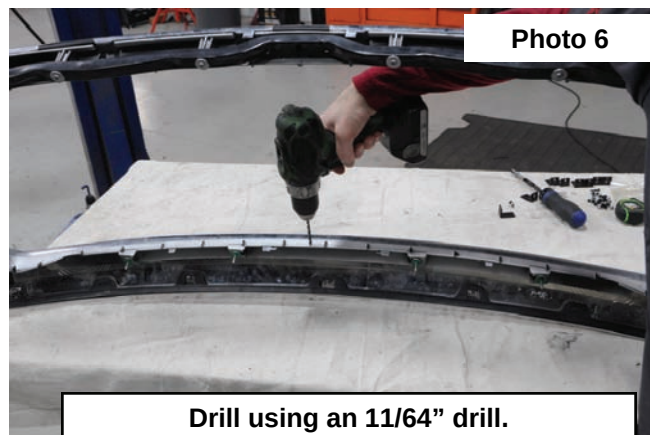

8. Attach the Rough Country grille to the outer grille shell using the supplied hardware.
9. Install the lights into the rear of the grille using the supplied hardware. **See Photo 7.**
10. Using a 7mm wrench tighten all hardware.
11. Wire the lights according to the supplied instructions. **See Photo 8. **Run wiring along hood, making sure wires will not be pinched by hinge.****

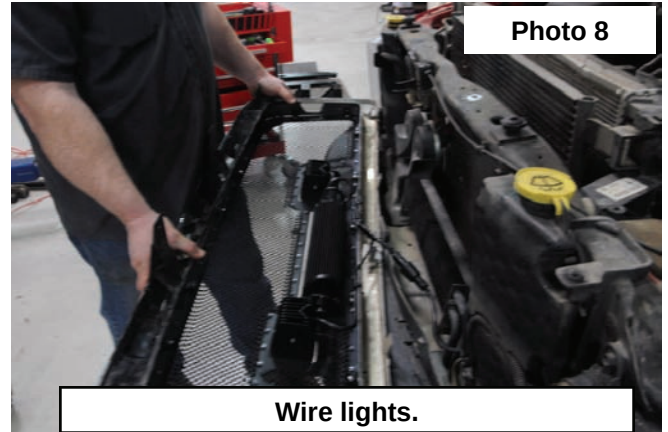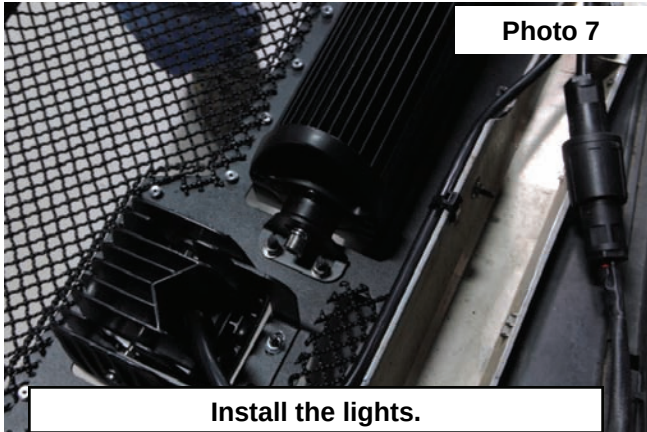

12. Install the grille onto the truck using the factory hardware. Tighten to factory specs.

