



Toyota 2024 Tacoma Fog Lights Kit

Thank you for choosing Rough Country for all your Lighting needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:

- Driver Side Fog Light Brkt- 1
- Passenger Side Fog Light Brkt- 1
- 3x1.75" Blk Series LED Fog Light- 2 Pair
- Tacoma Fog Light Harness- 2

Tools Needed:

- 10mm Wrench or Socket
- 13mm Wrench/Socket
- Phillips Head Screw Driver

Hardware Included:

Hardware include with Fog Lights





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS



1. Locate and unbolt the two hex bolts holding the fender carpet from the lower bumper. The two hex bolts are located on both driver and passenger side of lower bumper. Photos 1 & 2

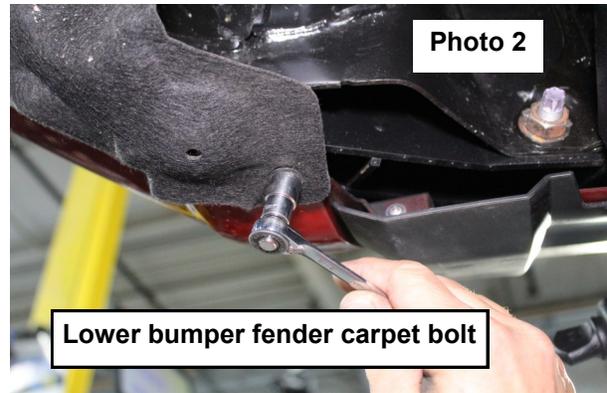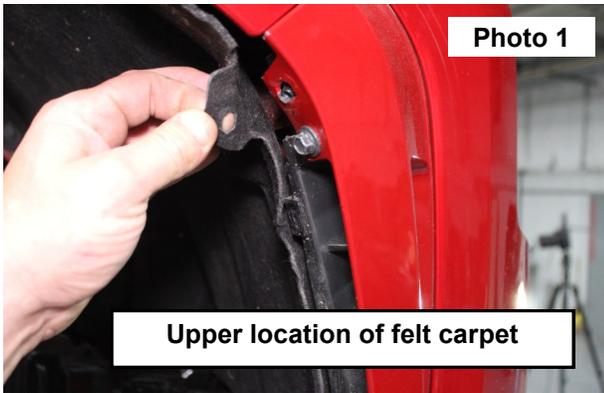


2. Locate and unpin the two push pins that attach the air intake to the upper part of grill. Photos 3 & 4

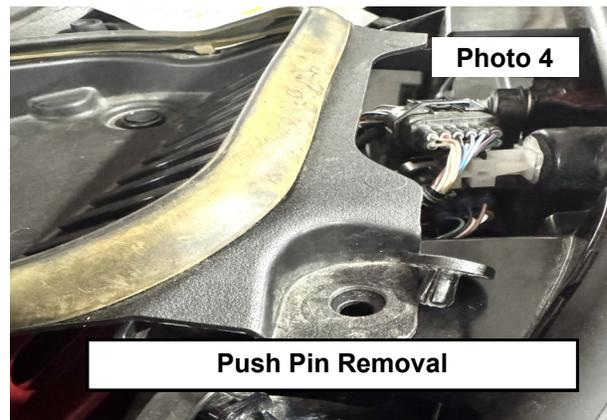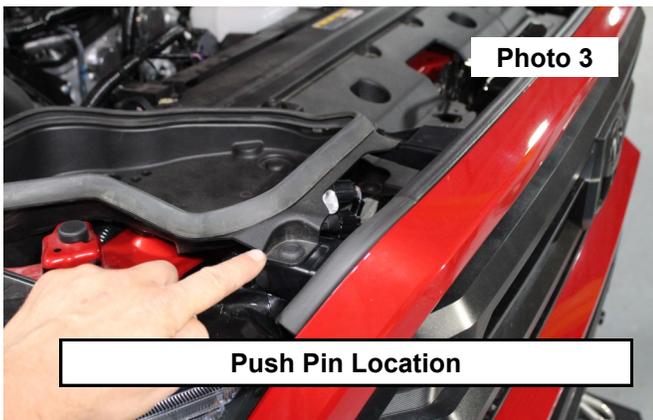



3. Unbolt the three upper grill mount bolts using a 10mm socket/wrench and retain stock hardware. One is located under air intake push pin. Photo 5 & 6

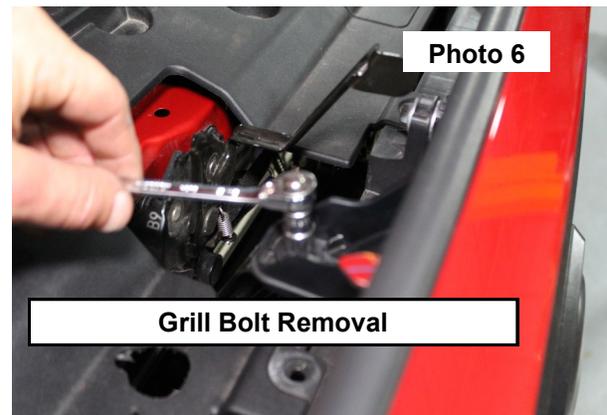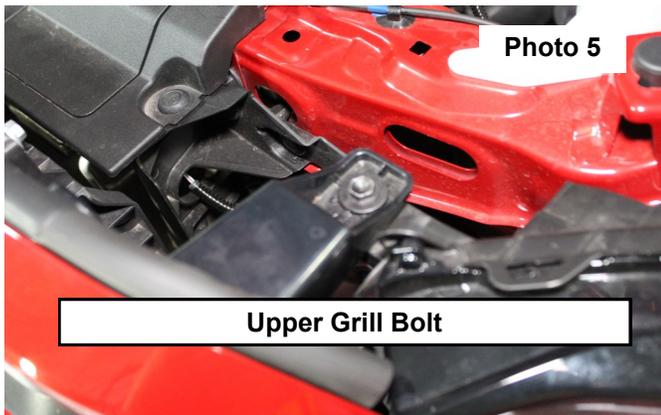


4. Loosen and pop out lower bumper by hand then unplug wiring harness totally removing lower bumper and grill from front of vehicle. Photo 7 & 8

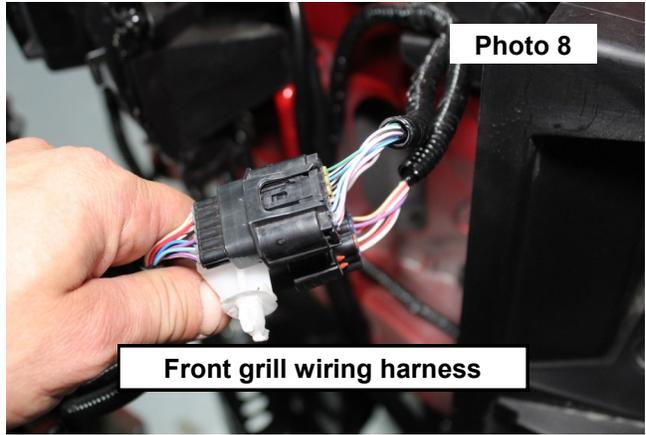



5. Lay grill with shutter fan up and remove the three shutter fan bolts with a 10mm wrench socket exposing the fog lights wiring harness and unplug fog light wiring. Photo 9 & 10

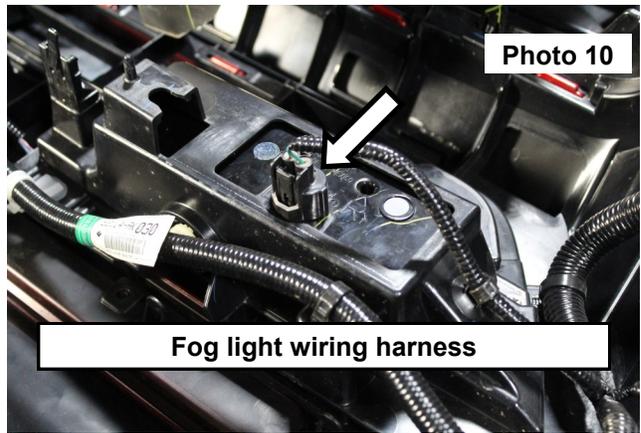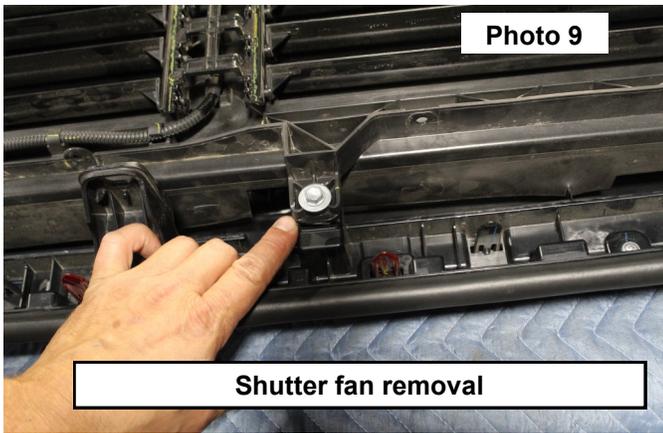

6. Remove the screws that hold the plastic fog light covers with a Phillip's head screw driver. Photo 11
7. Remove the black fog light cover from the front of grill exposing stock fog lights. Photo 12

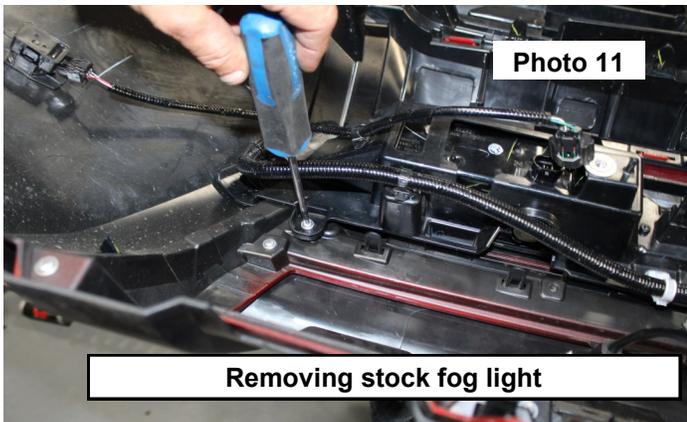

8. Remove the stock fog lights with a Phillips head screw driver retain screw. Photo 13
9. Using one of the provided fog light brackets assemble bracket with two new fog lights. Both found in Fog light kit. Photo 14, 15, and 16.

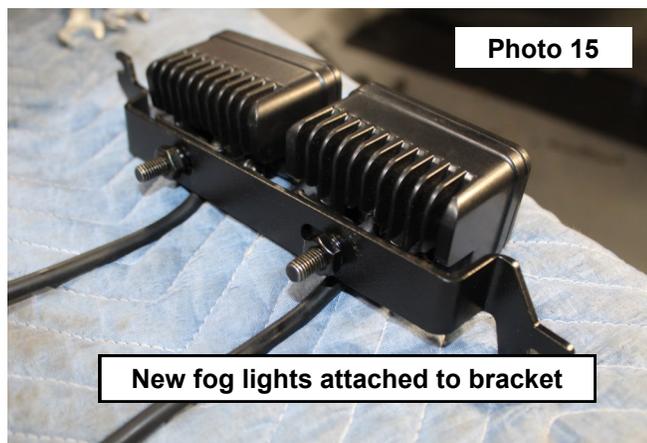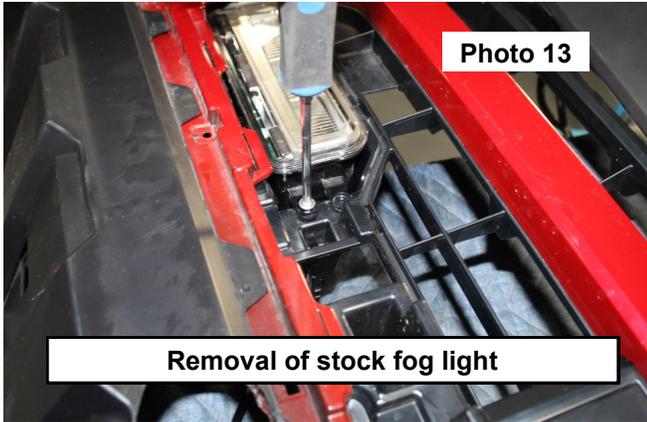

10. Install the two new brackets with fog lights using same method used to remove stock fog lights. Secure with retained screw. Photo 17 and 18



11. Reassemble the front lower bumper and grill components in reverse order for steps one through seven.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

