

ROUGH COUNTRY

921721210

SUZUKI 23-25 JIMNY DITCH LIGHT MOUNT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If questions exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure adequate clearance between all components. Periodically check all hardware for tightness.

Kit Contents:

1-DR Ditch Mount Bracket
1-PASS Ditch Mount Bracket

Tools Needed:

10mm wrench or socket
12mm wrench or socket
Pry tool
Cutting tool

Hardware Included:

4-6mm-1.0 x 16mm Hex Bolt
4-6mm-1.0 Body Clip Nut
4-6mm Flat Washer
12in. PPF Tape





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTIONS


1. Using a 12mm wrench or socket, remove wiper arms. **See Photo 1.**
2. With a pry tool, remove (5) push pins on center cowl and remove cowl. **See Photo 2.**

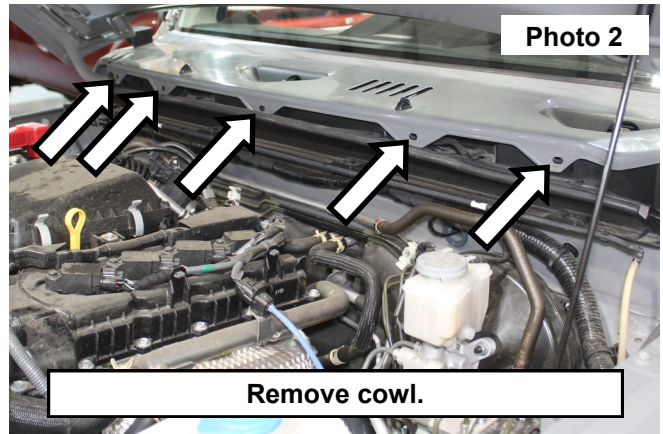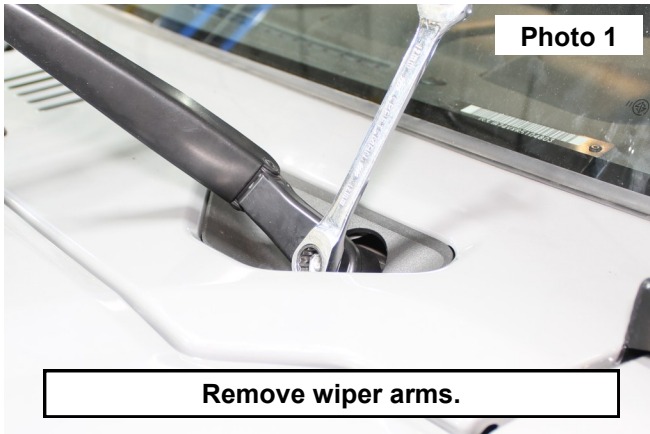



3. Apply protective tape to vehicle contact surface of brackets. **See Photo 3.**
4. Using a cutting tool, carefully trim off excess tape. **See Photo 4.**

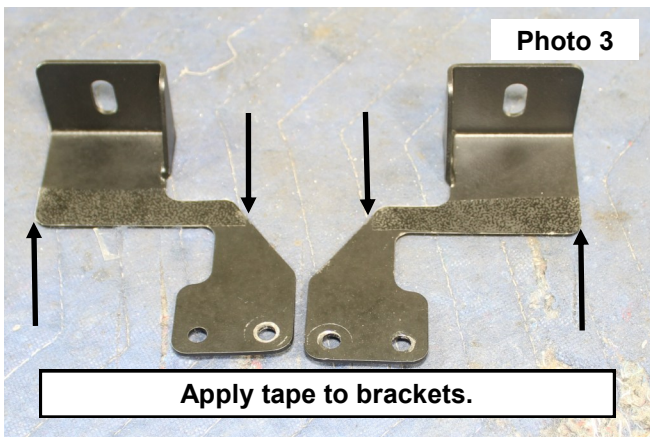



5. Beginning on PASS side, place (2) body clips on the cowl mount bracket. **See Photo 5.**
6. Loosely attach light mount bracket and thread (2 ea.) 6mm x 16mm and 6mm flat washers through light bracket and cowl mount brackets. **See Photo 6.**

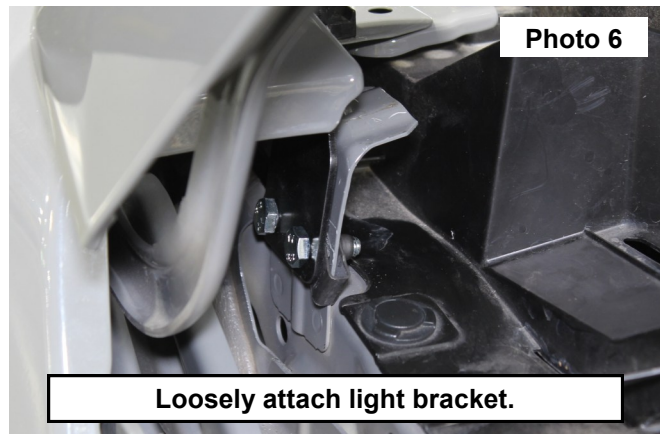



7. Using a 10mm wrench, tighten 6mm hardware. **See Photo 7.**
8. Beginning on DR side, attach (2) 6mm-1.0 body clip nut on the cowl mount bracket. **See Photo 8.**

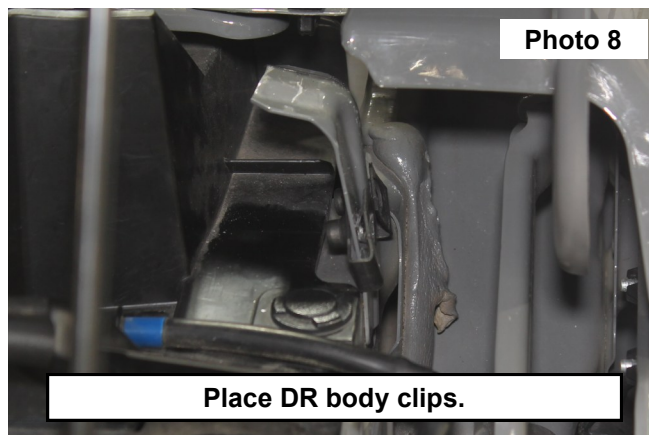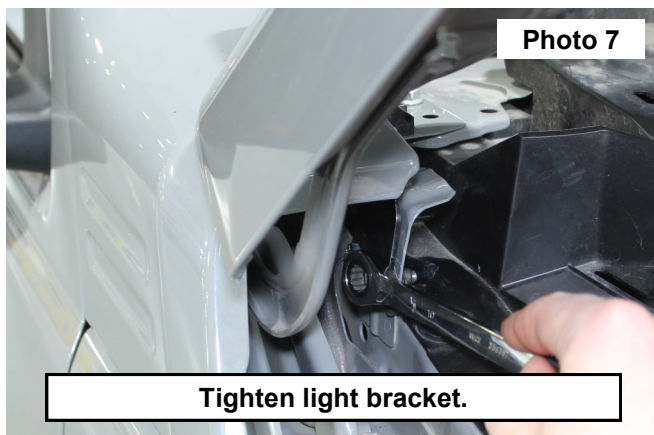

9. Attach light mount bracket and thread (2 ea.) 6mm x 16mm and 6mm flat washers through light bracket and cowl mount brackets. **See Photo 9.**
10. Using a 10mm wrench, tighten 6mm hardware. **See Photo 10.**

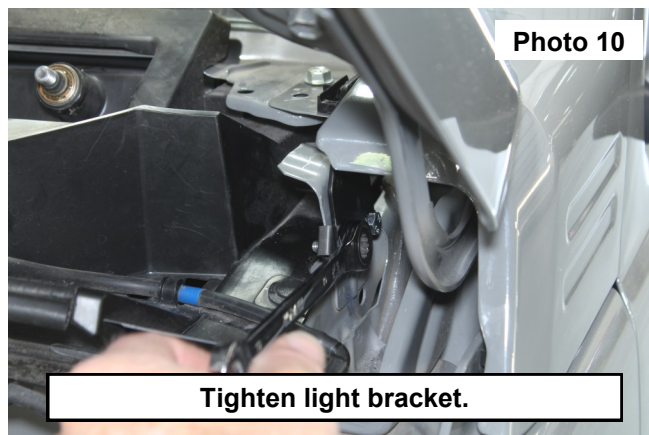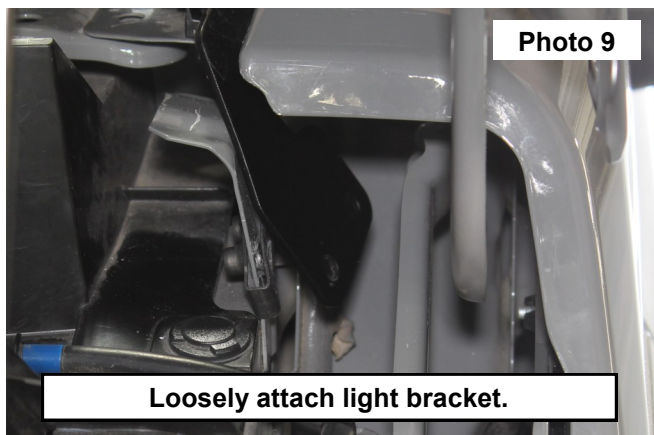

11. Replace cowl and secure with pushpins. **See Photo 11.**
12. Using the 12mm wrench replace wiper arms. **See Photo 12.**

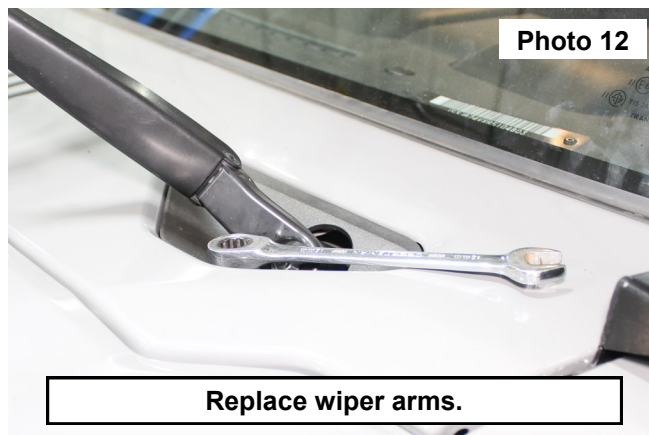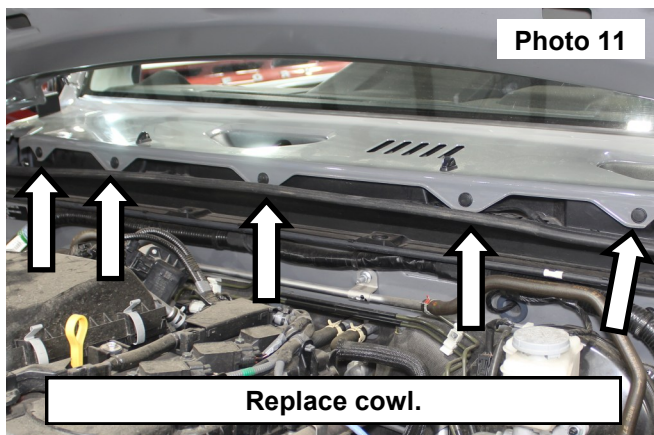

INSTALLATION INSTRUCTIONS

13. Using the 10mm wrench, attach light to mount brackets and torque to 9ft/lbs. Run wire according to manufacturer instructions. **See Photo 13.**



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyer's responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

