921850100

ROUGH COUNTRY SUSPENSION SYSTEMS®

Mercedes Sprinter Helper Bag Compressor Mount

Thank you for choosing Rough Country for all your Performance needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:

Mercedes Sprinter Compressor Brkt x1
85010 Hardware Bag x1

Tools Needed:

13mm Socket/Wrench
Socket extension
Corded/Cordless Drill
17/32 Drill Bit
Nut Insert Tool

Hardware Included:

85010 Hardware Bag:
8mm-1.25 Flag Bolt x1
8mm-1.25 Blind Nut Insert x1
8mm-1.25 Nylock Flange Nut Zinc x1
8mm Flat Washer x1
8mm-1.25x 35mm HHCS x1
.3125in Lock Washer x1

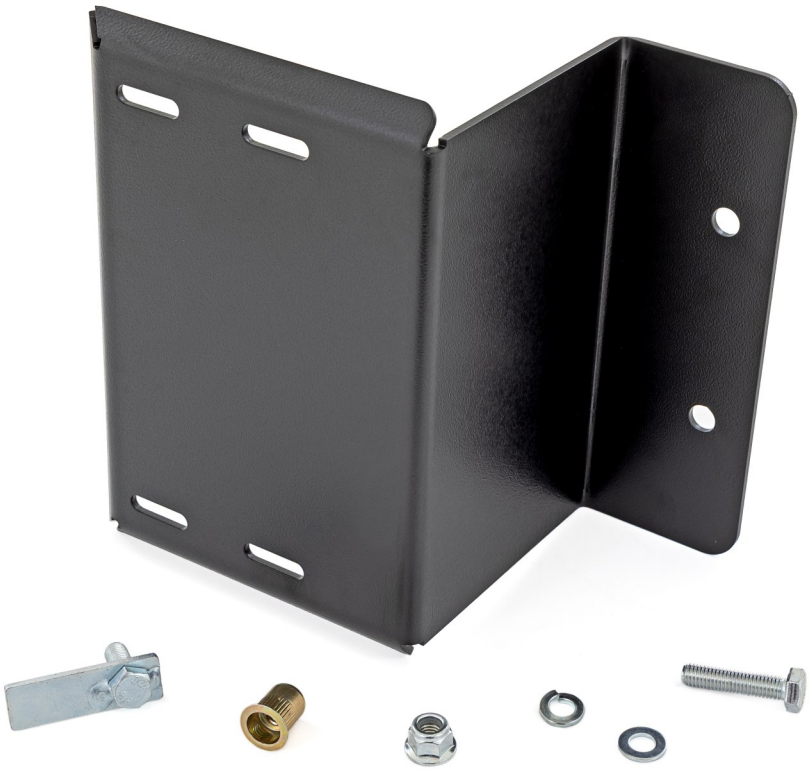

Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTIONS

1. Raise vehicle and place frame on jack stands.
2. Insert flag nut in any of the floor supports along the outside of frame in the large center hole. **See Photo 1**.
3. Loosely attach the compressor bracket on the flag nut. **See Photo 2.**

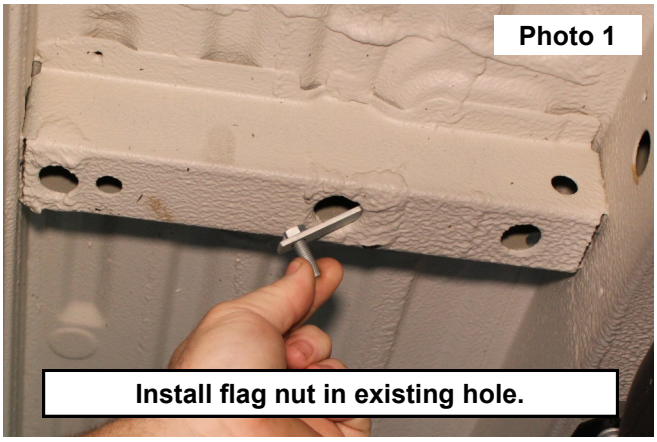

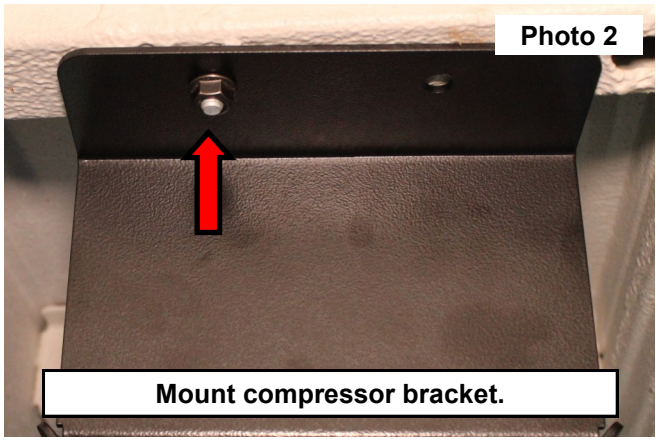

4. Using a paint pen, mark location for mounting hole to be drilled. **See Photo 3.**
5. Using 17/32 drill bit, drill previously marked hole. **See Photo 4.**

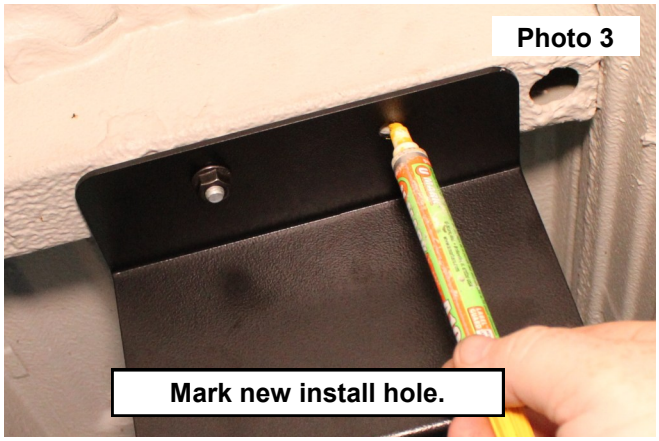

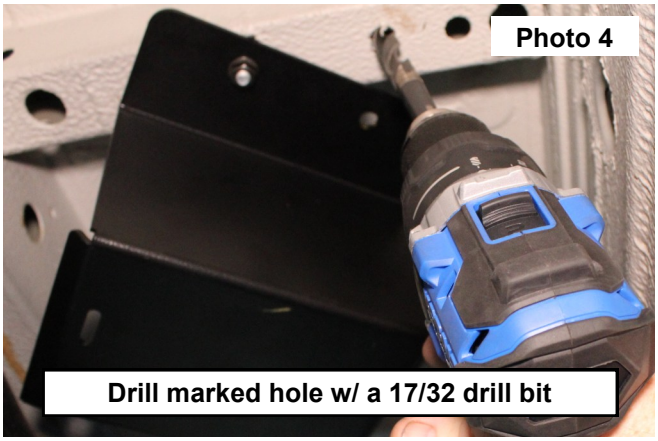

6. Using Nutsert tool, insert 8mm nutsert into newly drilled hole in floor support. **See Photo 5**. **NOTE: Nutsert tool can be purchased on RC website.www.roughcountry.com/product/nutsert-tool-10583.**
7. Install compressor to bracket prior to mounting bracket and mount bracket to baffle. Run electrical wires according to manufacturer directions. **See Photo 6.**

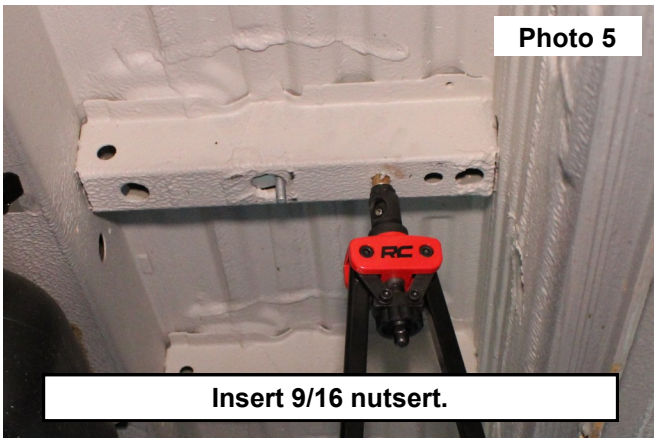

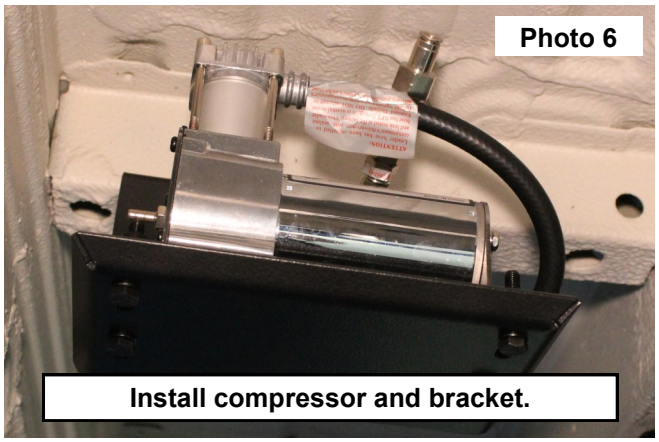

8. Use 13mm socket and extension, tighten compressor bracket to floor supports. **See Photo 7.**
9. Once compressor bracket and compressor is installed the airlines and electrical wires can ran and hooked up to compressor per manufactures directions.

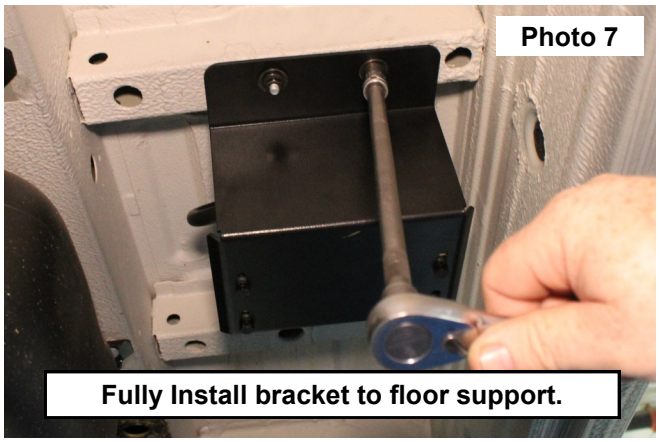

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyer's responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.