

ROUGH COUNTRY

Cross Rail Kit for Bed Topper

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

Kit Contents:

Cross Rail x2
Mounting Bracket x4

Tools Needed:

5mm Allen Wrench
13mm Wrench or Socket
Measuring Tape

Hardware Included:

8 x 15mm Button Head Bolts x8
8 x 20mm Button Head Bolts x16
8mm Flat Washers x8
8mm Lock Washers x8
8mm Flange Nuts x16
T-Slot Nut x8





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS


1. Locate (2) of the 8mm x 15mm button head bolts, (2) lock washers and (2) flat washers. Place into each (4) mounting bracket. **See Photo 1.**
2. Loosely thread (2) of the T-slot nuts onto the each of the bolts from step 1. **See Photo 2.**

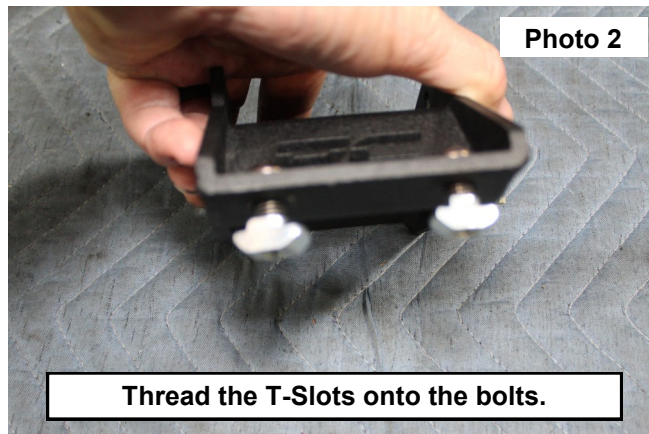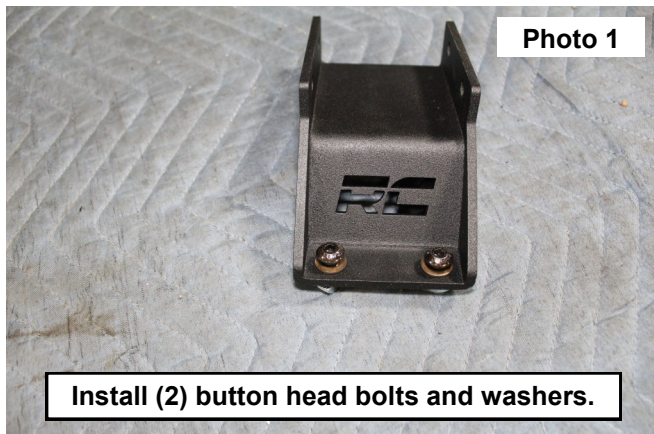



3. Place the T-slot nuts, assembled in step 1, into the bed cap slot. Choose the mounting location of each bracket. Then tighten the button head bolts using a 5mm Allen wrench. Repeat for the remaining brackets. **See Photos 3 and 4**

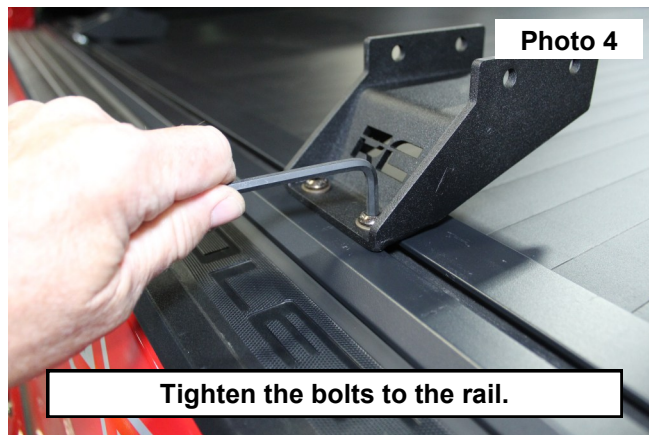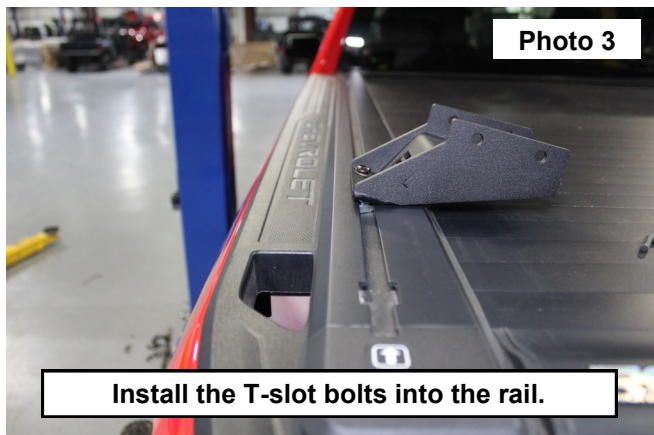

4. Place the cross rails onto the brackets. Center the rail in-between the brackets. **See Photo 5.**
5. Insert (4) of the supplied 8mm x 20mm button head bolts and (4) flat washers through each side of each mounting bracket and into the cross rail. **See Photo 6.**

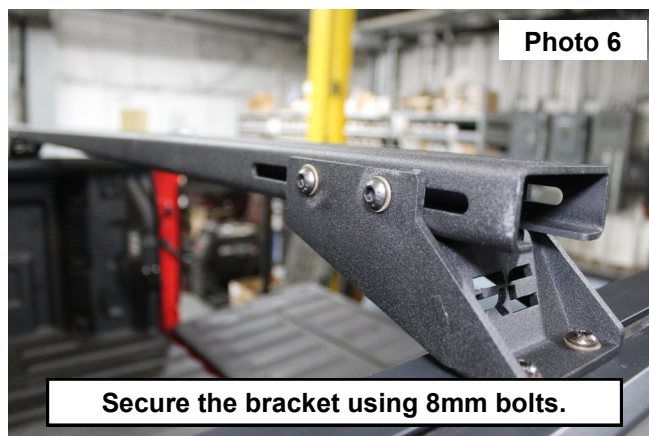

6. Secure the bolts and washers using the supplied (8) flange nuts. **See Photo 7.**
7. Tighten all hardware using a 5mm Allen Wrench and a 13mm socket/wrench. **See Photo 8.**

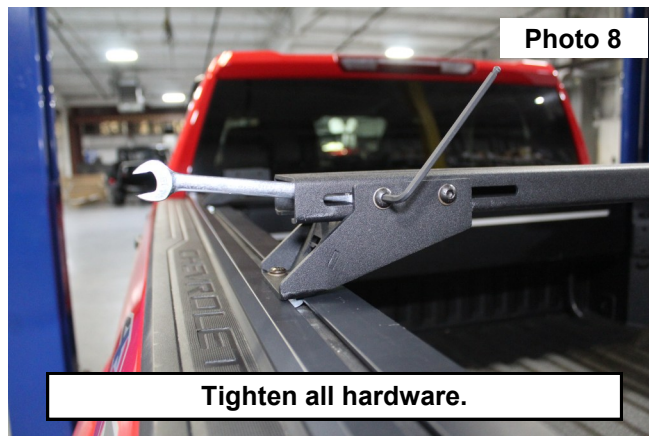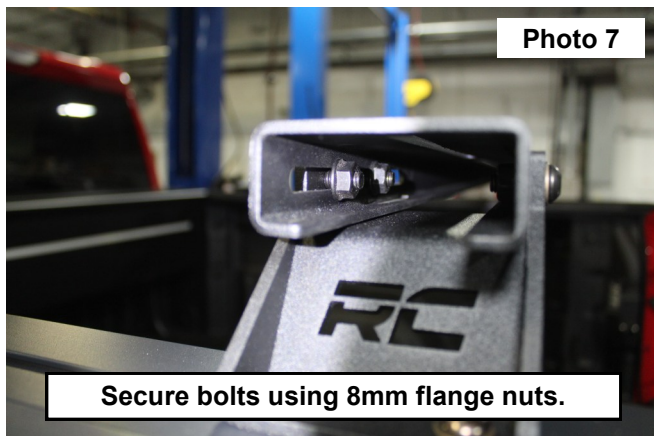

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

