921922024

ROUGH COUNTRY SUSPENSION SYSTEMS®

*WARNING: This product contains a chemical known to the State of California to cause Cancer and Reproductive Harm. For more information, go to www.P65Warnings.ca.gov.*

# 2024 TOYOTA TACOMA
# SIDE-WIND DEFLECTORS, TAPE-ON

## PRIOR TO INSTALLATION

A) Install the parts according to these written instructions with the hardware provided. WARNING: Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to, using alternative installation methods, hardware, or materials. DO NOT USE: Loctite, Superglue, or similar products on the parts or the vehicle. *Install parts on cleaned vehicle surfaces*.

B) **Fit:** Verify the fit of the parts to vehicle prior to installation (some filing, sanding, or cutting may be necessary to ensure proper fit).

C) **Decals:** Parts may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of parts.

D) **Care & Cleaning:** Parts are built to last; any detergent you use to wash your vehicle is sufficient to clean the part. Do not use any harsh abrasive detergents.

## TOOLS FOR EASY INSTALLATION:

- Soft Cloth or Alcohol Wipe
- Masking Tape (optional)

**PLEASE READ:** Manufacturer is not responsible for any damage, and the installation of our parts is done with the buyer's understanding that this scratching and paint wear may occur.

**LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS:** To claim warranty you must provide Proof of Purchase.

## INCLUDED IN HARDWARE KIT:

1.



Left Front Side-Wind Deflector
1 pc

1.



Right Front Side-Wind Deflector
1 pc

3.



Left Rear Side-Wind Deflector
1 pc

4.



Right Rear Side-Wind Deflector
1 pc

5.




Alcohol Wipe
4 pcs

Rev 1 05-14-26

## SECTION 1: FRONT SIDE-WIND DEFLECTOR INSTALLATION




Before peeling any tape, place part carefully above window to check and familiarize yourself with the fit.




The gap between the rear edge of part and edge of door is about 1/4". The gap will be evenly 1/4" from top edge to bottom edge of part.




The top edge of the part will follow along the contour above the window.



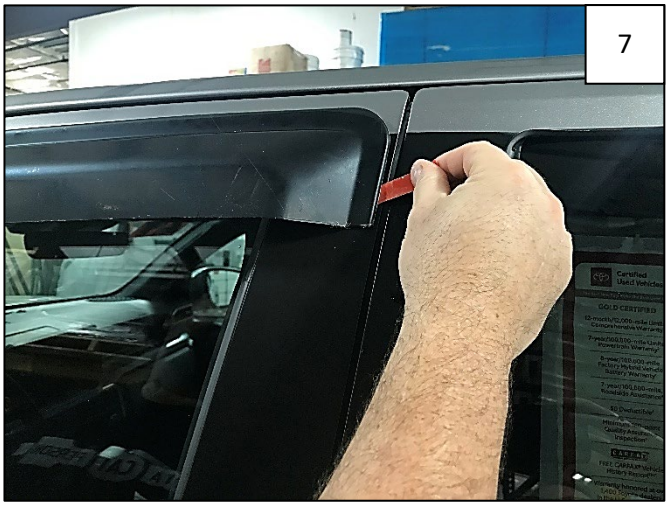

Align the molded in feature in part with the mirror base area.




Vehicle surface must be free of dust and dirt and dry. Use supplied alcohol wipe to clean door at areas of tape. Alternately: **Clean area with alcohol or degreaser.**




Make sure all red tape leaders are folded out to the outside of the part when ready to tape. Use masking tape to hold leaders in place if you wish.




Hold part in position above window, and peel the tape leader from the short length of tape at rearward end of part. Press firmly against part to adhere.




Next, pull tape leader from long piece of tape at opposite end of part. Carefully pull long tape leader at a 45-degree angle away from part to release from the tape, pressing against part as you go.




Using a soft cloth, press part against vehicle at areas of tape for 30 seconds to ensure full adhesion. Tape cures after 24 hours at 65 degrees.




Peel protective film from part.




Completed Front Side-Wind Deflector Installation. Repeat for other side.

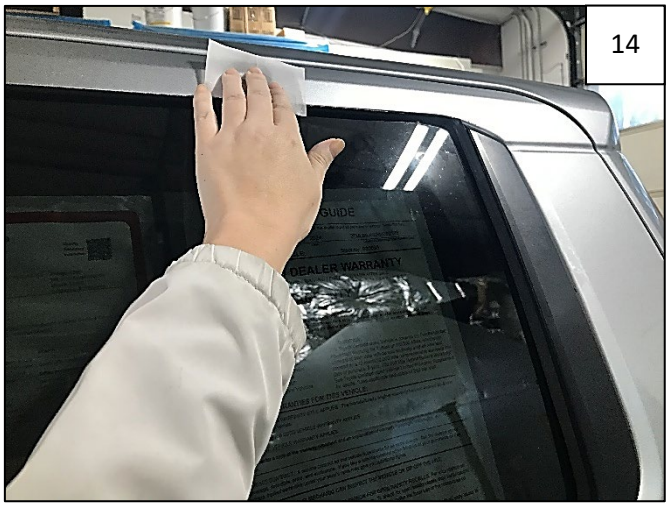
## SECTION 2: REAR SIDE-WIND DEFLECTOR INSTALLATION




Before peeling any tape, place part carefully above window to check and familiarize yourself with the fit.




The gap between front edge of part and edge of door should match that of the front door – about 1/4” evenly from top to bottom of part.




Vehicle surface must be free of dust and dirt and dry. Use supplied alcohol wipe to clean door at areas of tape. Alternately: **Clean area with alcohol or degreaser.**



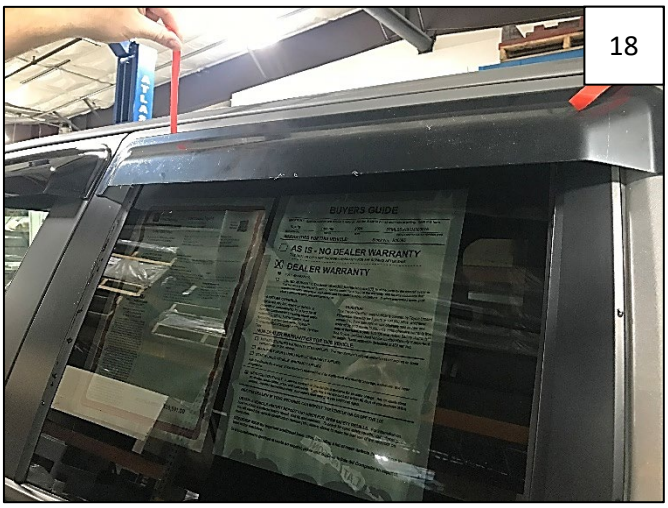

Make sure all red tape leaders are folded out to the outside of the part when ready to tape. Use masking tape to hold leaders in place if you wish.




Hold part in position above window, and peel the tape leader from the short length of tape at frontward end of part. Press firmly against part to adhere.




Next, peel leader from short piece of tape at the rear of the part. Press to adhere.




Finally, pull tape leader from long piece of tape, starting at either end. Carefully pull long tape leader at a 45-degree angle away from part to release from the tape, pressing against part as you go.




Using a soft cloth, press part against vehicle at areas of tape for 30 seconds to ensure full adhesion. Tape cures after 24 hours at 65 degrees.




Peel protective film from part.




Completed Rear Side-Wind Deflector Installation. Repeat for other side.