

BEFORE YOU BEGIN


1. Please read the instructions carefully and verify that each item is in the list.
2. Please retain these installation instructions for further reference and parts ordering information.

IMPORTANT

1. Please read the installation instructions carefully before you start.
2. If the vehicle is clean and free of other debris, it will be easy to install.
3. For your safety and to ensure a satisfactory installation, please complete all the installation steps in the order shown below.


PRODUCT INFORMATION

① Door Bag - Driver Side	x1
② Door Bag - Passenger Side	x1
③ Accessory screws	x8

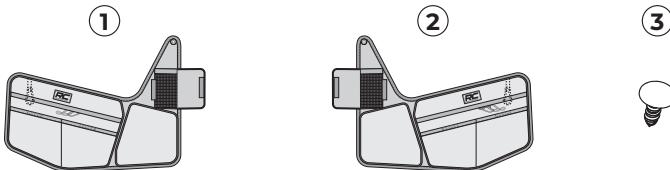


INSTALLATION TIPS

1 Remove and retain the seven screws [A] from the original factory door frame.

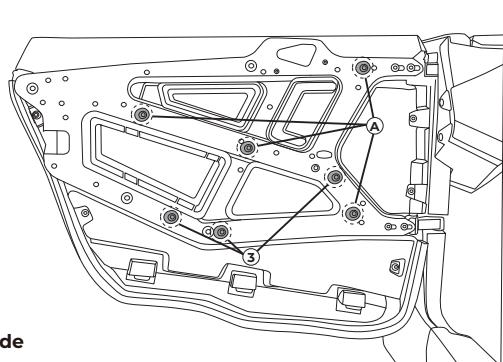


3 Open the zipper to remove the sponge, then use the accessory screws [B] to install the remaining four holes, and replace the sponge.

4 Tighten all screws.

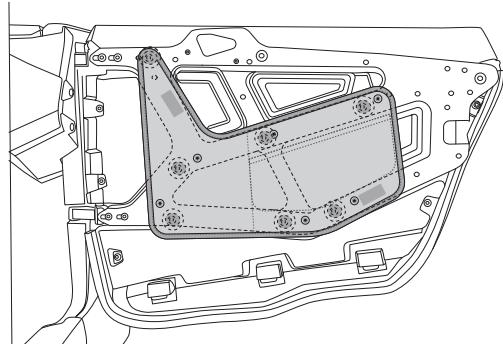


2 Peel off the self-adhesive Velcro hooks and install the bag at the corresponding position on the vehicle, installing the top three screws.

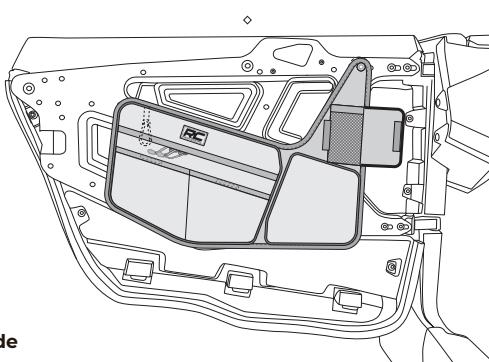

5 Repeat steps 1-4 to install the door pocket [2].

6 Installation complete.

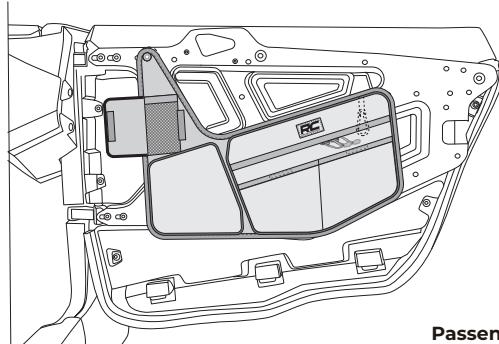

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.