

CFMOTO U10 Pro Full Coverage Skid Plates

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Check and retighten wheels at 50 miles and again at 500 miles. Periodically check all hardware for tightness.

KIT CONTENTS:


1-FR SKID PLATE
1-RR SKID PLATE
1-MID PLATE 1
1-MID PLATE 2
1-MID PLATE 3
4-6mm DUAL NUT PLATE

TOOLS NEEDED:

Jack and Jack Stands
10mm Socket

HARDWARE INCLUDED:

46-6mm-1.0 x 35mm Hex Bolt
38-.250 Fender Washer
10-.250 Flat Washer
2-6mm-1.0 x 50mm Hex Bolt
2-.50 Spacer
4-.75 Spacer
2-1.0 Spacer


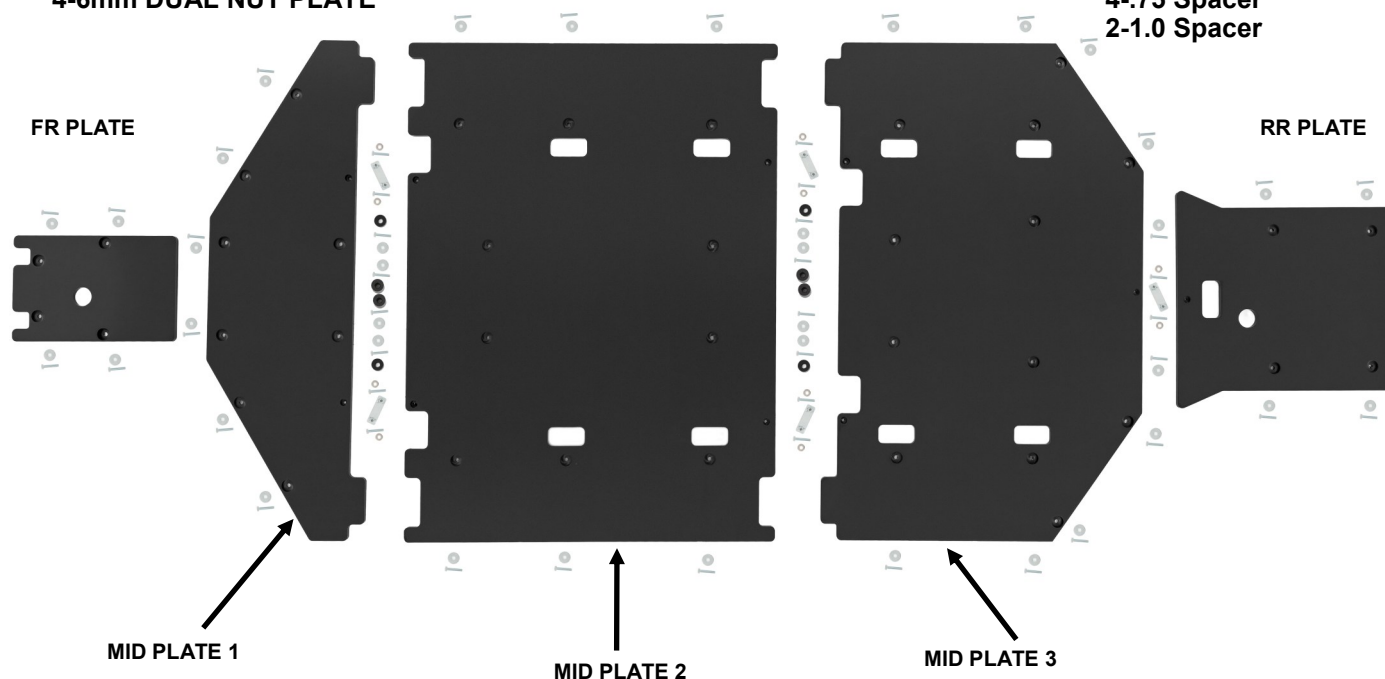


Torque Specs:



Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTIONS



1. Lift vehicle and place on jack stands.
2. Remove factory skid plates and hardware and set aside.
3. Using a 10mm socket, attach the FR plate to frame using (4 ea.) 6mm x 35mm and .250 fender washers. **See Photo 1.**
4. Using a 10 mm socket, attach mid plate 1 to frame using (8 ea.) 6mm x 35mm and .250 fender washers. **See Photo 2.**

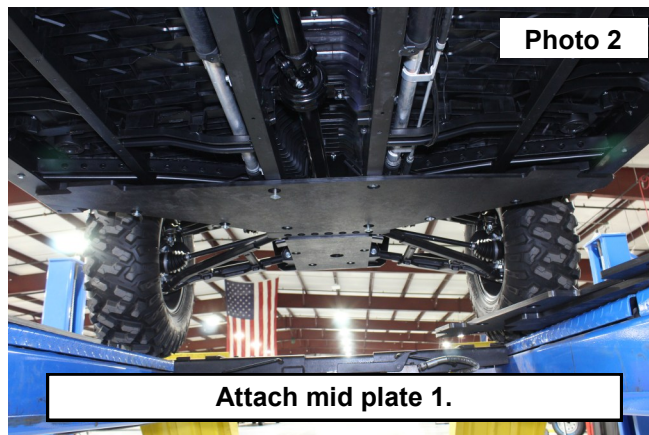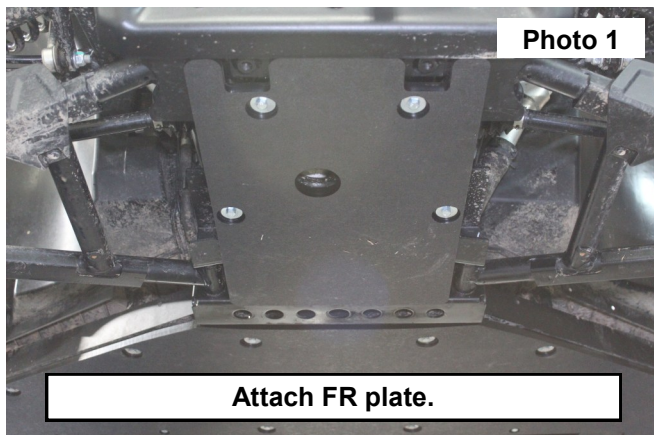



5. Using a 10mm socket, attach mid plate 2 to frame using (8 ea.) 6mm x 35mm and .250 fender washers. **NOTE: Use (2 ea.) 3/4 spacer and (2 ea.) 1" spacer and 6mm x 50mm bolts and .250 fender washers on marked holes. See Photo 3.**
6. Install (2) flag nuts and (4 ea.) 6mm x 35mm and .250 flat washers between mid plate 1 and mid plate 2 at marked locations. **See Photo 4.**

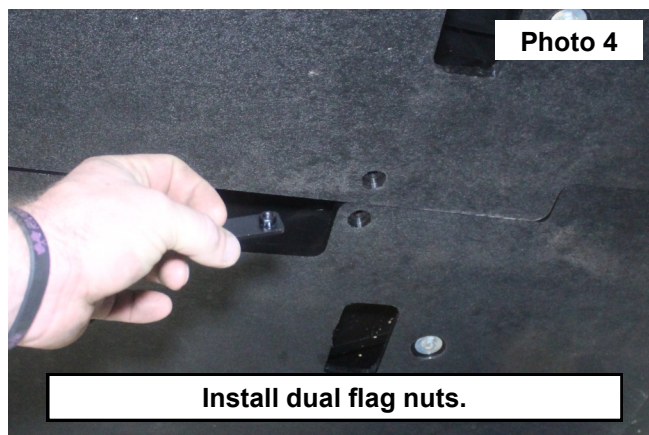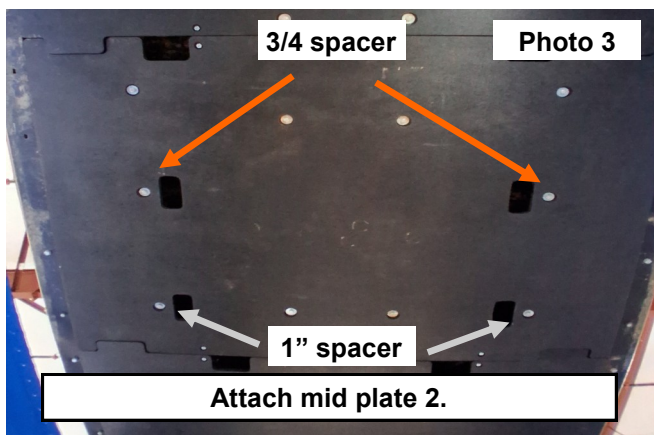

7. Using a 10mm socket, attach mid plate 3 to frame using (12 ea.) 6mm x 35mm and .250 fender washers. **Note: Install (2 ea.) 3/4 spacers and 1/2 spacers in marked locations. See Photo 5.**
8. Install (2) flag nuts and (4 ea.) 6mm x 35mm and .250 flat washers between mid plate 2 and mid plate 3 at marked locations. **See Photo 6.**

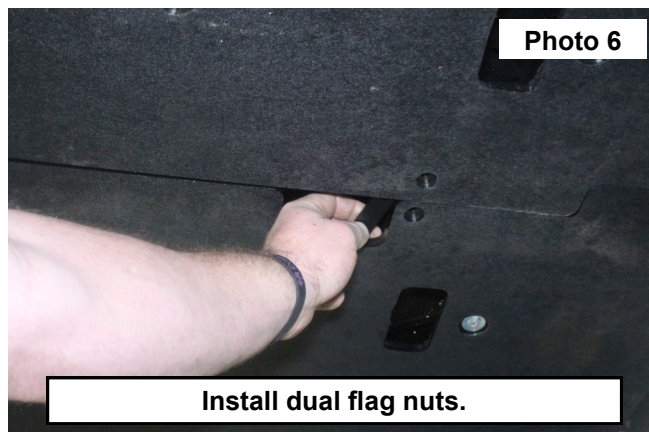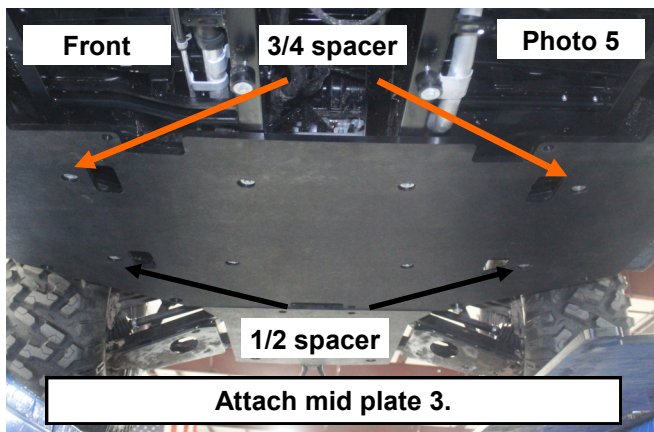

9. Using a 10mm socket, attach the RR plate to frame using (4 ea.) 6mm x 35mm and .250 fender washers. **See Photo 7.**
10. Install (1) flag nut and (2 ea.) 6mm x 35mm and .250 flat washers to RR plate and frame of vehicle. **See Photo 8.**

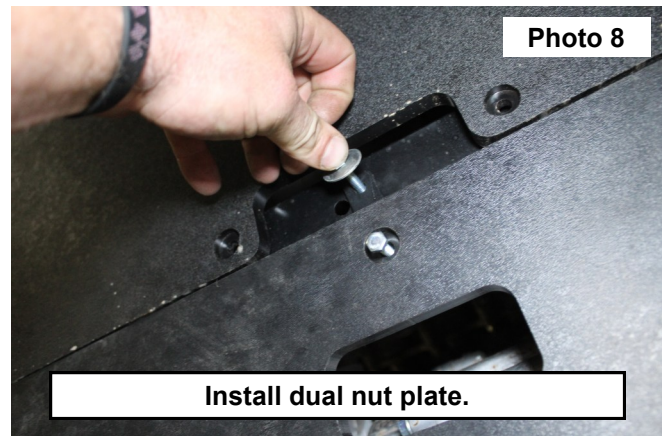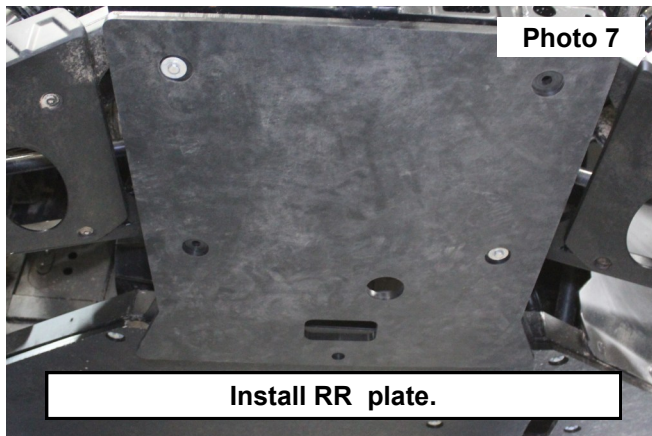

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

