

ROUGH COUNTRY

921971060

CAN-AM DEFENDER HD5,7,8,9,10 GAME LOADER

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If questions exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

KIT CONTENTS:

1-Winch Basket
2- Basket Mount Bracket
1-1000LB Winch

TOOLS NEEDED:

13mm Socket and Wrench

HARDWARE INCLUDED:

4-8mm x 20mm Hex Bolt
6-8mm x 25mm Hex Bolt
6-8mm Nylock Flange Nut
10-8mm Flat Washer





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs



INSTALLATION INSTRUCTIONS



1. Using (2 per side) 8mm x 20mm bolts and (2 per side) 8mm washers, loosely attach basket mount bracket to vehicle. **See Photos 1 and Photo 2.**

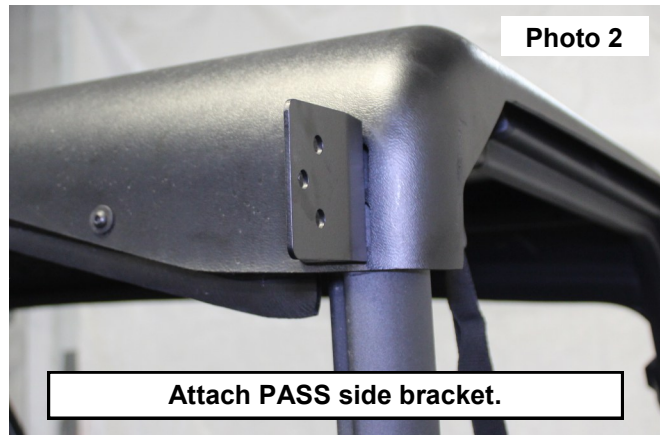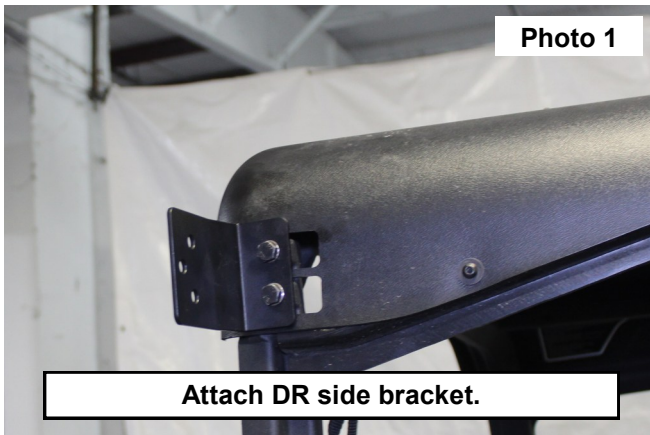



2. Place (2) fair lead bolts into the fair lead and insert into basket. **See Photo 3.**
3. Using a 13mm socket, tighten fair lead to basket. **See Photo 4.**



4. Attach winch to basket using provided manufacturer's instructions in winch box. **See Photo 5.**
5. Attach basket to DR and PASS mounting brackets using the supplied (6) 8mm x 25mm bolts, (6) 8mm flat washers, and (6) 8mm nylock flange nuts. Tighten using a 13mm socket and 13mm wrench. **See Photo 6 and Photo 7.**

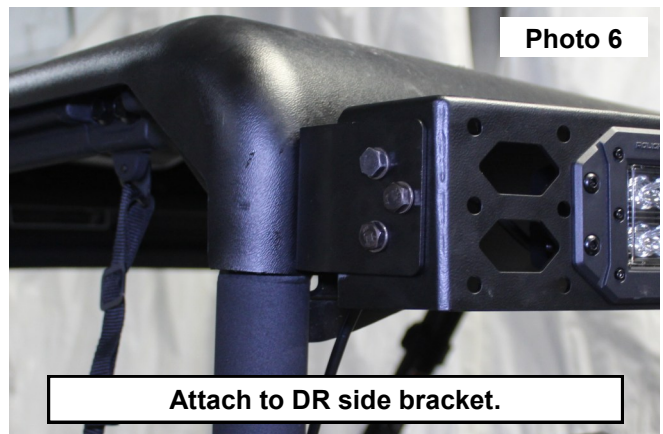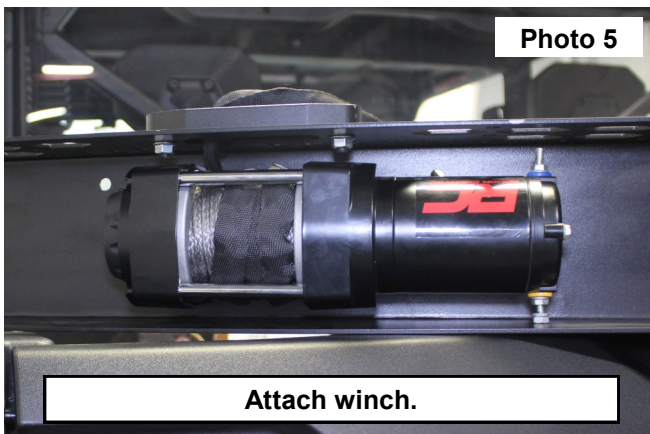

6. Tighten DR and PASS mounting brackets at this time, using a 13mm wrench. **See Photo 8.**
7. Run wires for winch according to manufacturer's instructions.

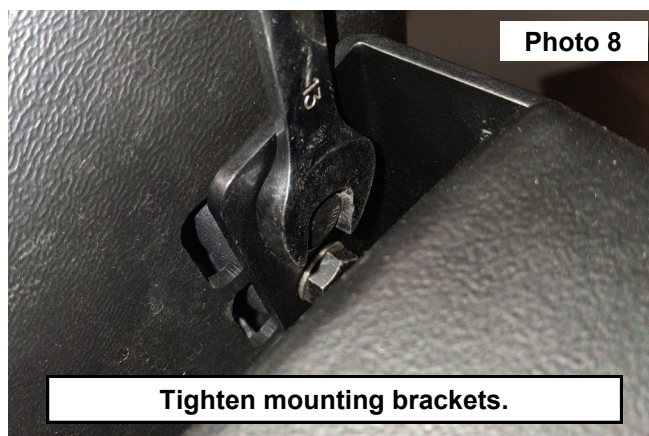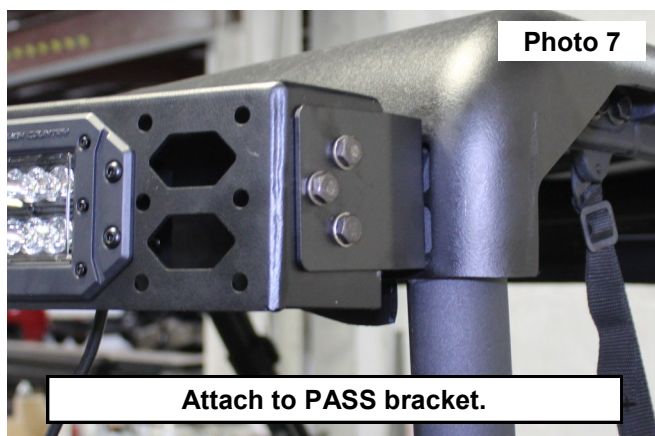

POST INSTALLATION INSTRUCTIONS

1. Check all fasteners for proper torque. Check to ensure for adequate clearance between all rotating, mobile, fixed, and heated members. Verify clearance between exhaust and brake lines, fuel lines, fuel tank, floorboards, and wiring harness.
2. Periodically check all hardware for tightness.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyer's responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

