



JEEP JK ALUMINUM LIGHT BRACKETS

Thank you for choosing Rough Country for all your suspension needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

KIT CONTENTS

8mm x 30 Socket Head Bolts (4)
1/4" x .750 Socket Head Bolts (4)
Rubber Gasket (2)
Dr and Pass Brackets (2 each)

TOOLS NEEDED



T-40 WRENCH
6mm ALLEN WRENCH
3/16" ALLEN WRENCH

INSTALLATION INSTRUCTIONS

1. Remove the factory hardware as shown **(Photo 1)** using a T-40 wrench.
2. Using the supplied 1/4" socket head bolts, attach the light mount to the base plate and tighten with a 3/16" allen wrench. **See Photo 2.**



2. Use the supplied rubber gasket between the aluminum base and windshield as shown in **Photo 3.**
3. Using the supplied 8mm socket head bolts tighten bracket to windshield using a 6mm Allen wrench. **See Photo 4.**

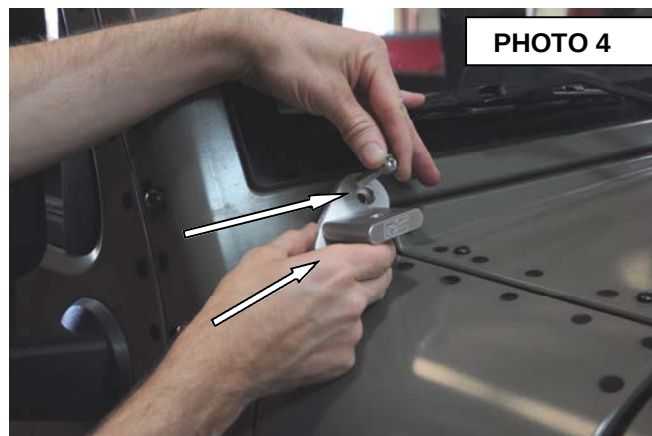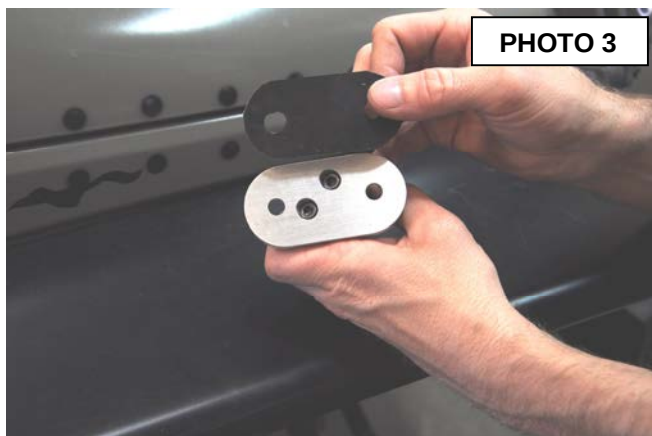

4. Repeat steps for other side of vehicle.
5. Make sure to check that all hardware is properly tightened and add lighting.

Thank You for choosing Rough Country for your off road needs!!!