

# ROUGH COUNTRY

ERBOX070911

## Toyota Tundra Crew Cab 2022 & Up POWER BOARD BOX KIT

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go. If question exist, please call us @ 1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.



### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

**RC**  
ROUGH COUNTRY


## INSTALLATION INSTRUCTIONS


### Mechanical PARTS LIST:

Qty	Item Description	Qty	Item Description
2	Running Boards	12	8-1.25x30mm Hex Bolts
1	Driver/Left Front Linkage Assembly	12	8mm Lock Washers
1	Passenger/Right Front Linkage Assembly	12	8mm x 24mm x 2mm Flat Washers
2	Rear Linkage Assembly	16	8-1.25x30mm Carriage Bolts
1	Electronic Materials Package	16	8mm Flanged Nylon Lock Nuts
2	Front Steel Mounting Bracket	16	6mm Nylon Lock Nuts
2	Rear Steel Mounting Bracket	16	6mm x 16mm x 1.6mm Flat Washers
8	C-Shims	16	6-1.0x20mm Carriage Bolts

### Electronic Materials Package PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Main Harness	1	ECU
4	Magnetic Switches	4	LED lights
1	LED Y-Harness (280mm)	1	LED Y-Harness (1200mm)
4	Magnets and Adhesive Prep Kit	15	Zip Ties

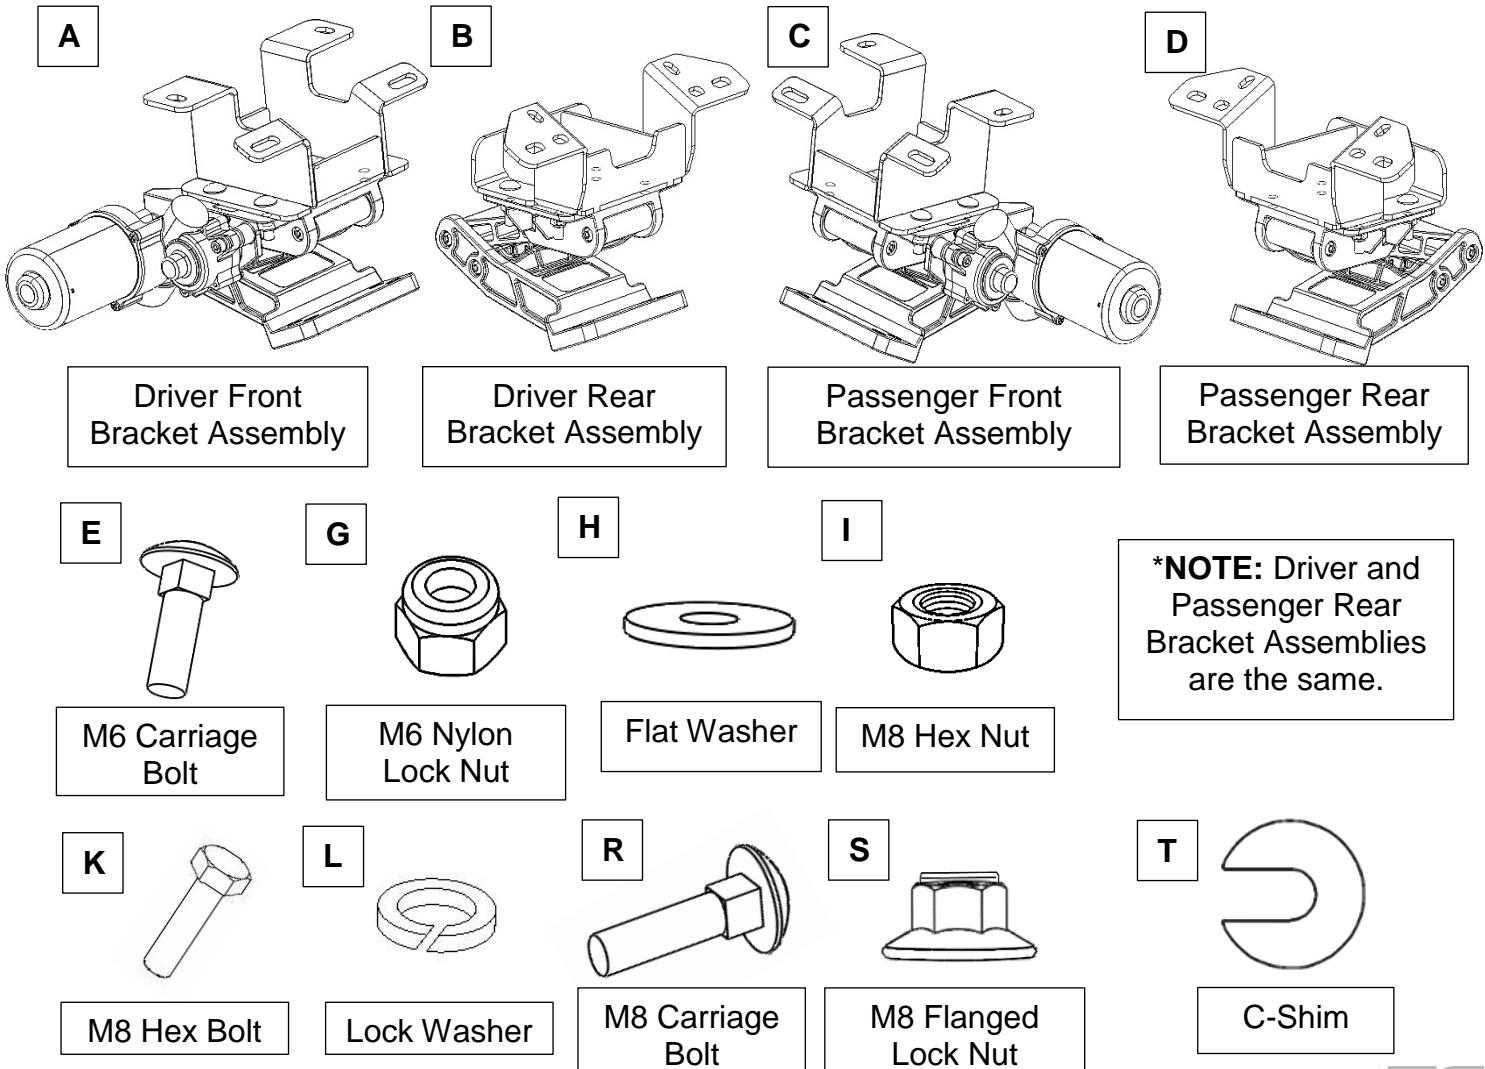


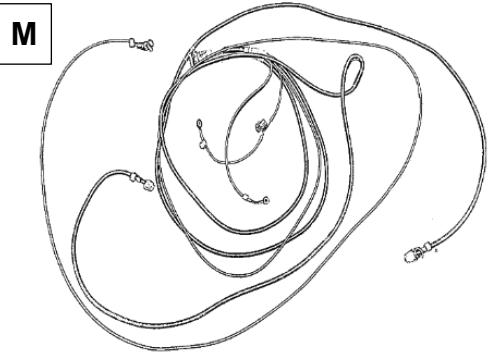


Main Harness




LED Y-Harness (1200mm)

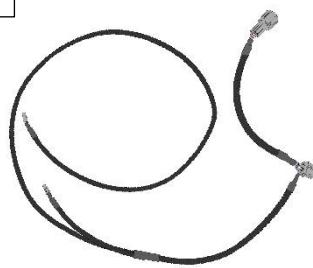


LED Y-Harness (280mm)

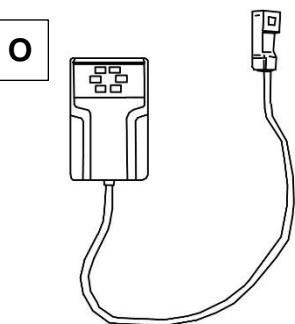

Magnetic Switches

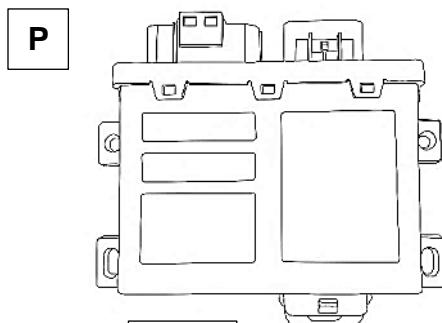


ECU

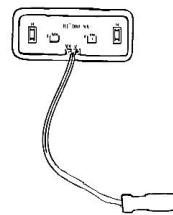

LED Lights

### TOOLS REQUIRED

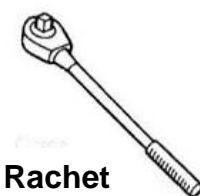

Ratchet



Socket


8mm  
10mm  
13mm



Extensions




Wrenches



Electrical Tape

1


Locate Driver Side front mounting points on the rocker panel under the front door. Remove the OE bolts before mounting the front bracket. Do the same for the rear mounting points.

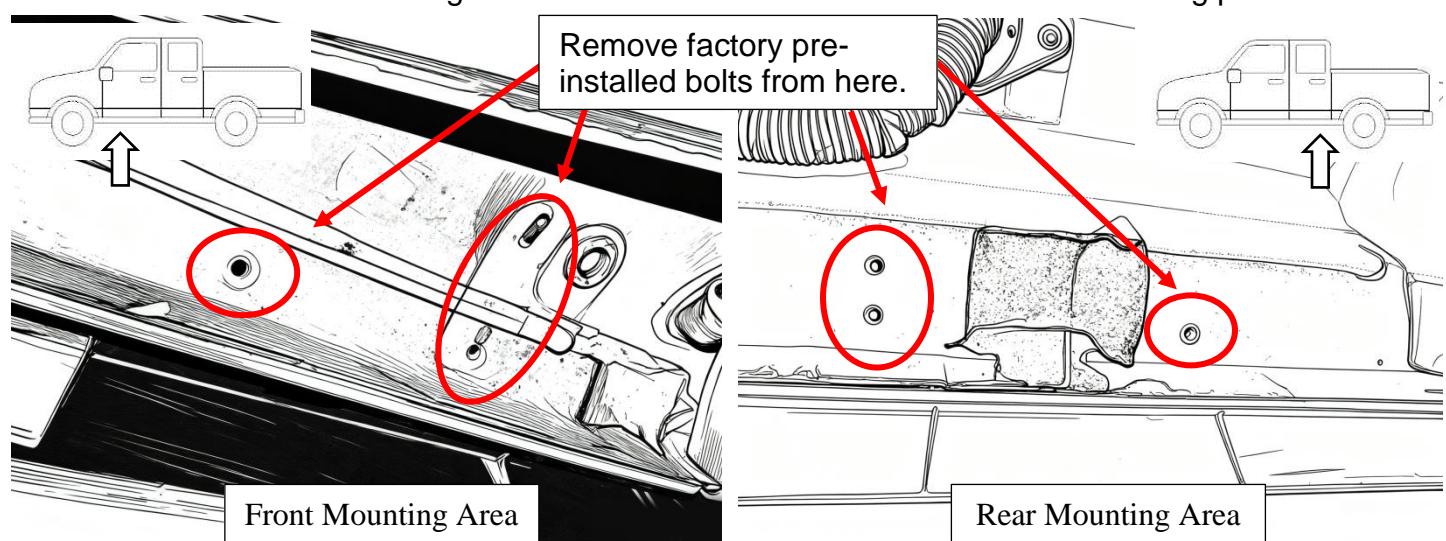

2





Take the mounting brackets and attach them to the linkage arms. First, insert the M8 Carriage Bolts into the square slots on the brackets so that the threads are pointing downwards.

Insert M8 Carriage Bolts downwards.

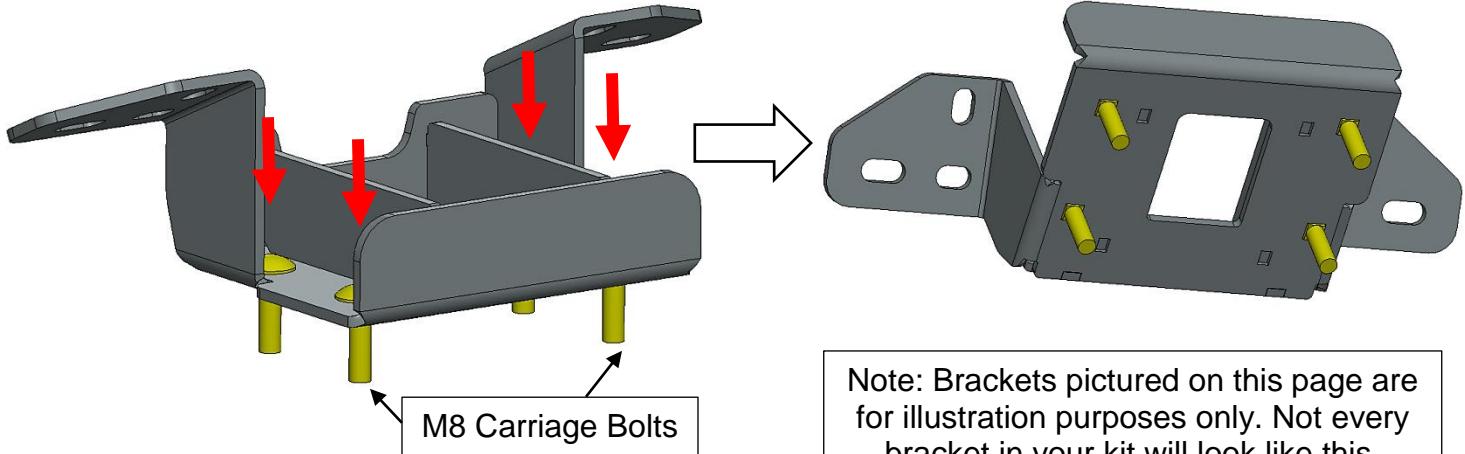


Note: Brackets pictured on this page are for illustration purposes only. Not every bracket in your kit will look like this.

Next, use the M8 Flanged Nylon Lock Nuts to fasten the aluminum linkage arms to the brackets. There are 4 fastening points on each bracket.

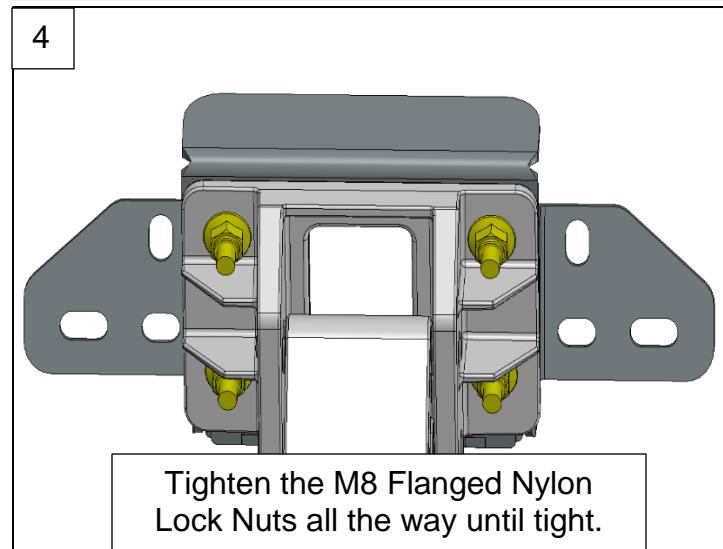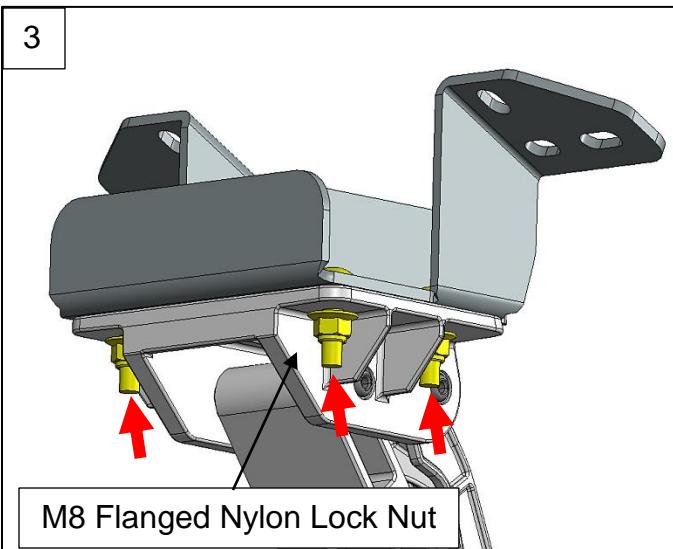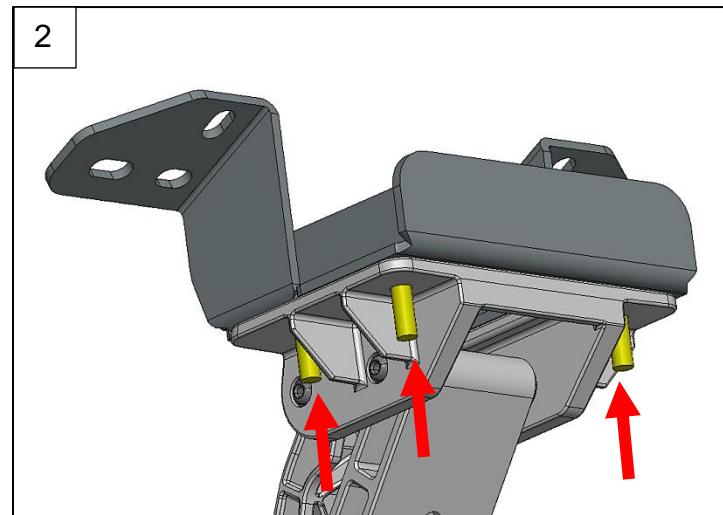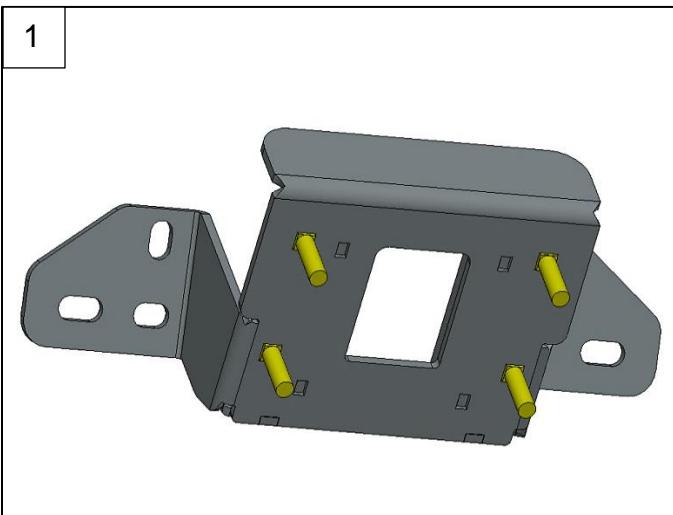


3

Next, line up front mounting bracket slots to the threaded inserts and place Driver Side/Left Front Bracket Assembly (A) onto rocker panel. Then fasten Hex Bolts (H), Lock Washers (I), and Flat washers (G). Do not tighten all the way yet.

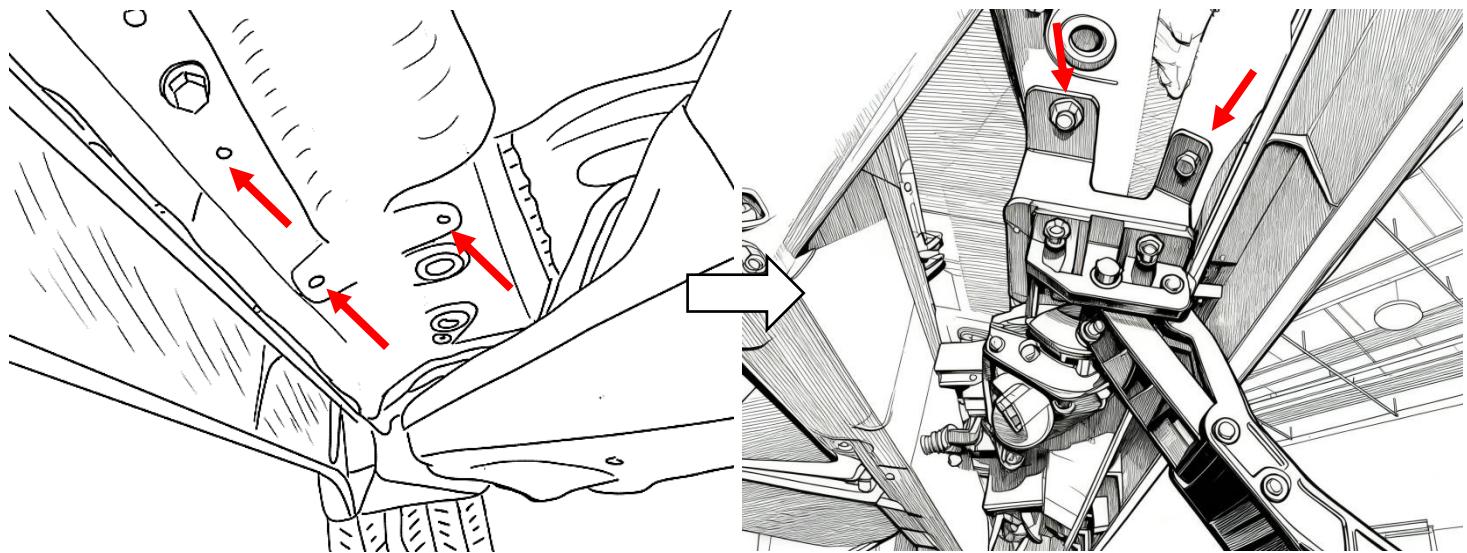

4

Locate rear mounting points. Next, line up rear mounting bracket slots to the threaded inserts and place Driver Side/Left Rear Bracket Assembly (B) onto rocker panel. Then fasten Hex Bolts (H), Lock Washers (I), and Flat washers (G). Do not tighten all the way yet.

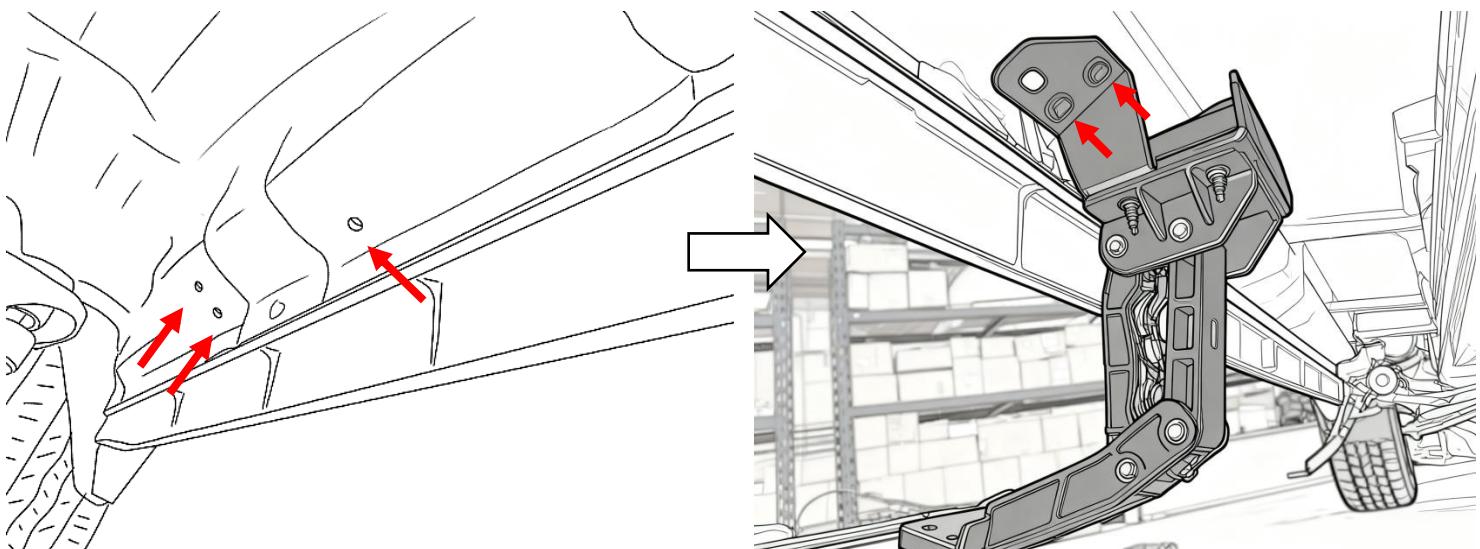


NOTE: Use the C-Shims in the kit and place them between the bracket and vehicle body to help better align the front and rear bracket assemblies.

5


Repeat steps 3 – 4 for the Passenger Side.

From here on, the electrical routing steps will begin.

In general, the routing of the wires will follow the basis of the graphic below. The legs of the Main Harness labeled "Passenger Side" will route towards the Passenger Side of the vehicle, and the legs labeled "Driver Side" will route towards the Driver Side of the vehicle.


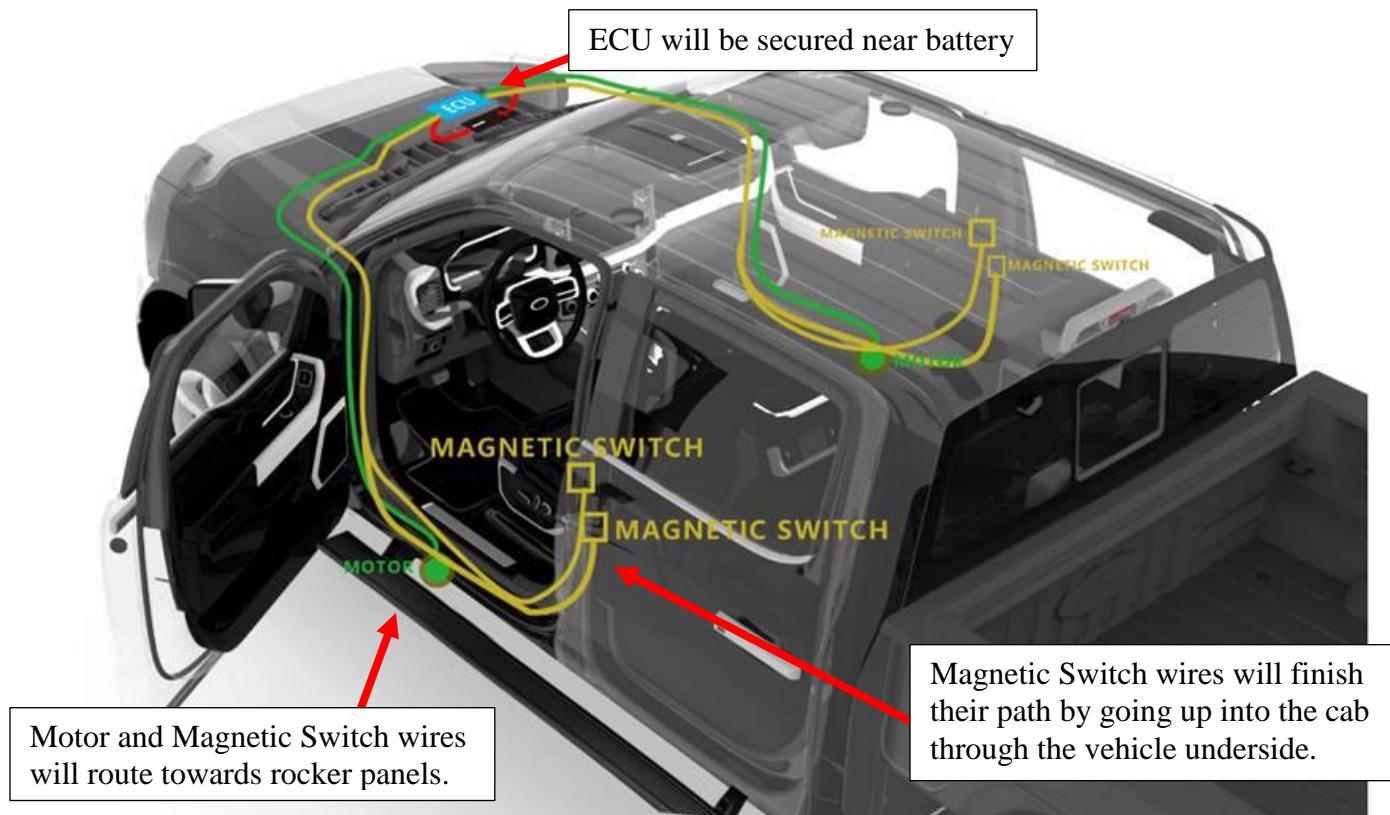


The main idea is to route the wires from the battery to the appropriate side, and from there, to route the signal wires for the magnetic switches up through the floor of the vehicle and into the cab. Use the general diagram below as reference while routing the wires:

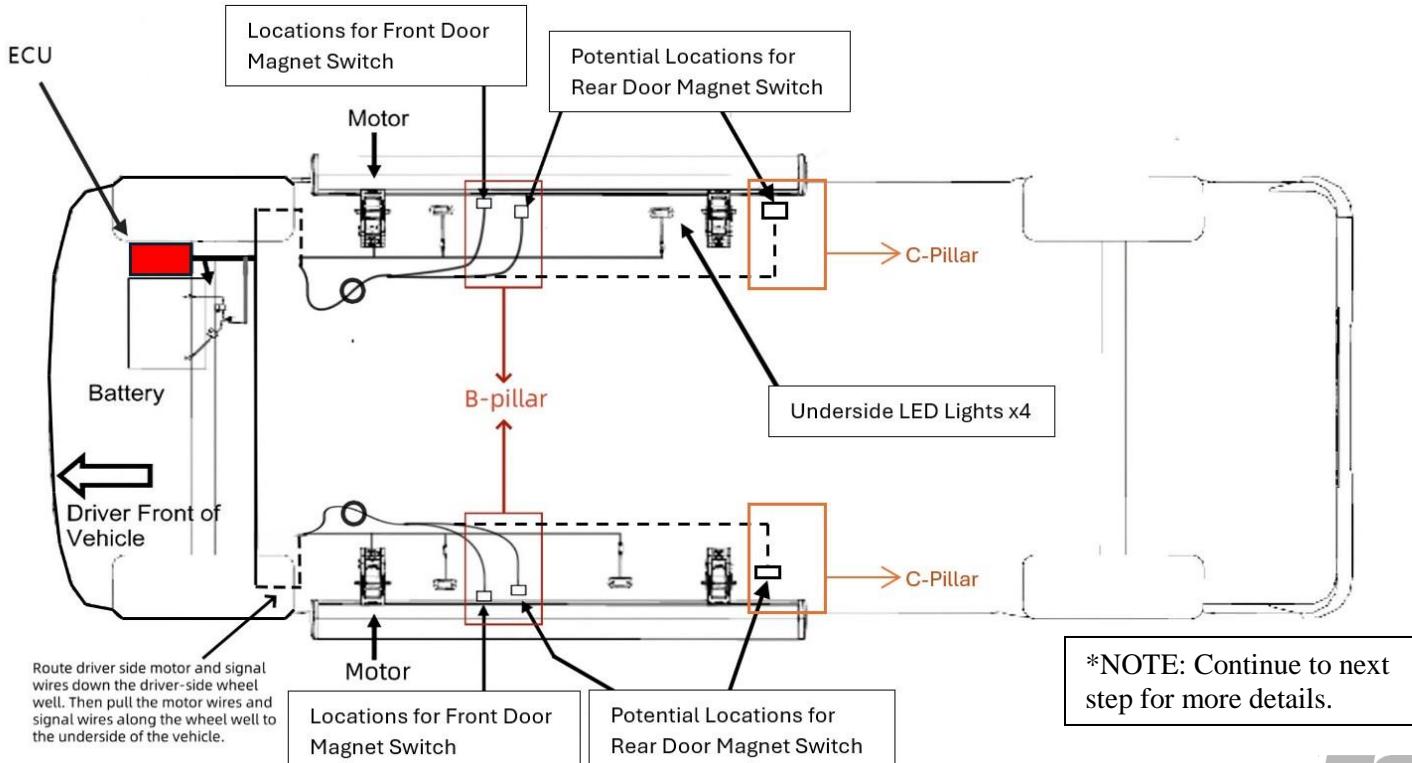

7

Start from the engine compartment by opening the front hood of the vehicle. Locate the Battery and its terminals (positive/negative). Remove the 25A fuse from the fuse box that comes with the main harness (M).

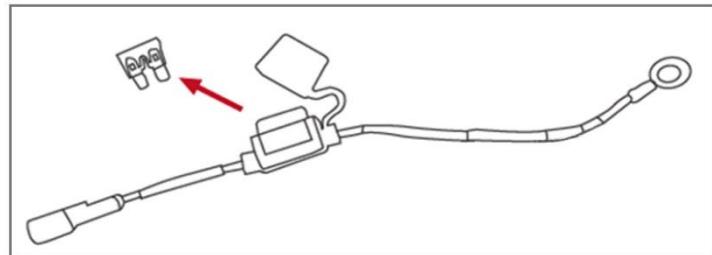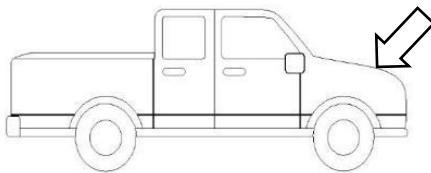

**\*WARNING:** Keeping the fuse connected to the fuse box may result in electrical sparks and risk of shorting when working with the battery.


Open fuse holder cap and remove fuse

8

Connect the positive power lead on the main harness (J) to the positive battery terminal. Connect the negative lead to the negative battery terminal. Make sure both power leads are fully secured. Connect the ECU (M) to the main harness.

Connect the Long LED Y-Harness (K1) to the Driver-side branch of the main harness.

Connect the Short LED Y-Harness (K2) to the Passenger-side branch of the main harness.

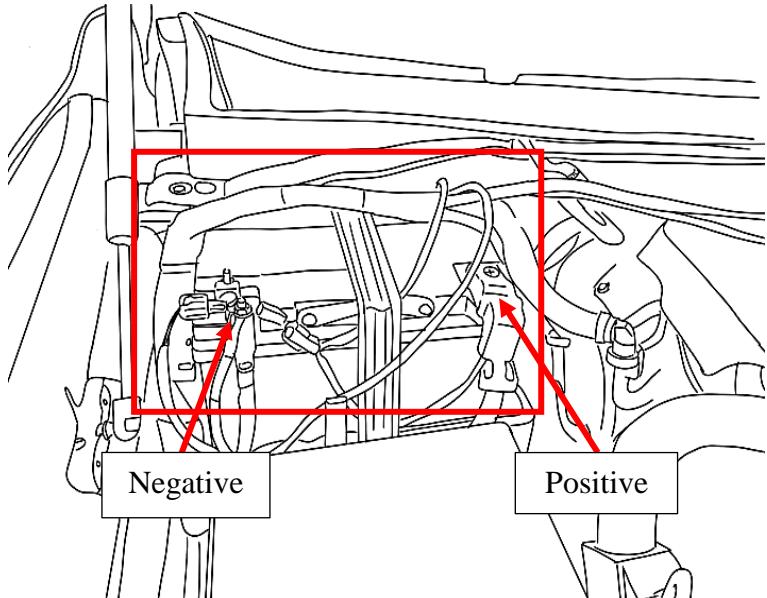


If the vehicle is a non-Hybrid model, **follow Step 9A**. If the vehicle is a Hybrid model, **follow Step 9B instead (next page)**.

9A

Route the main harness (J) around the battery, up along the rear of the engine compartment. The longer Driver-side branch of the main harness must route down the backside, against the


fire wall, and down past the steering column towards the vehicle frame. **Be sure to avoid contact with the steering column.**

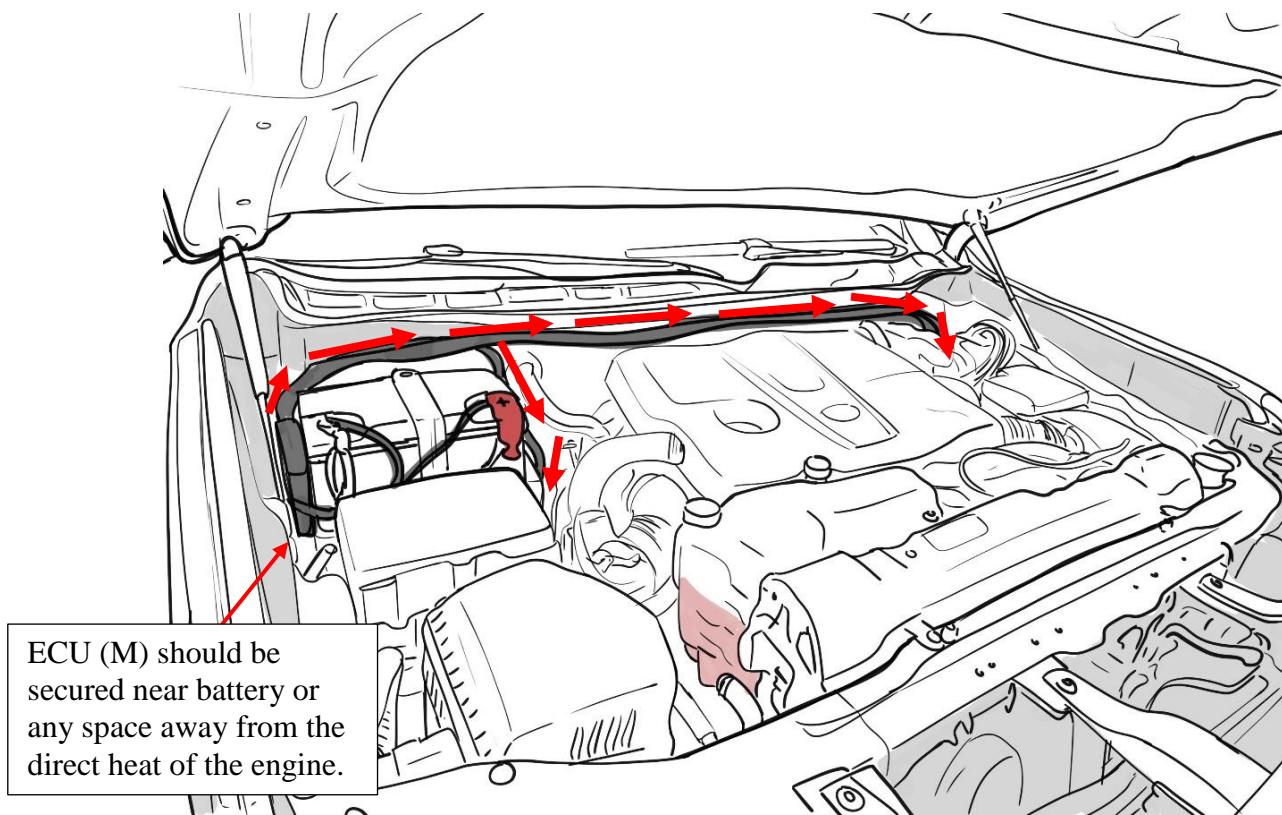


Route the shorter (marked "Passenger-side") leg of the harness down the Passenger-side wheel well. **Be sure to avoid contact with any moving or hot engine components.** Attach and secure the main harness (J) with supplied cable ties. **Be sure the harness avoids contact with the suspension and steering column.**

## 9B

On Hybrid models, the battery is not located in the traditional location in the engine bay. Instead, locate the battery under the Driver Side Rear Seat. Lift the rear seat to unveil the enclosed battery space and find the positive and negative battery terminals. Connect the power leads on the Main Harness (J) to the battery terminals.

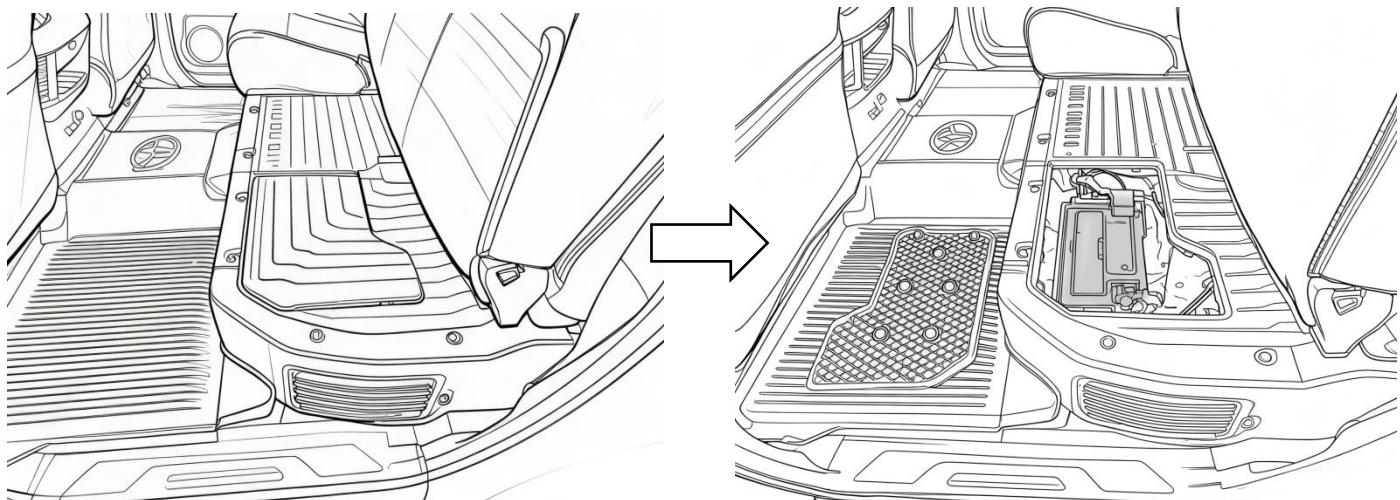

Route the main harness (J) around the battery and along the inside of the cabin. Find a good spot to hide the ECU. The Driver-side branch of the main harness must route down to the outside of the cabin to the Driver-side motor, on the underside. Connect the Short LED Y-harness too. **Be sure to avoid contact with the steering column and hot exhaust pipes.**

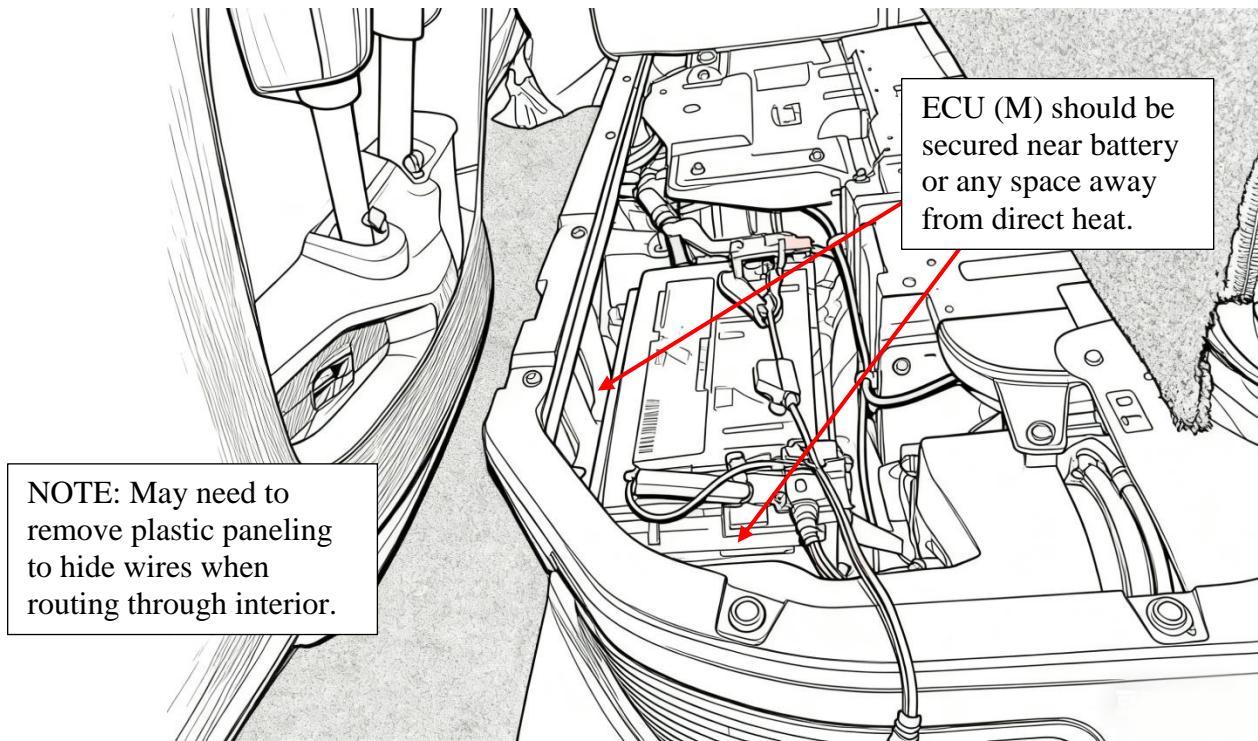


Connect the Long LED Y-harness and route the branch marked "Passenger-side" of the harness to the Passenger Side underside. **Be sure to avoid contact with any moving or hot engine components.** *It may be advisable to route along the inside of the cabin, under the carpet.* Attach and secure the main harness (J) with supplied cable ties.

**Be sure the harness avoids contact with the suspension, or any moving parts.**

## 10






On the underside of the driver side, locate and remove the floor grommet in the floor panel behind the front wheel well. The grommet will be close to the front linkage arm. Poke a hole through the grommet and thread the two signal wires through and up into the vehicle cabin.

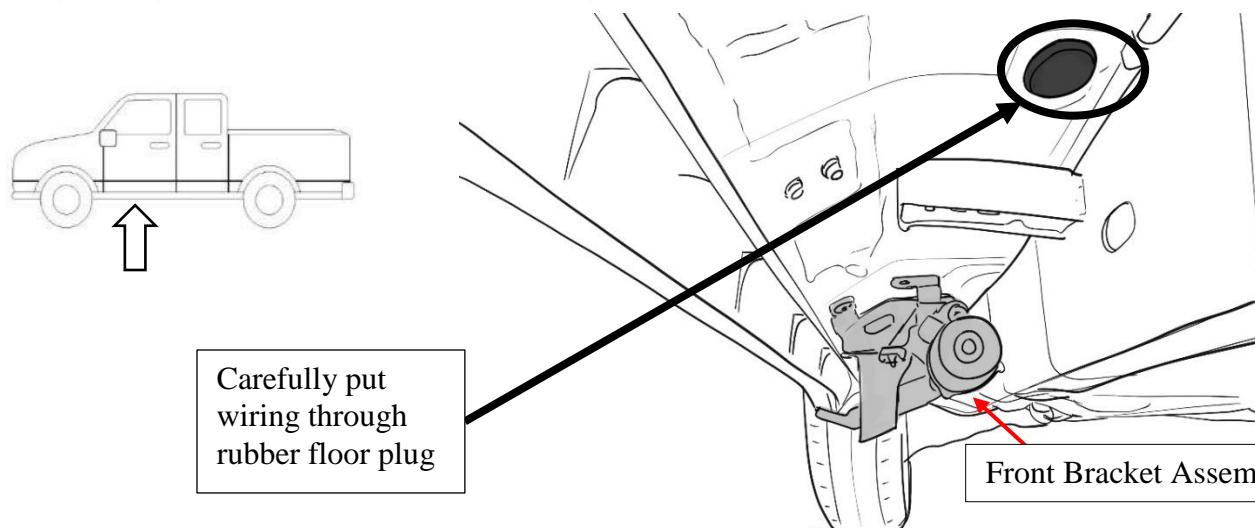

11




POWERSTEP BOARD MOUNT KIT  
22+ TOYOTA TUNDRA (Incl. Hybrid/HEV)

Inside the vehicle cabin, remove the driver-side front kick panel and bottom door sill plate. Peel back the carpet to access the hole where the grommet was removed. Feed the wires through.

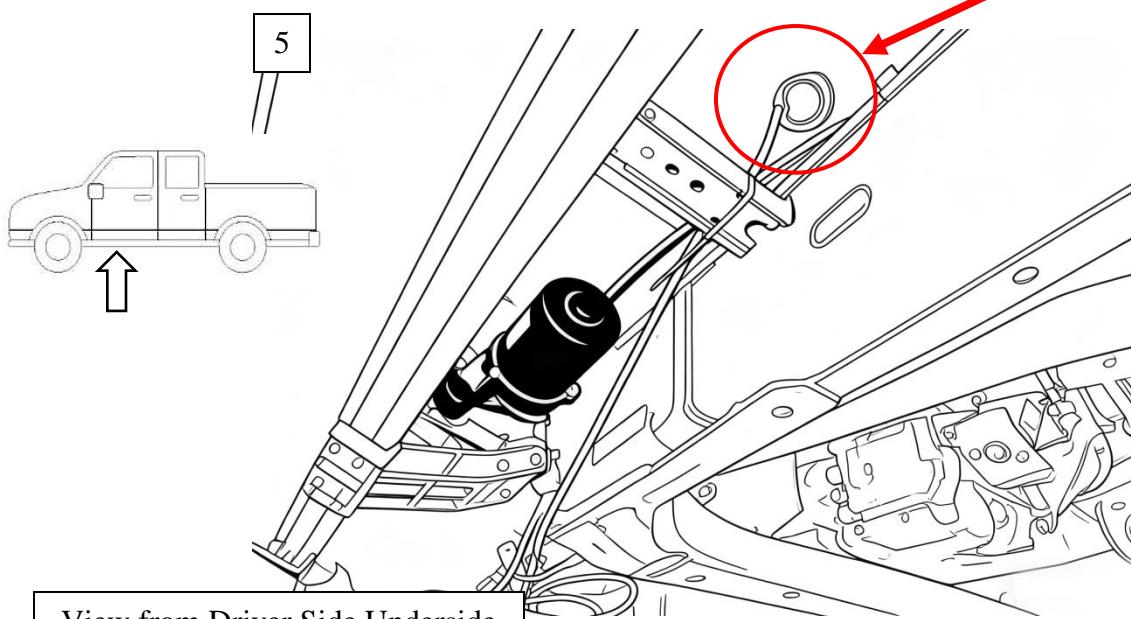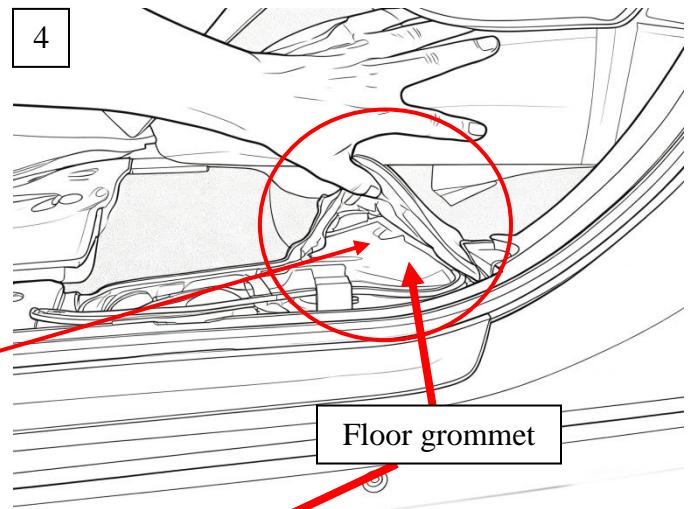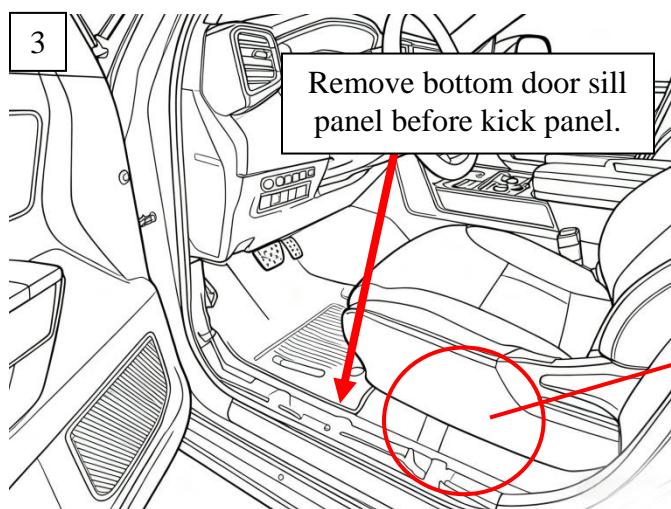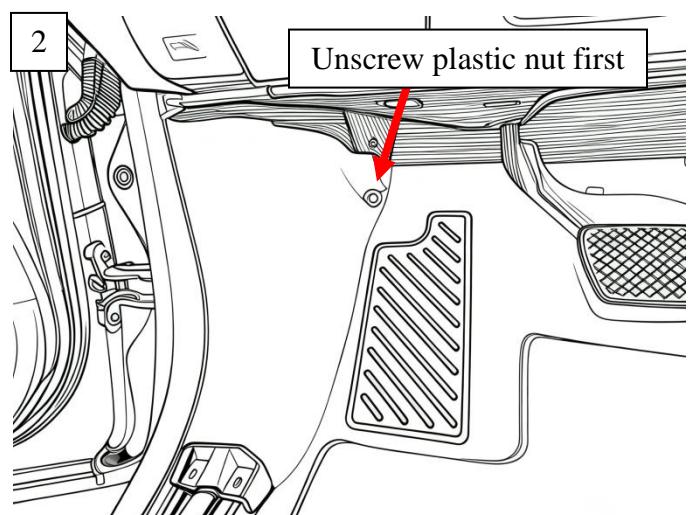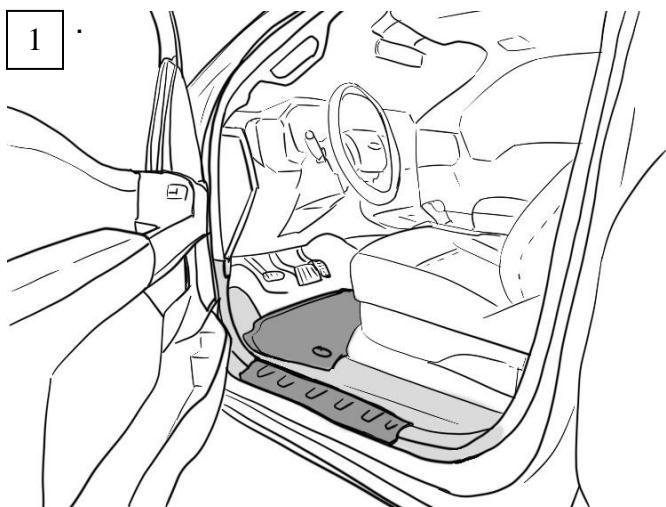


View from Driver Side Underside

Starting on the front door, take the shorter signal wire and route it up through the underplating and weather seal of the panels up to where the door latch striker is.

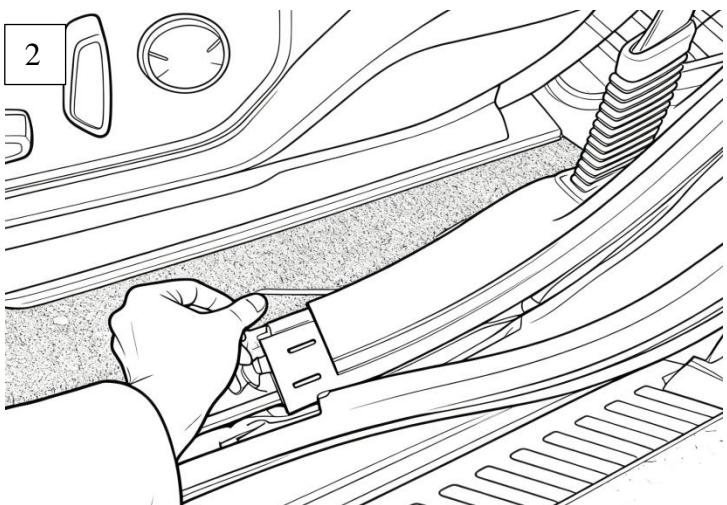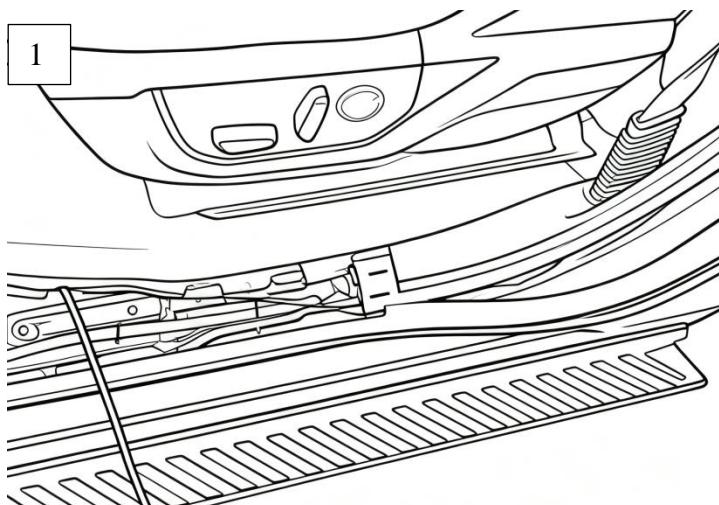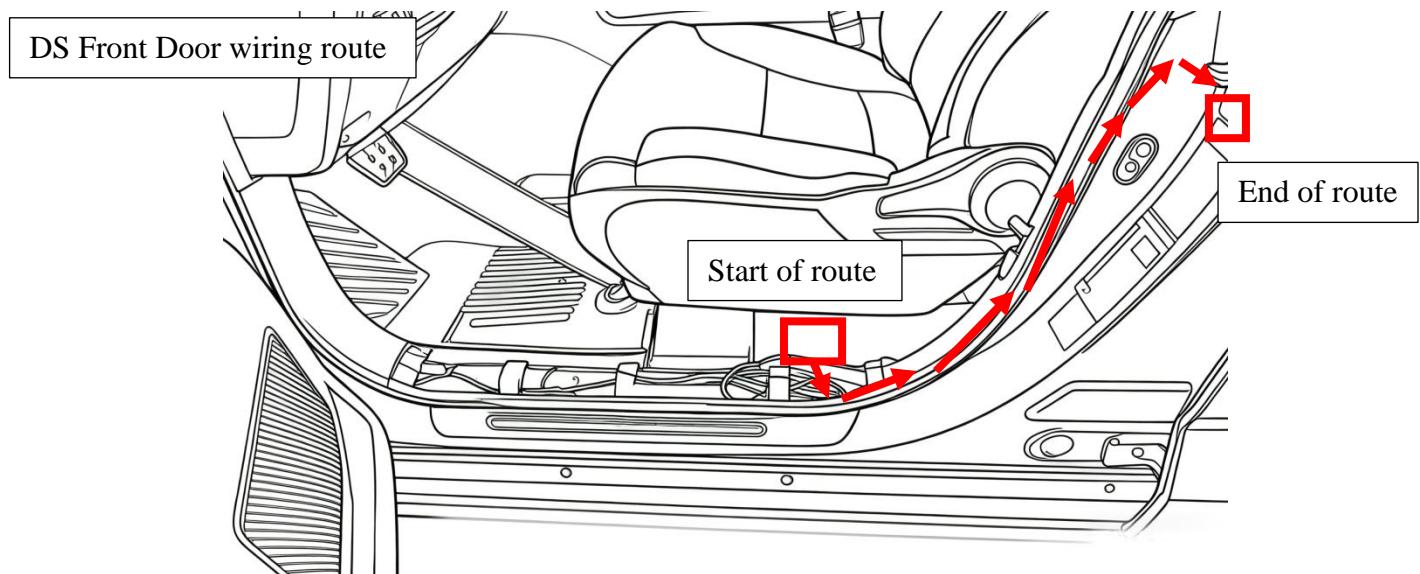


Insert the wire into the revealed spaces underneath

It is recommended to go under the plastic paneling.

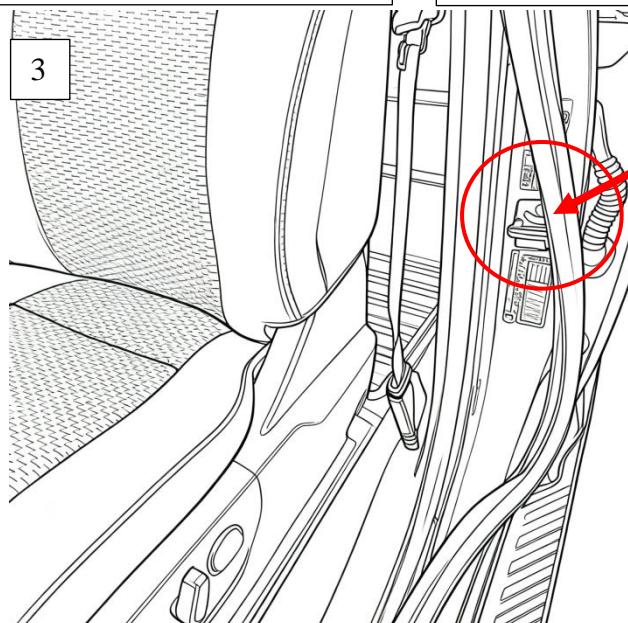


Peel away the weather seal as necessary to reach the door latch striker.

After routing the signal wire near the striker, attach the magnetic switch to the B-pillar just above or below the striker. Be sure to clean the area using alcohol wipes and a clean cloth to ensure maximum adhesion to the surface. Then connect the signal wire plug to the magnetic switch plug.

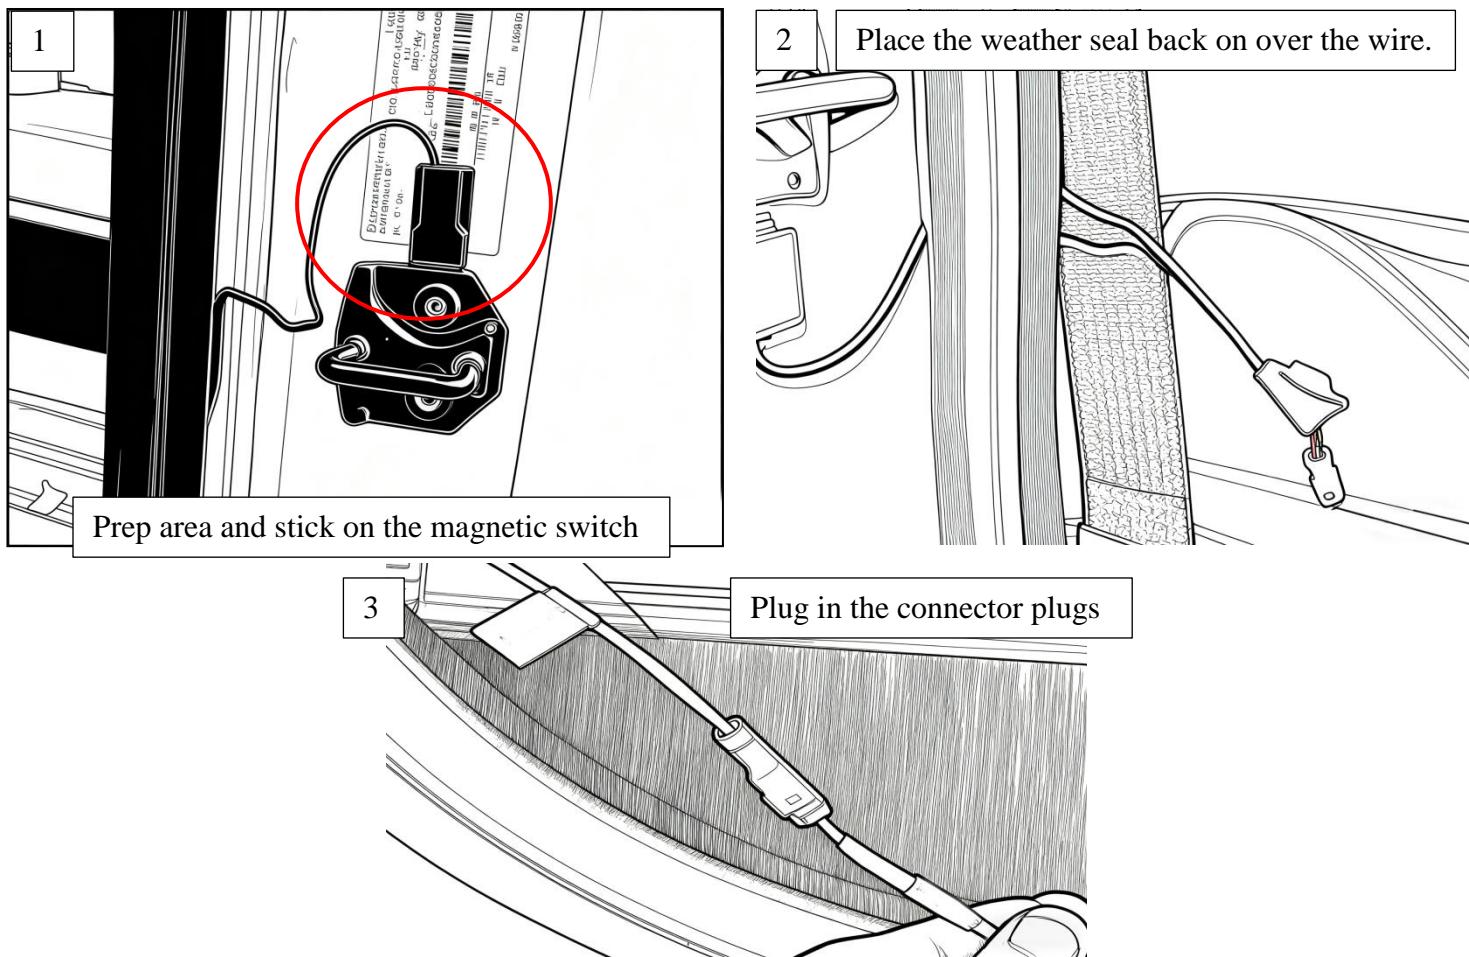


Then, take a magnet and place a provided 3M adhesive patch on one side. Take the newly prepped magnet and line it up with the magnetic switch on the door side. When closing the door, the magnet needs to align with the rectangular emboss of the magnetic switch to properly activate. Attach this magnet to the corresponding position.

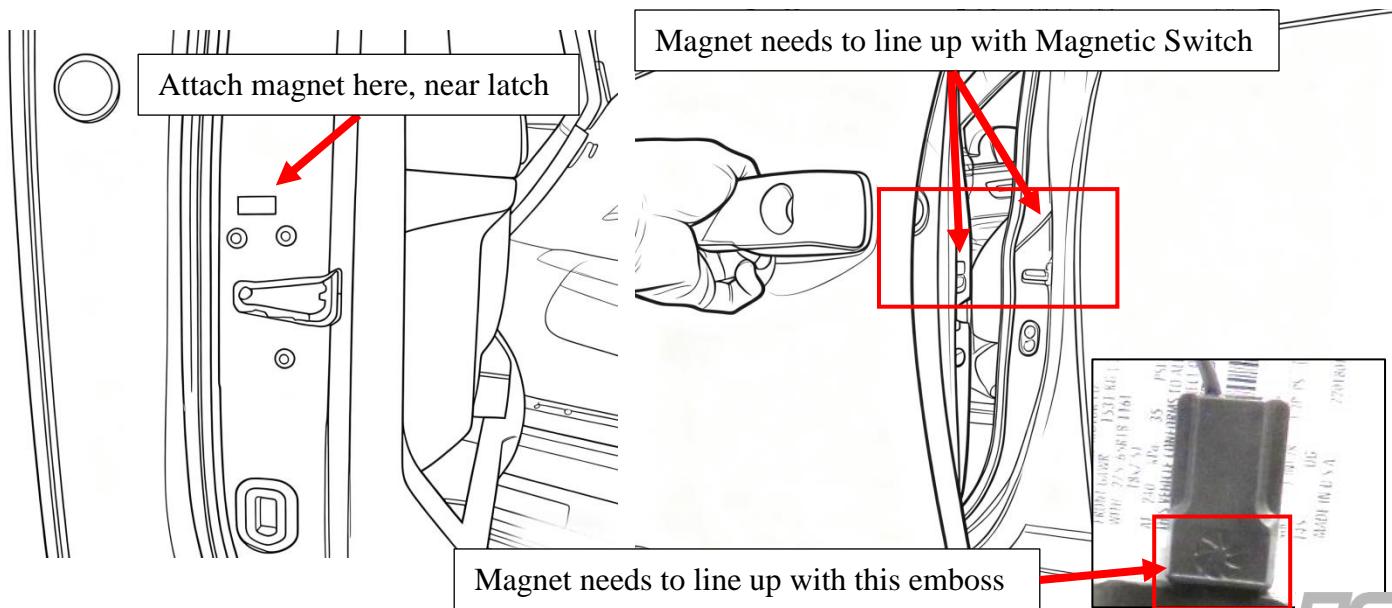


Next, do the same procedure to the Driver-Side rear door too.

Route the longer signal wire following this path. Be sure to give enough length and slack to the wire to reach the door striker while hiding the wiring under the plastic panels.

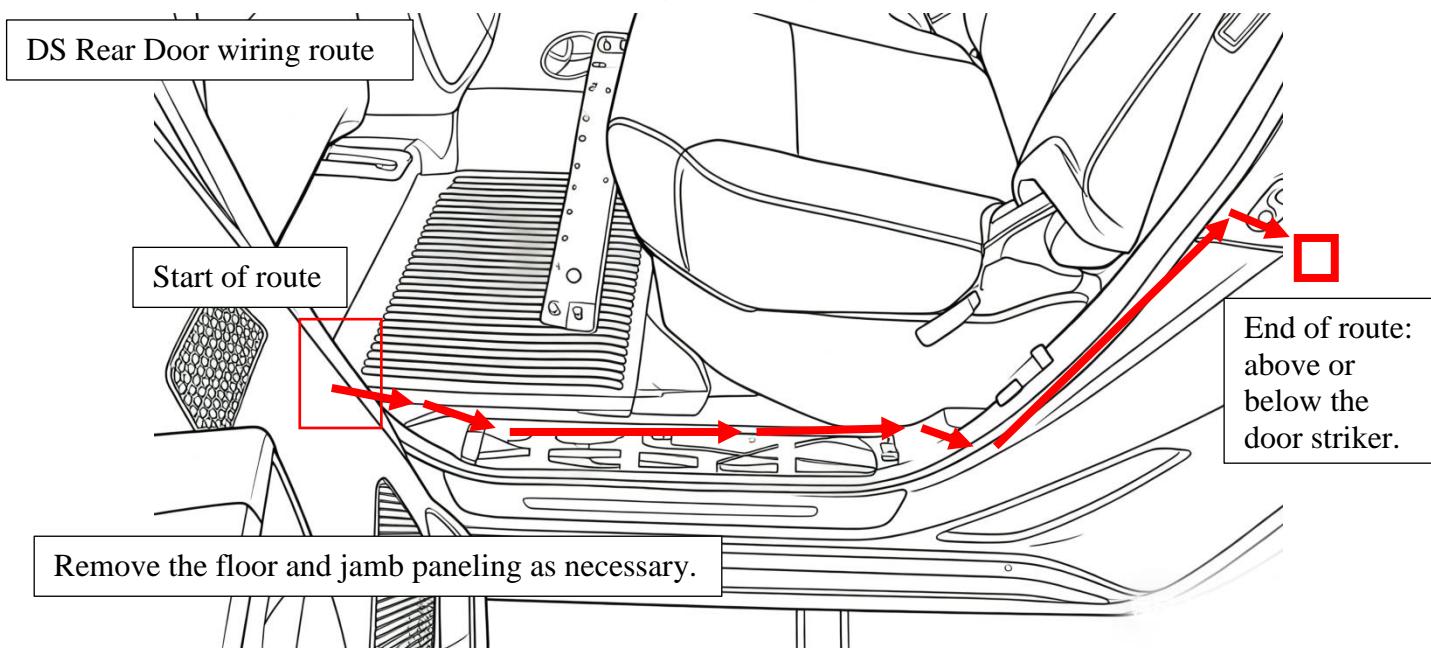

To effectively route the wire while hiding it, it is advisable to remove some of the interior plastic paneling around the B-Pillar and C-Pillar. See pictures below for reference:

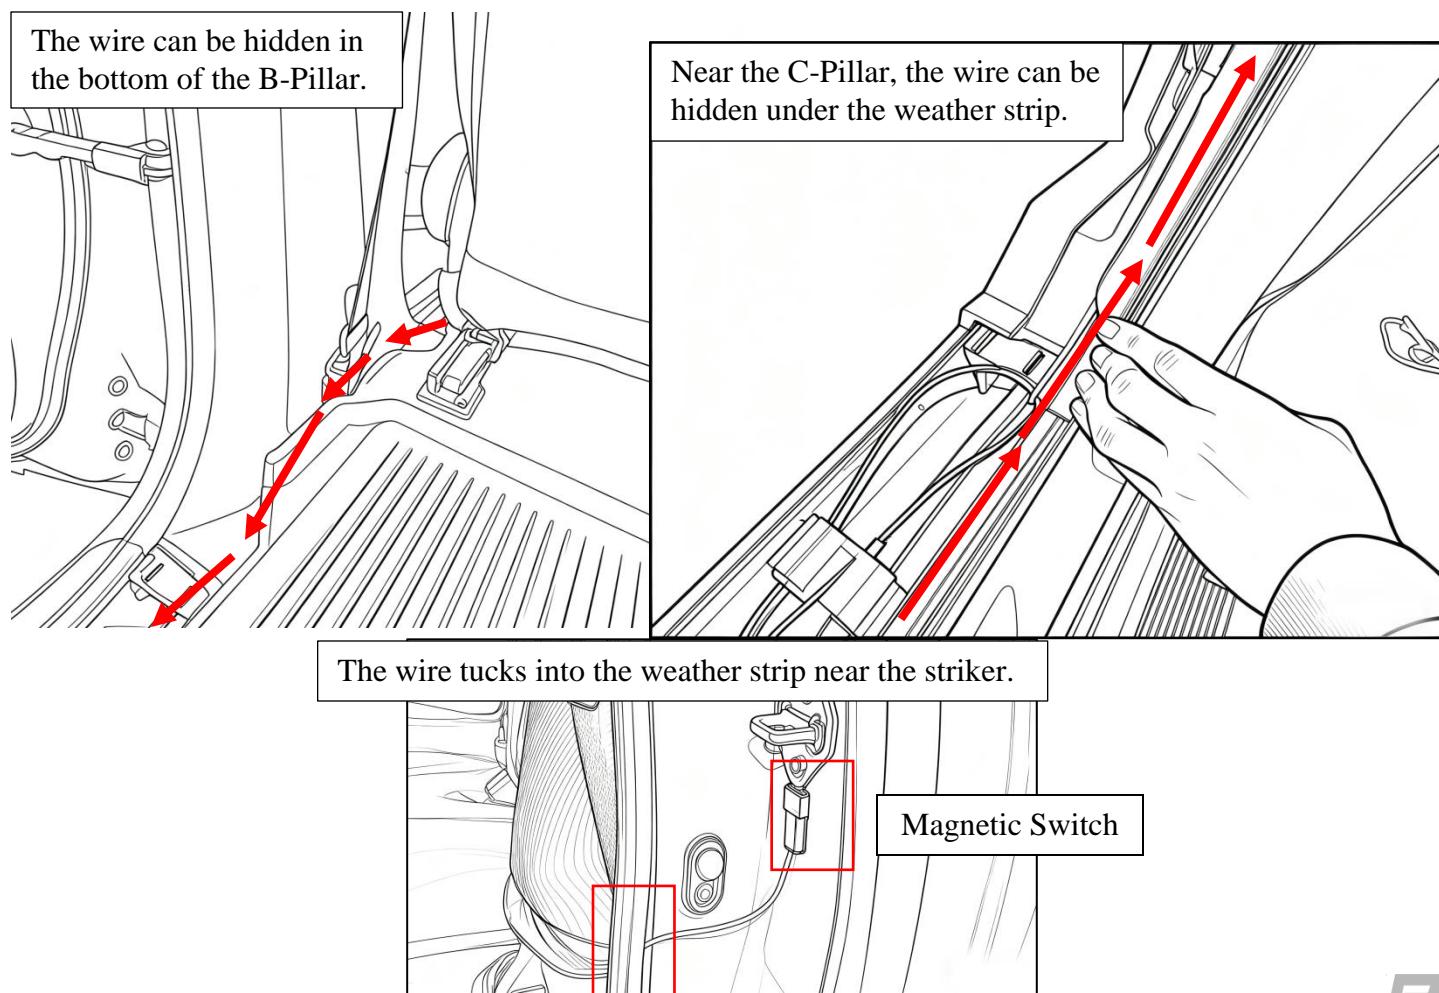


**13**

POWERSTEP BOARD MOUNT KIT  
22+ TOYOTA TUNDRA (Incl. Hybrid/HEV)


Next, follow the same procedure in steps 10 and 12 for the Passenger Side too.

For the Passenger Side, the rubber floor grommet will instead usually have an OE conduit and wire protruding from it. Please see the pictures below for reference:

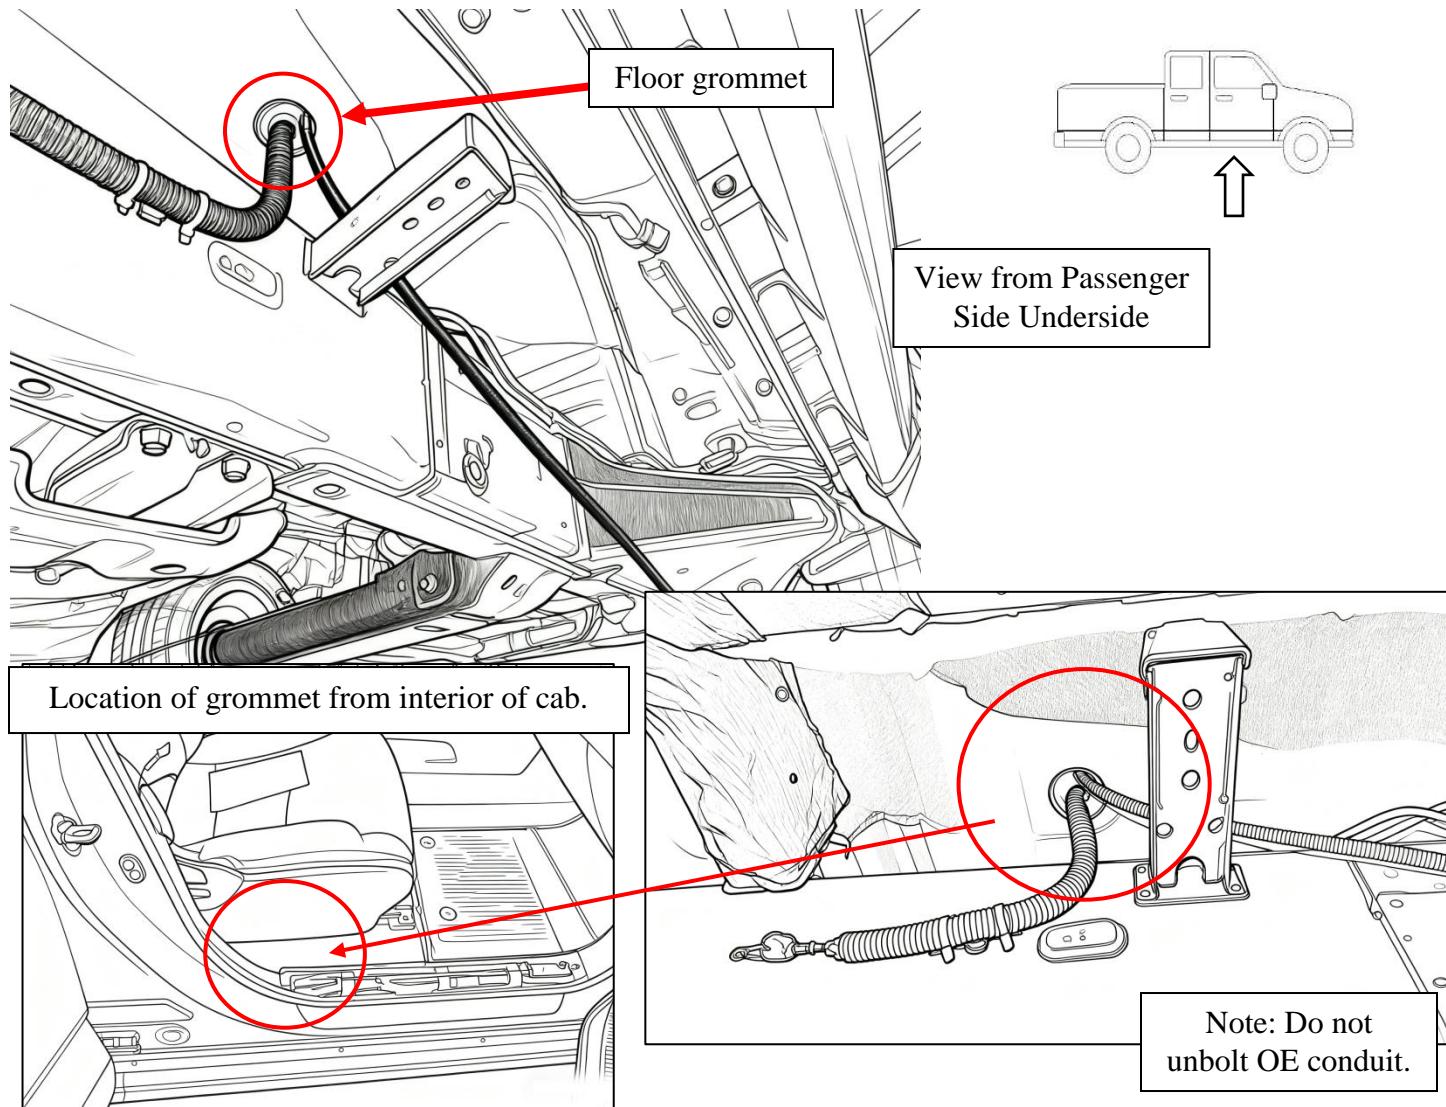**14**



Attach the main harness (M) to the LED Y-Harness (N). Then attach the LED Y-Harness (N) to the motor on the Driver Side. Repeat for Passenger Side. The shorter LED Y-Harness should connect to the motor that is on the same side as the ECU.

Driver side

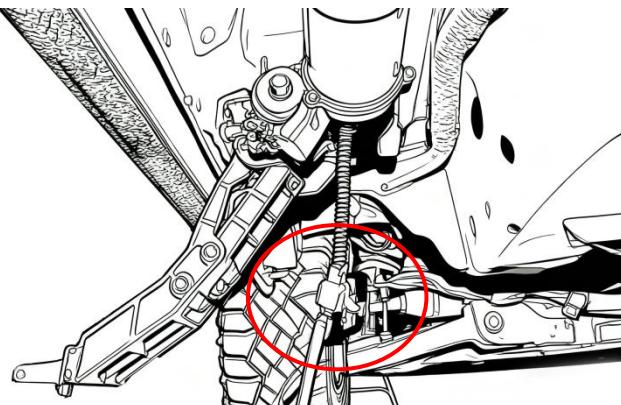


**15****POWERSTEP BOARD MOUNT KIT  
22+ TOYOTA TUNDRA (Incl. Hybrid/HEV)**

Plug in LED lights (Q) into LED Y-Harness (N) and attach them to the bottom of the rocker panel. Use provided 3M double sided adhesive tape on back of LED light (Q). Replace Fuse into Fuse Box.

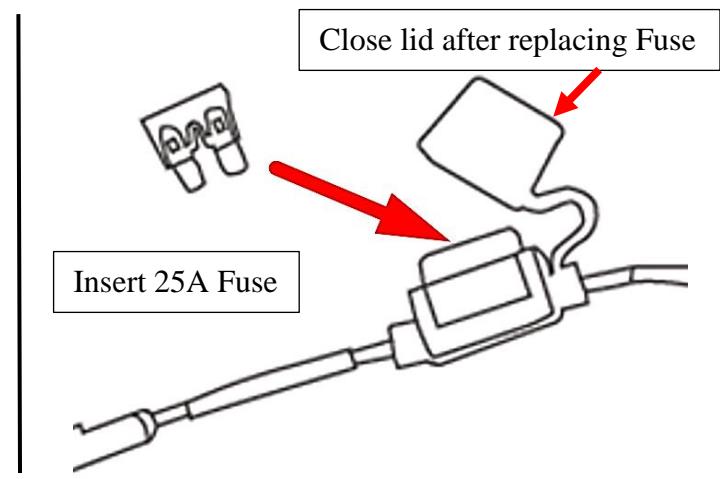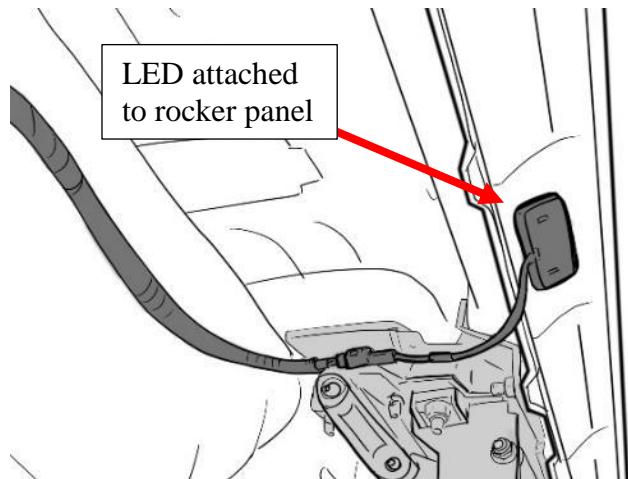**16**


Check to make sure the harnesses on the Driver Side/Left Front Bracket Assembly (A) and Passenger Side Front Bracket Assembly (C) are connected to the main harness (M) via the LED-Y harnesses (N).

\*NOTE: The linkage arms on the front bracket assemblies will not move unless both motors are connected.

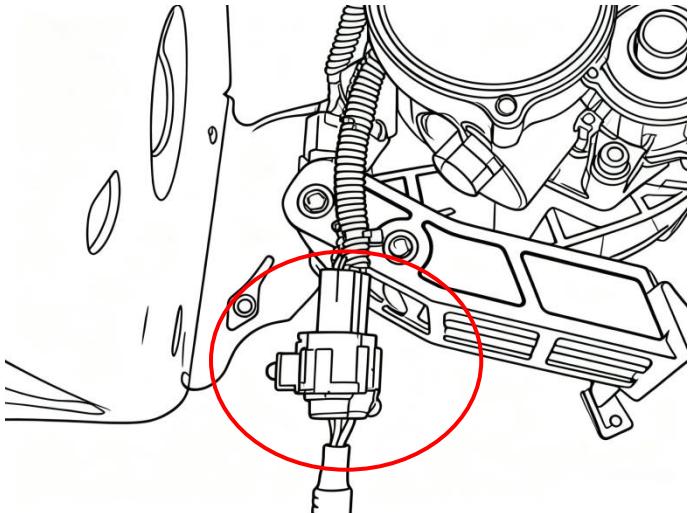
**17**

Seal the grommet with RTV Silicone Sealant.


Hide wires and reattach the kick panel with the carpet fully unfurled in its original position. Reattach the door sill panel and check to make sure there are no obstructions or potential snag points around the brake pedal area.

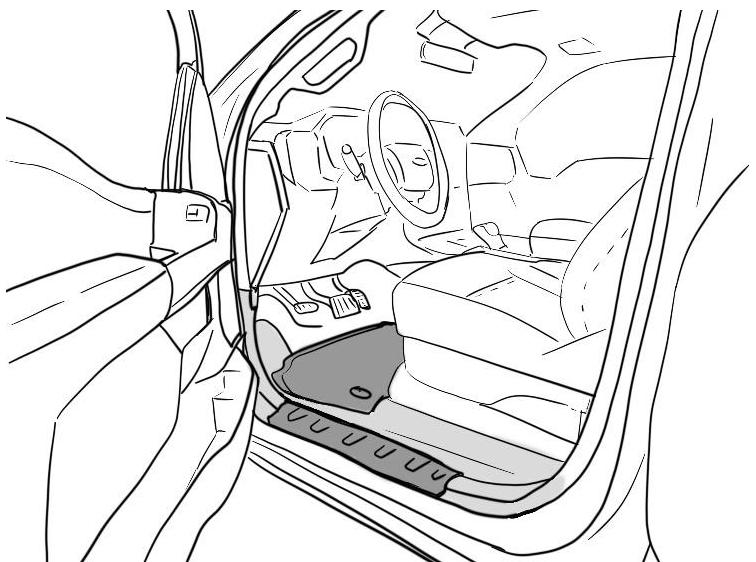

Prepare the power step boards. Locate the end of the boards and slide the M6 Carriage Bolts (E) into the channel on the underside of the board. Insert a total of 4 carriage bolts (E).

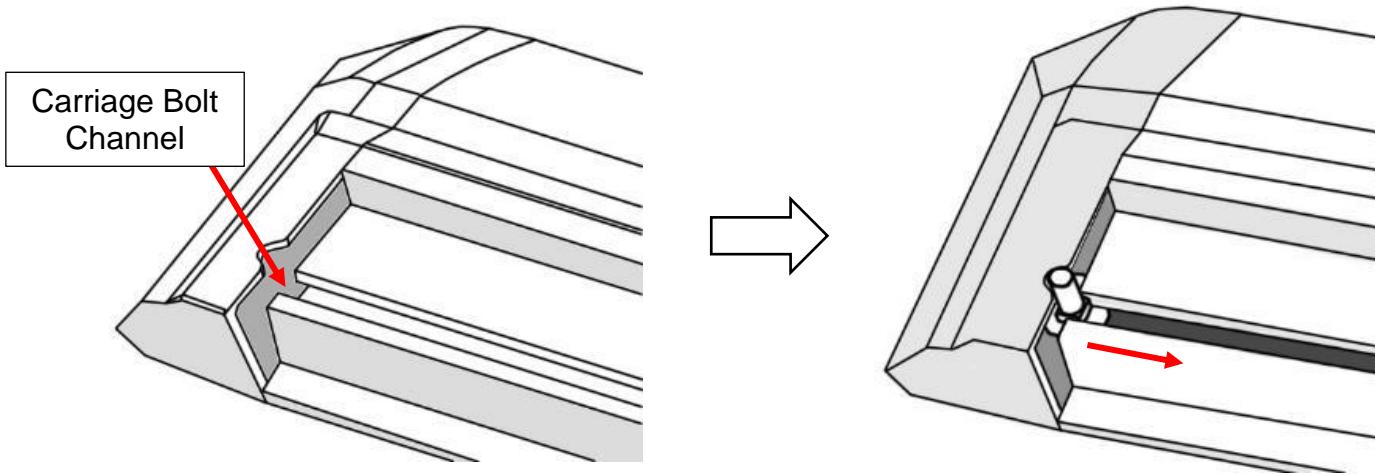


Use the notch in the board's end caps to feed the bolts into the channel.

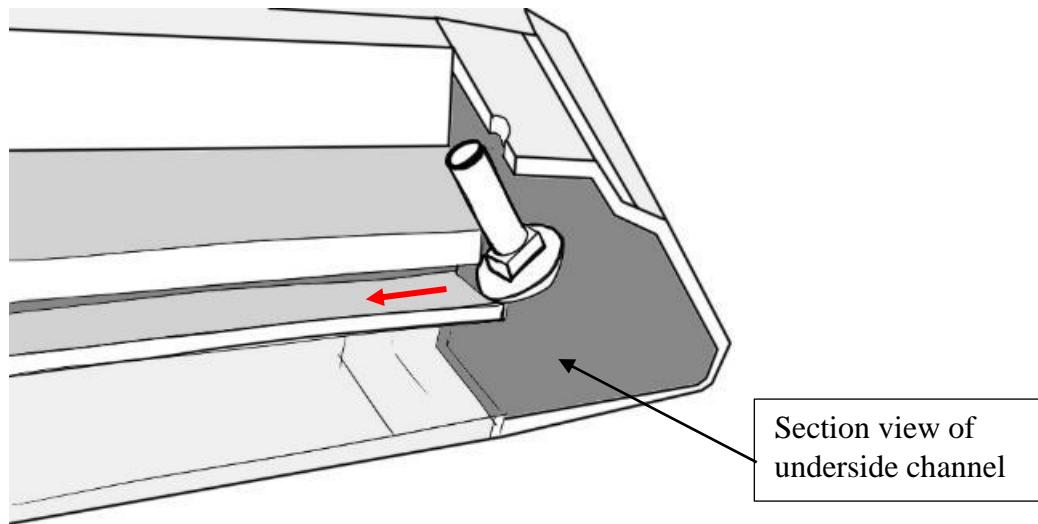

Perform a function check by closing the driver side front door and opening it again. The front bracket assembly (A) motor should activate the linkage arm and move it into the down or "deployed" position.

After deploying linkage arms, unplug the motor connector from the LED-Y harness (to cut power from the motor), while front door is open, to hold deployed position for running board installation.

Line up the carriage bolts (E), under the power step boards, with the slots on the linkage arms (A & B). Insert the 4 carriage bolts (E) into the slots on front and rear linkage arms. Adjust board to desired position. Moderately hand tighten the 6mm Flat Washers + 6mm Nylon Lock Nuts (G) onto the carriage bolts.

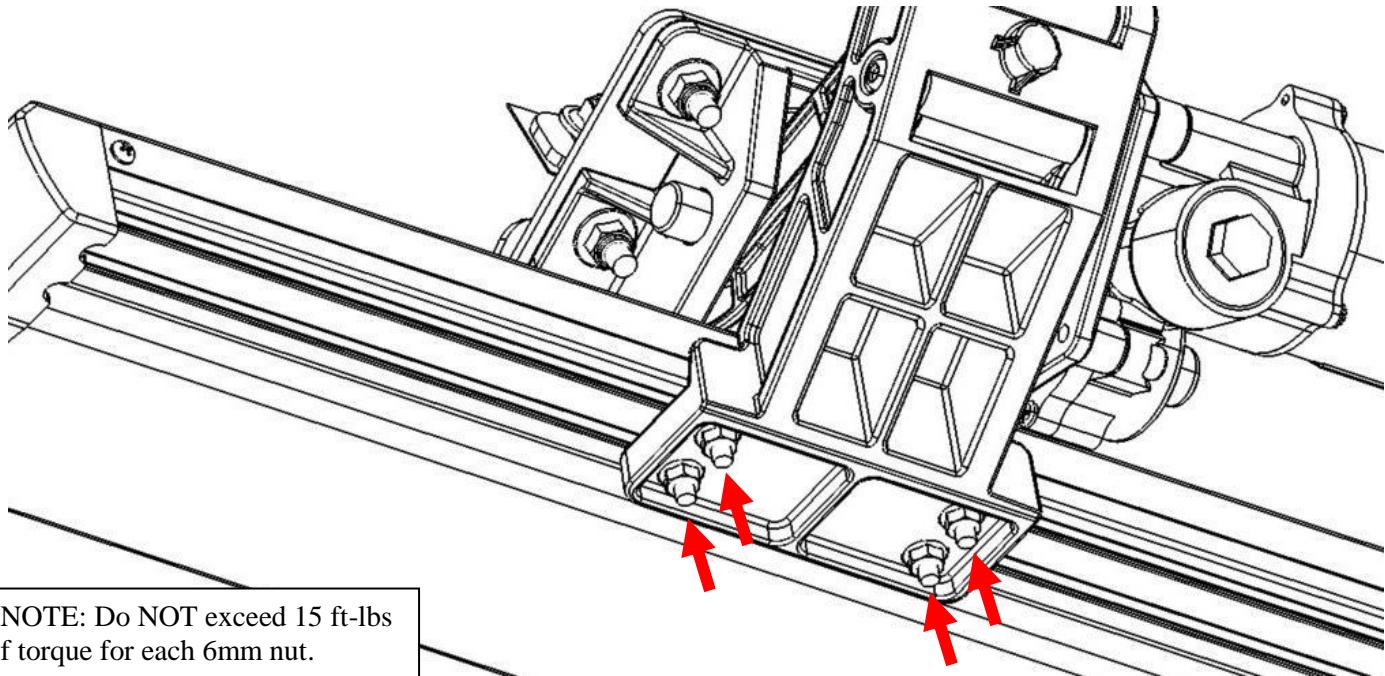

\*NOTE: Do NOT exceed 15 ft-lbs of torque for each 6mm nut.

Once the board is adjusted, plug in the motor connector to the LED-Y harness to return power to the linkage arms. Open and close doors several times to deploy and retract the steps to settle the steps into their natural alignment. After cycling the step, tighten all hardware on the board and brackets.

Some further adjustment may be required for desired step position. Repeat for passenger side.

## 20

Perform system check and troubleshooting. If board is making irregular movements or noise, readjust the boards as follows:


- a) With board deployed loosen 6mm nuts under board.
- b) Leave the nuts slightly less than snug.
- c) Open and close door several times for board to settle into position.
- d) With the step in the deployed position, gradually tighten flange nuts while alternating between each. Do not over tighten.

If board is making abnormal noise or the motion is binding, repeat steps "a" through "d".

Note: If the above method does not resolve the issue, the brackets mounting to the vehicle may not be aligned properly with the vehicle. In this case, remove the board and realign brackets before attempting steps "a" to "d" once again.

21

Reinstall any remaining trim panels if necessary. Check and make sure all hardware is fully tightened. Perform a final system check. Finish.

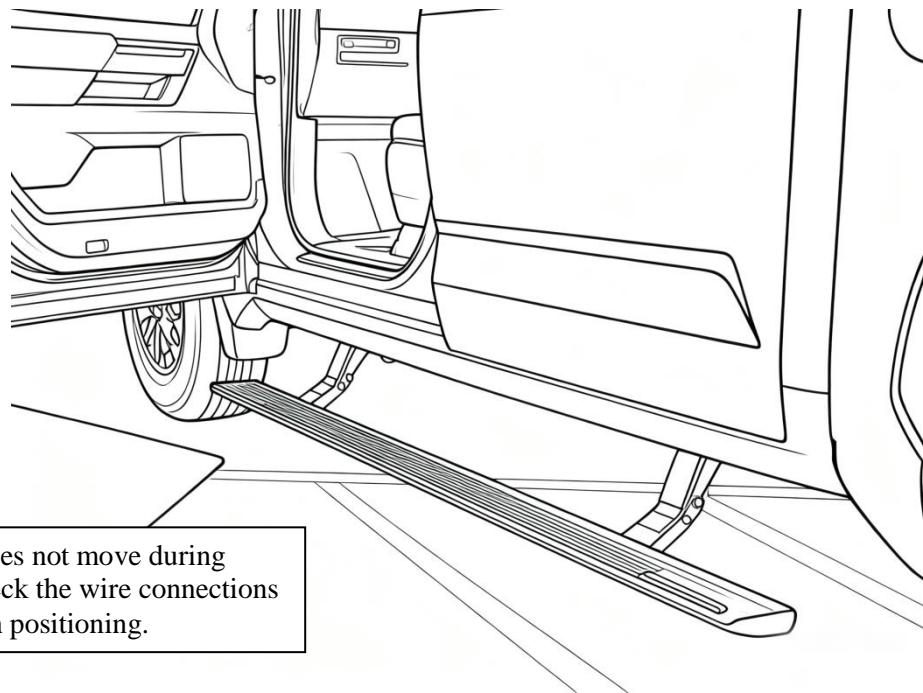

## FINAL REMARKS

- Ensure there are no debris or obstacles preventing the power steps from operating.
- Open and close each door on both sides to ensure that power steps are operating correctly.
- Check and ensure that all electrical connections are properly connected.
- Check and ensure that the magnetic switches are lined up correctly and that they directly face each other when the door is closed.
- Check and ensure that the magnetic switches fully adhere to a clean surface.
- Conceal the magnetic switch wiring as best as possible underneath the door sill and along the weather seal.
- Recheck that all mounting hardware is tight.
- Adjust mounting brackets or running board to enable smooth operation even after having stepped on the deployed boards.

## MAINTENANCE AND CARE

- Periodically clean the linkage arms and motor of any dirt or debris that may accumulate.
- Avoid spraying the motors directly with high pressure liquids.
- Avoid damaging the power steps.
- Ensure power step ECU is not exposed directly to water to prevent degradation.
- Ensure wiring is properly tucked away and concealed from mechanically moving parts and exposure to high heat or very low temperature conditions.
- Periodically recheck that all mounting hardware is tight
- Do not overload the running board.
- Readjust running board if necessary.

## WARNING AND SAFETY

- Do not use boards as a rock slider or as skid protection.
- Do not use solvents, chemicals, oils, or corrosive liquids on power steps. If the power steps encounter these substances, clean the power steps as soon as possible. Mild detergent and water is recommended.
- Do not obstruct the power steps in any way during operations of deployment and retraction.
- Do not rely in any way on the components of this product to keep occupants within the vehicle or to protect against injury or death in the event of an accident.
- Do not sit/stand on the running board for long periods of time.
- Do not jump on power step board or rest heavy objects on boards or subject power steps to excessive force.
- Do not step on plastic end caps of the boards. Failure to do so may result in injury.
- Do not place bodily appendages between running board and the vehicle body. Please mind the gap between the vehicle and the board.
- Do not allow children to use power steps without adult supervision and proper operation. This is not a toy. Improper use may result in injury.

- Remove the fuse on the power lead on the main harness before doing electrical troubleshooting to avoid risk of shock or injury. Make sure the motors do not have power before working on mechanical adjustments to avoid injury.

**By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.**