


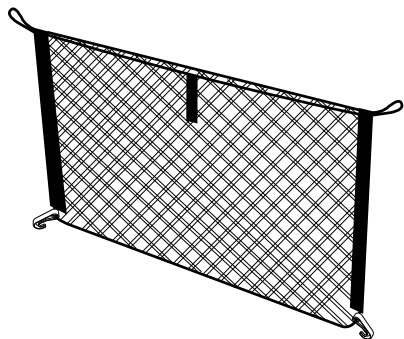


JEEP COMPASS / PATRIOT


Convenience Net




A

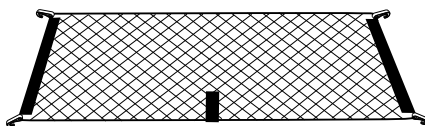

B

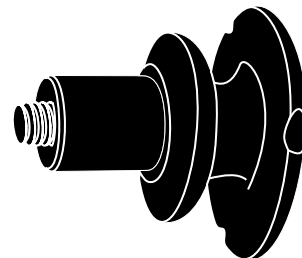


C

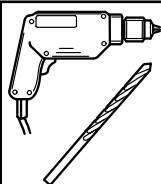


1/4" & 1/2"

Floor Net

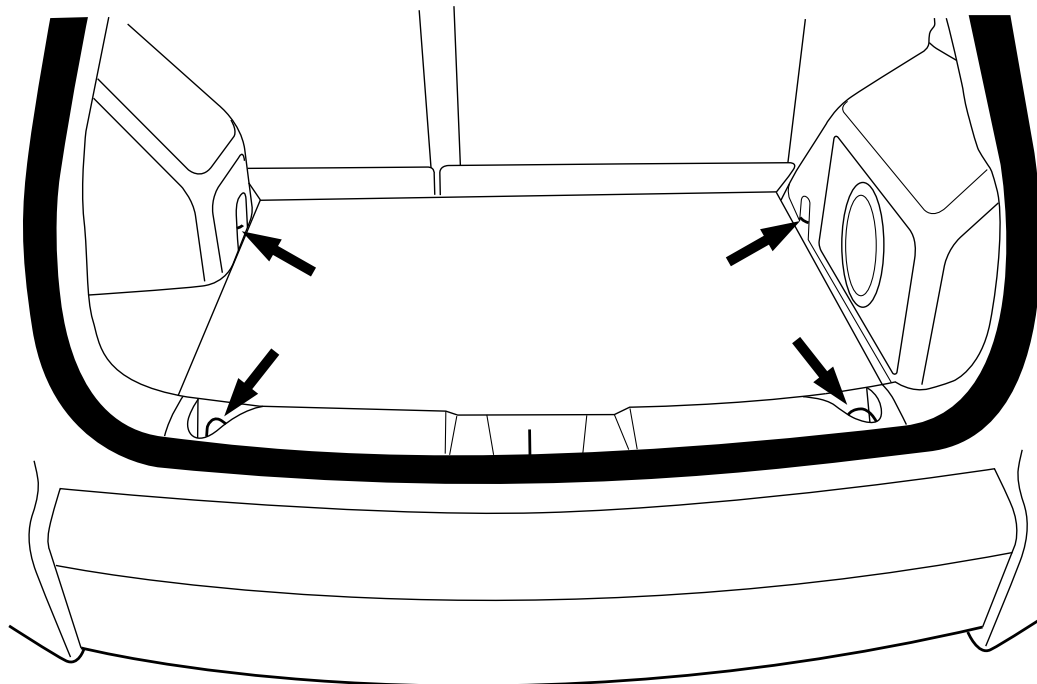


1


2

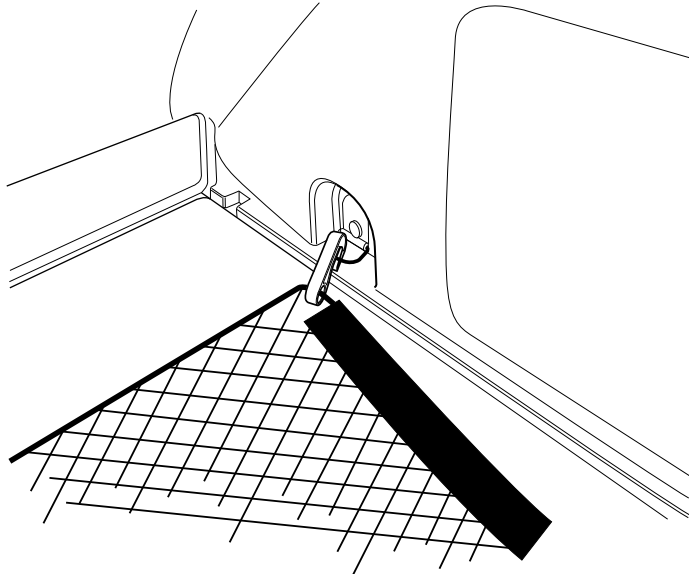

3

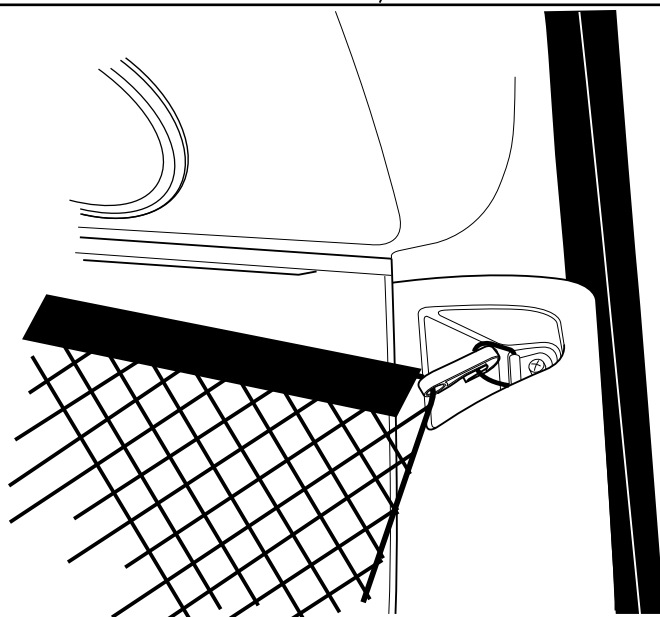


4

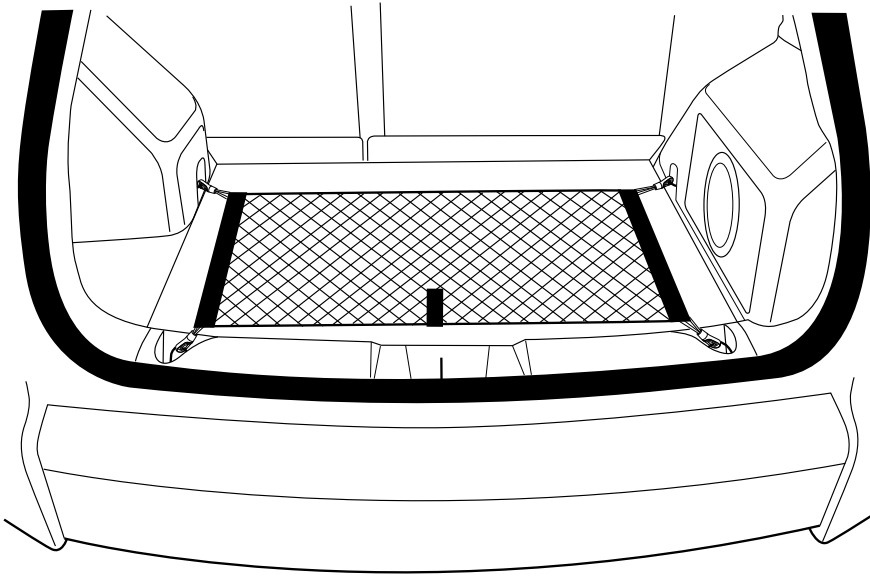


Envelope Net


- Mark drilling location on trim panel
- Drill 1/4" pilot hole
- Enlarge hole with 1/2" drill bit

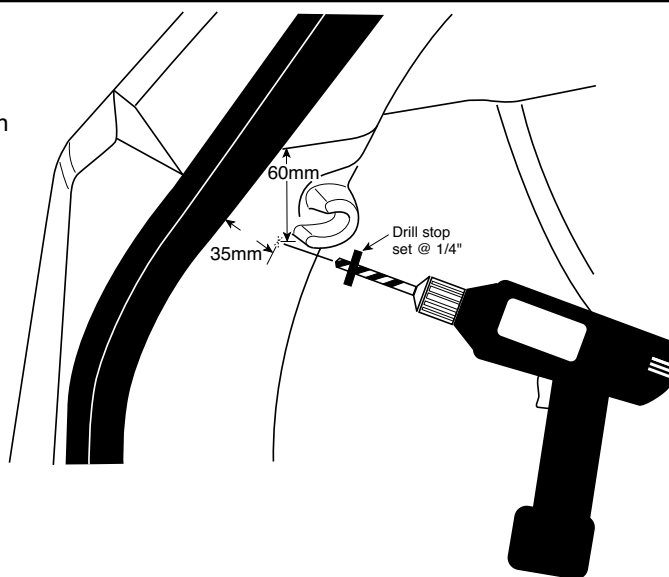

5

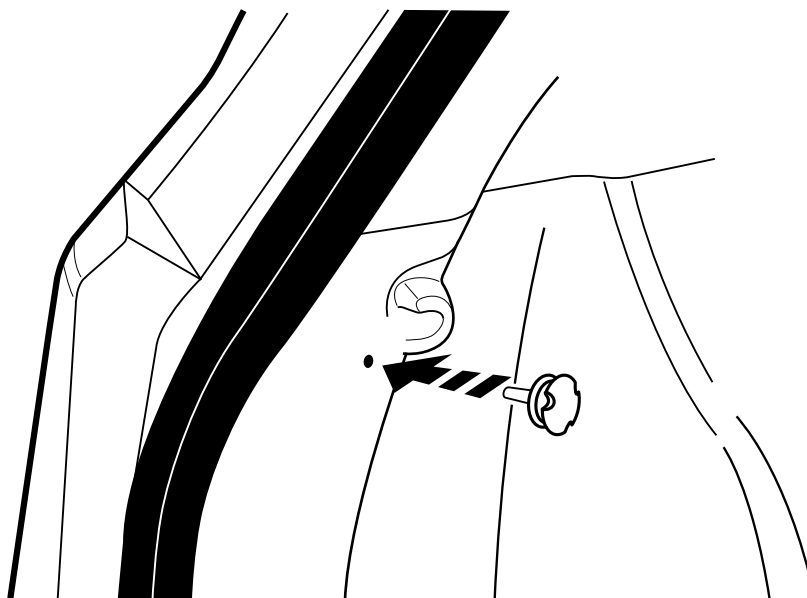


6

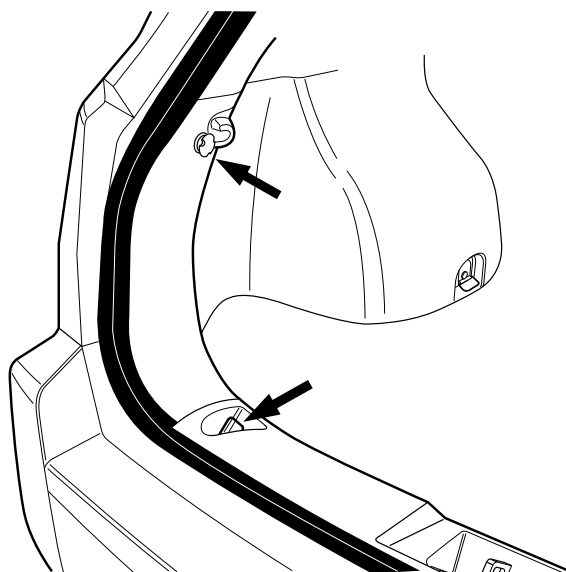

7

8

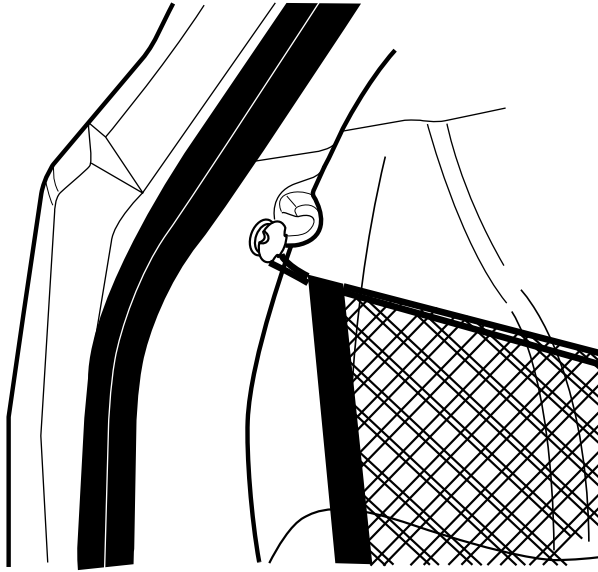

9

