



JEEP LIBERTY




Chrome Bodyside Molding

A	LH FRONT		
B	LH REAR		
C	RH FRONT		
D	RH REAR		


1 REPEAT ON OTHER SIDE

REMOVE RESIDUE WITH 3M WHEEL


2 REPEAT ON OTHER SIDE

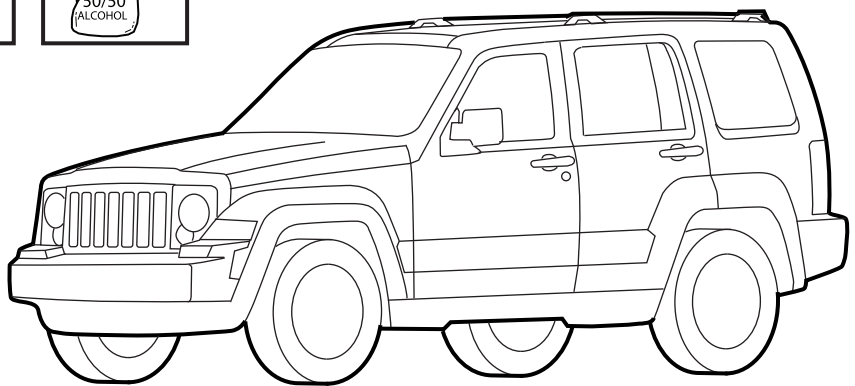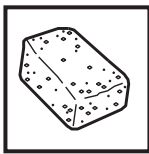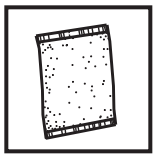

3 WASH AND DRY THOROUGHLY

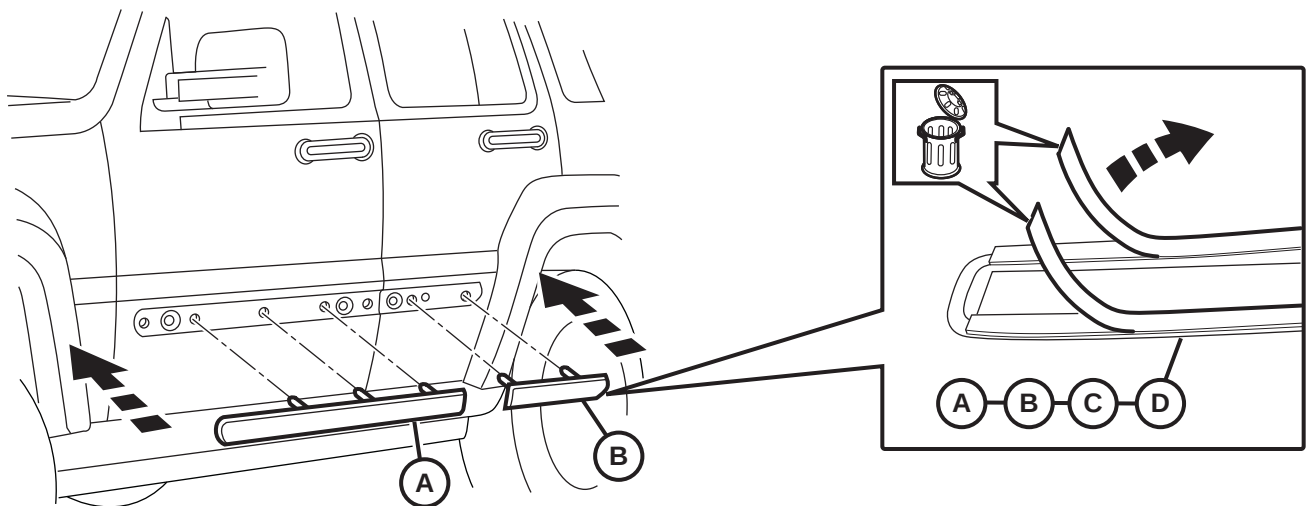

4 REPEAT ON OTHER SIDE

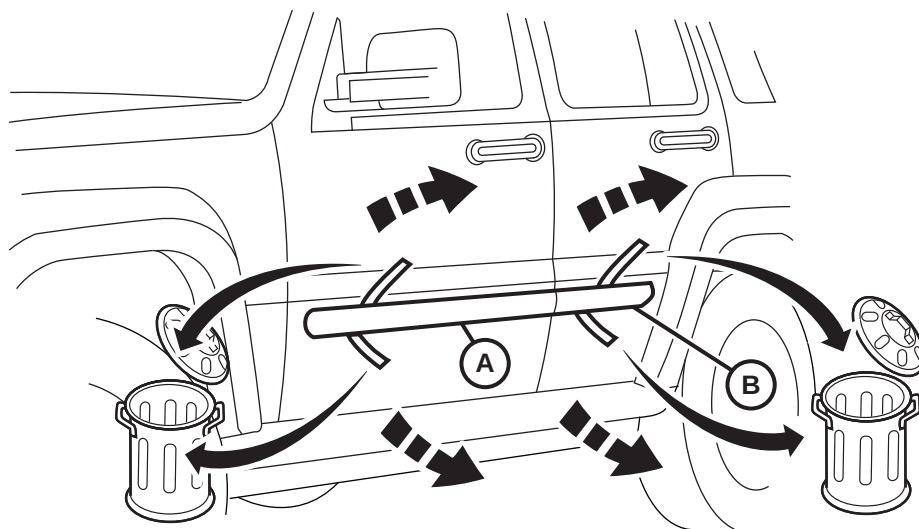

5 REPEAT ON OTHER SIDE