





Double Vehicle Electrical Center

DODGE CHARGER

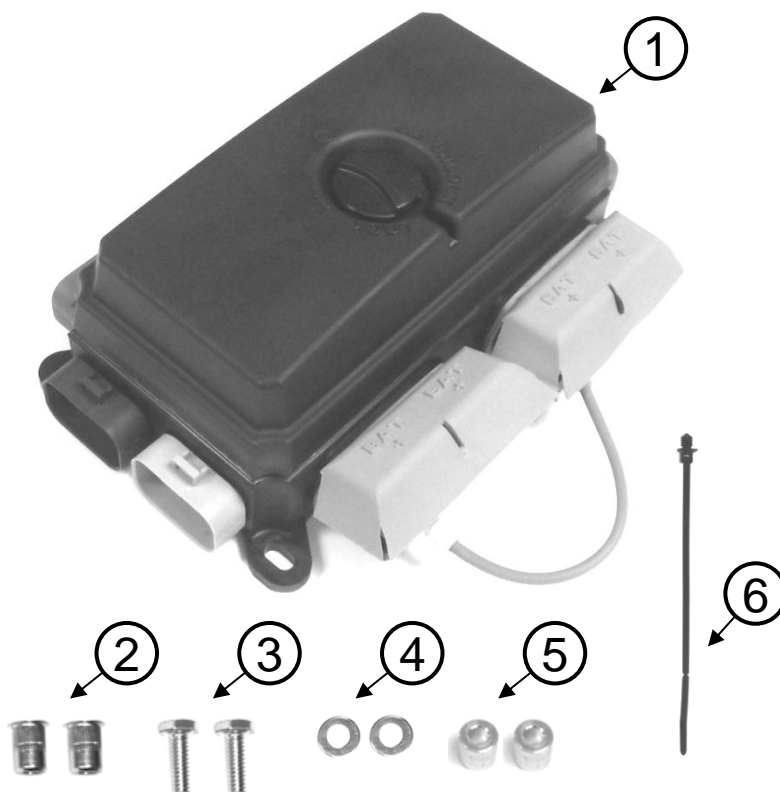


Item	Qty	Description
1	1	DVEC
2	2	1/4" x 20 Rivnut
3	2	1/4" x 20 Bolt
4	2	1/4" Flat washer
5	2	1/4" Spacer
6	1	x-mas tree wire tie


1. Refer to official Chrysler procedure to remove and install OEM parts listed in this procedure.
2. Remove trunk's passenger side OEM carpet.
3. Remove PTS module if equipped. And remove and discard the x-mas tree wire tie holding its harness to the body. Do not unplug module.
4. Place template Appendix A in position as shown in picture 1 and drill two holes 25/64" dia. CAUTION: use drill stop set to 1/4" depth to avoid quarter panel damage.
5. Install two rivnuts (item 2) in pre-drilled holes. Picture 2.
6. If equipped with PTS module. Relocate the module as shown. Secure the PTS module lower front hole to the rear rivnut using one bolt (item 2) hand-tighten and hold PTS module straight up. Drill a 1/4" hole in the reinforce panel through the upper hole of the PTS module and secure it re-using one push-pin. Remove bolt on lower hole. Re-route PTS wiring to the existent hole indicated on reinforce panel and secure it with a x-mas tree wire tie (item 6). Install DVEC (item 1) to rivnuts with hardware (items: 3, 4 & 5) in the following order: PTS module on rear rivnut, spacer, DVEC, washer, bolt. Picture 3.
7. For non-PTS units, Install DVEC (item 1) to rivnuts with hardware (items: 3, 4 & 5) in the following order: spacer, DVEC, washer, bolt. Picture 4.
8. Connect main harness P/N 82213019 colour-coded connectors to DVEC . Picture 4.
9. Dry fit the trunk passenger side carpet, mark the carpet from the underside around the DVEC with white marker and trim out marked section.
10. Remove DVEC cap, reinstall carpet and reinstall DVEC cap.

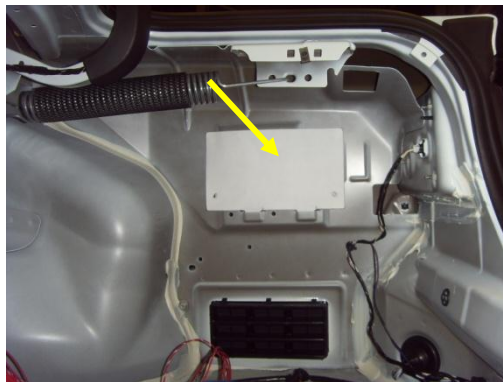


1.

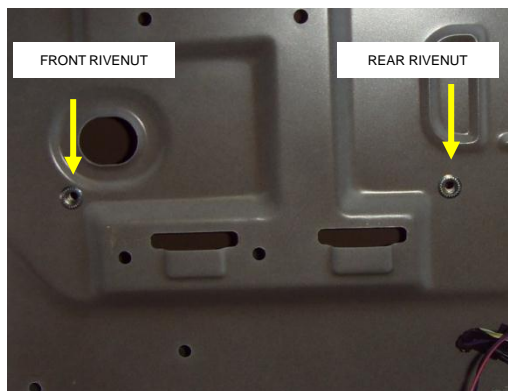

2.

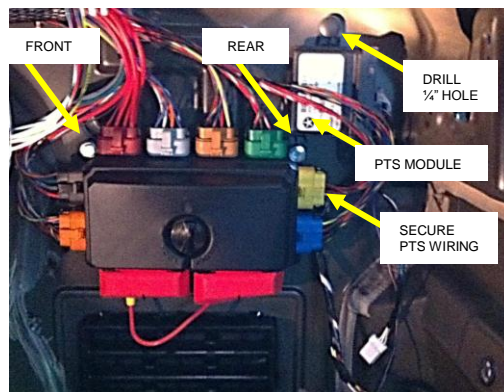

3.

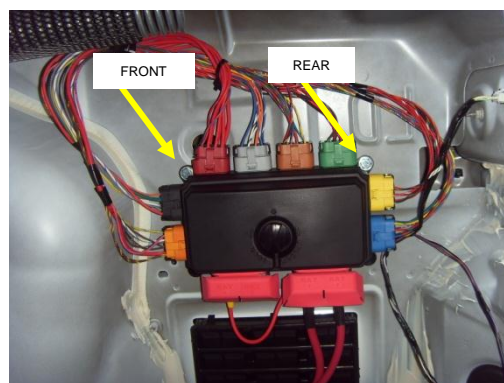

4.