



MOPAR®


DODGE DAKOTA SATELLITE RADIO

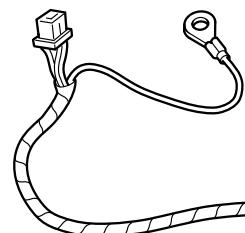


A

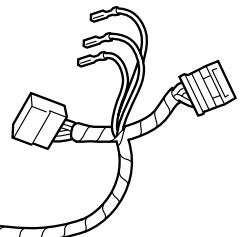


B

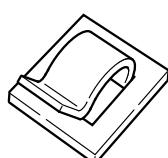


C 6x

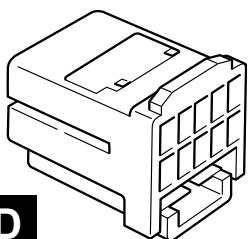

D

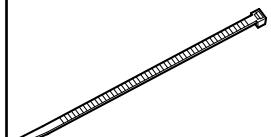


E 6x

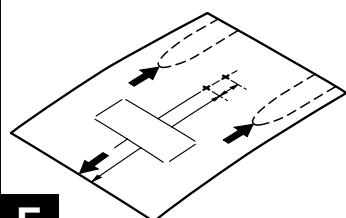


F



G

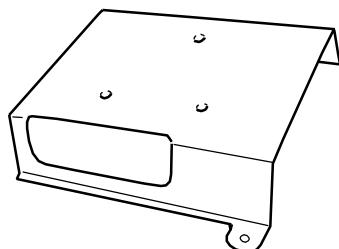


H

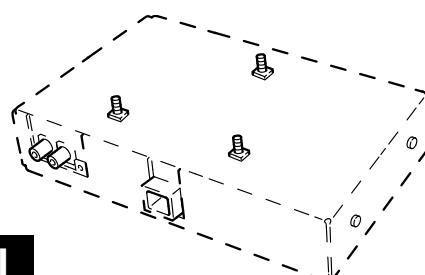







I




J 3x






K 2x

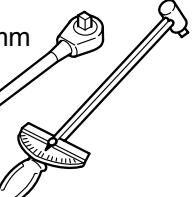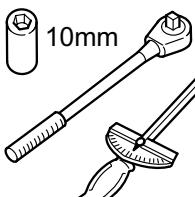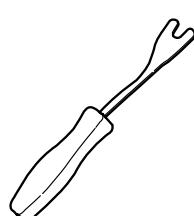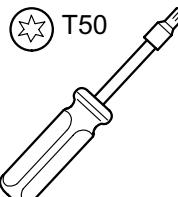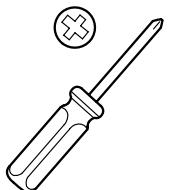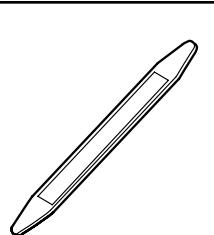


SCRAP
CARDBOARD

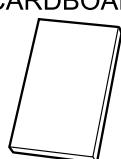





APPROX. 11"X17"

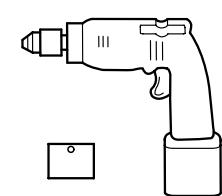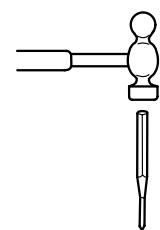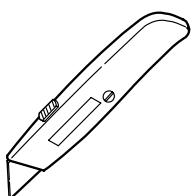


1/8" (3mm)




7/32" (5.5mm)

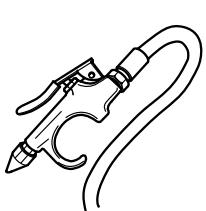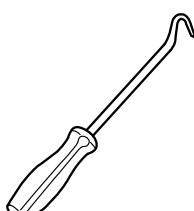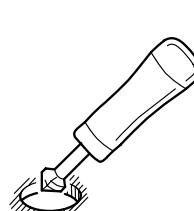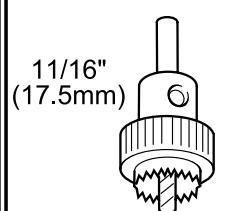


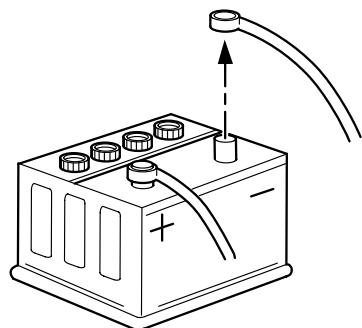


1

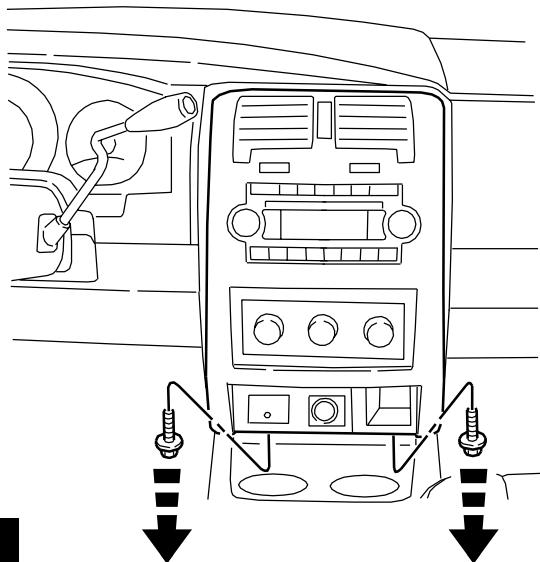


2

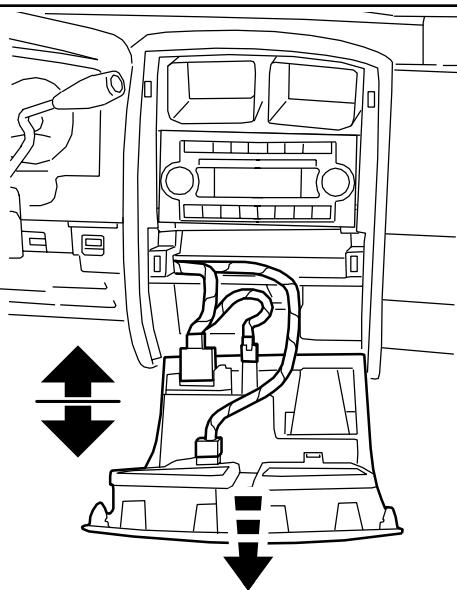


3

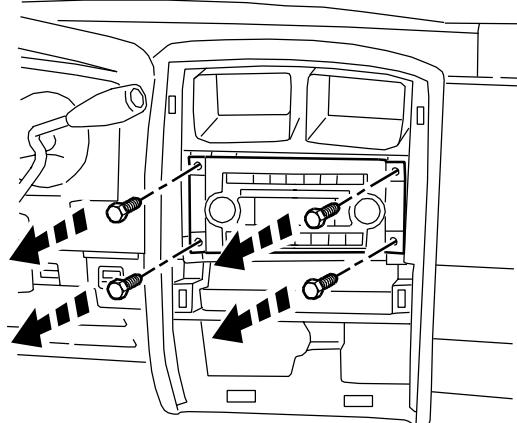


4

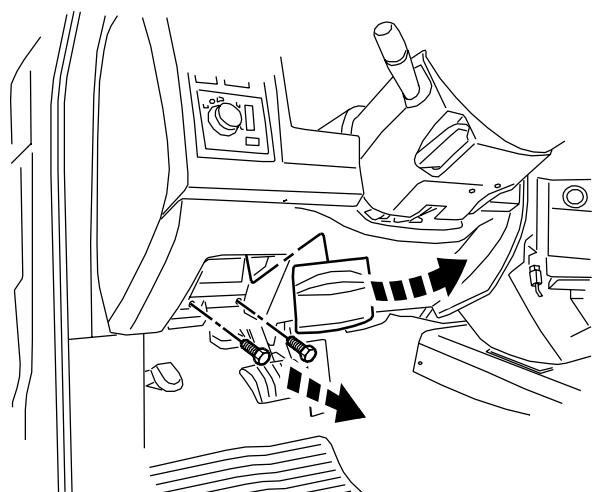

5

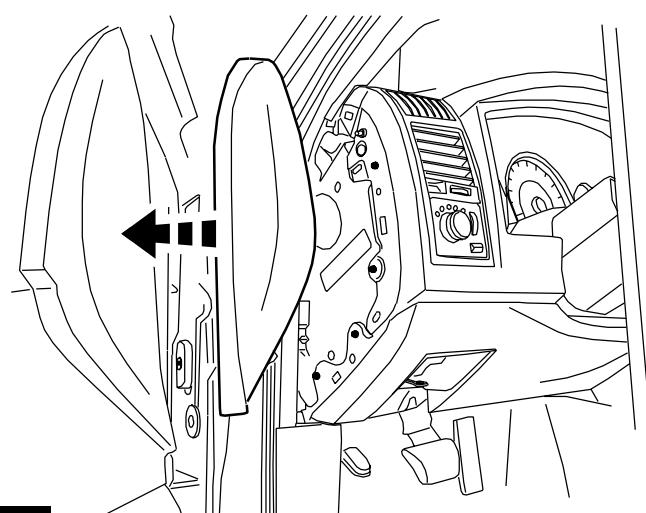


6

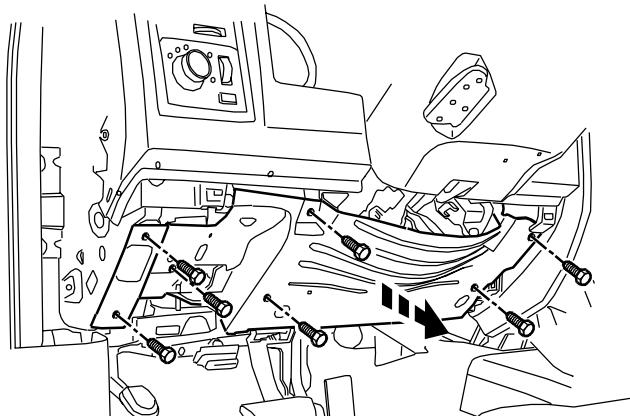


7

Remove knee blocker and support.
Unplug airbag, if equipped.

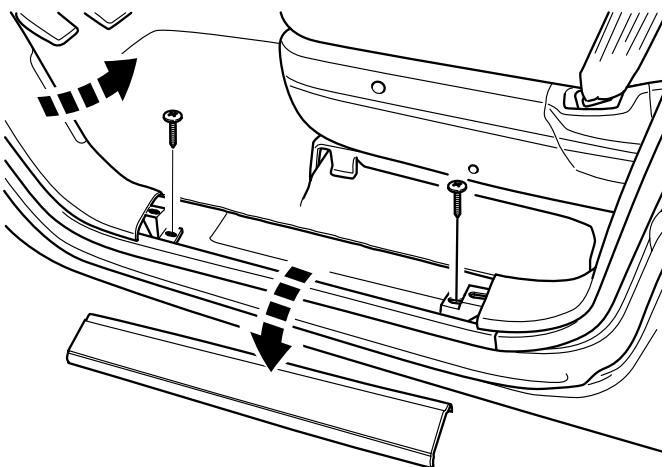


8

QUAD CAB ONLY

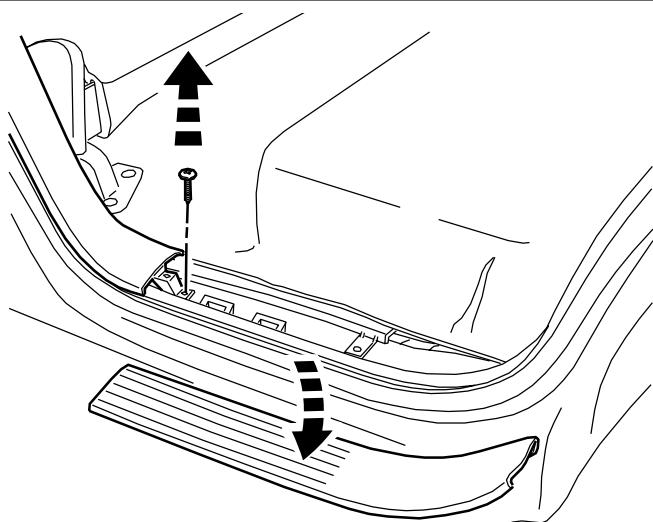


9

QUAD CAB ONLY

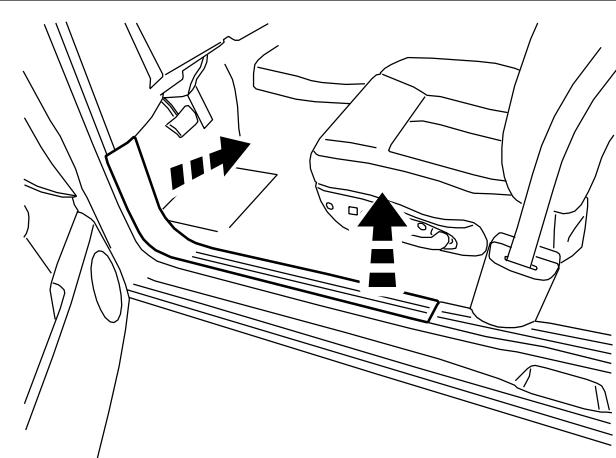


10

EXTENDED CAB ONLY

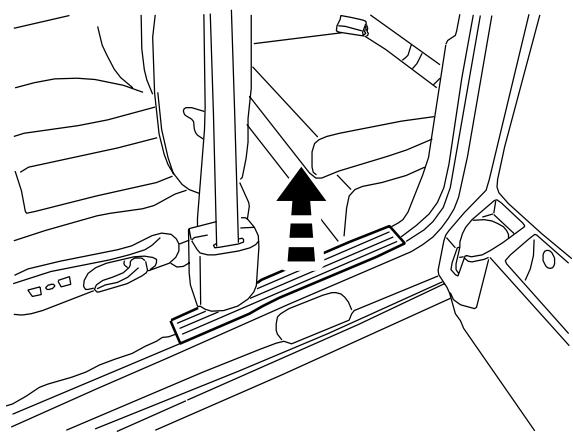


11

EXTENDED CAB ONLY

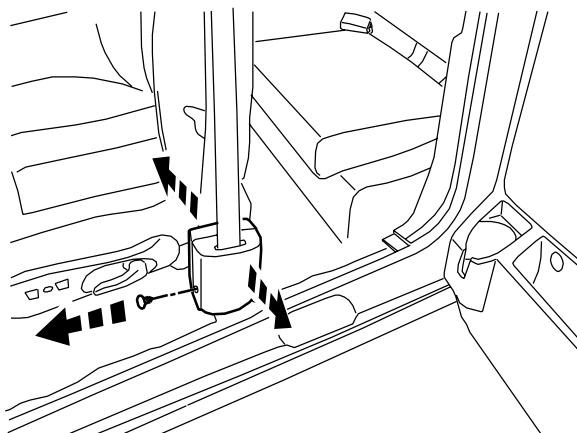


12

EXTENDED CAB ONLY

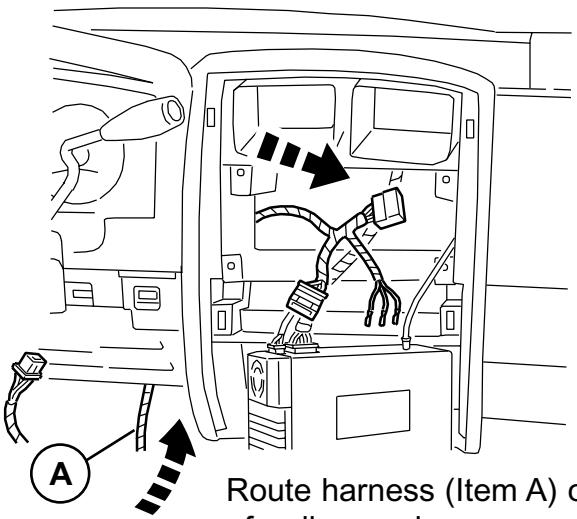




13

Route harness (Item A) out of radio opening.

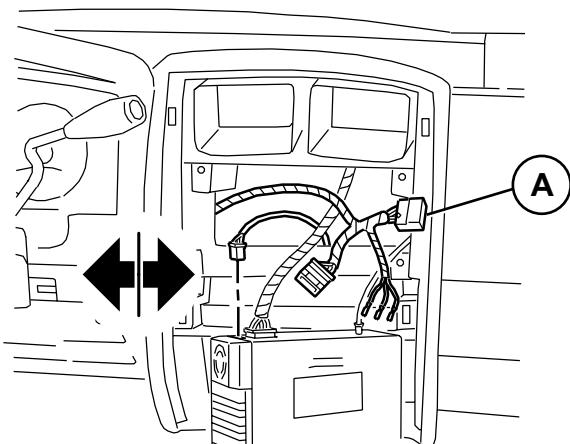


14

Disconnect 10-way radio connector, if equipped.

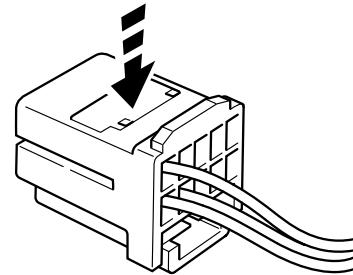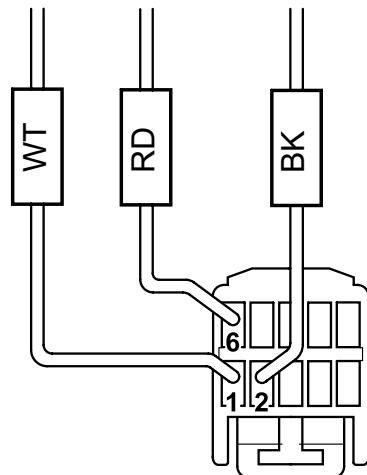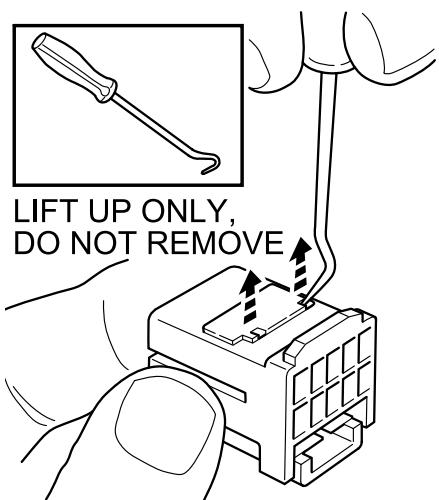


15

Plug and lock (3) harness wires into 10-way connector as shown. If radio does not have existing 10-way connector, use the one supplied in kit (Item D).

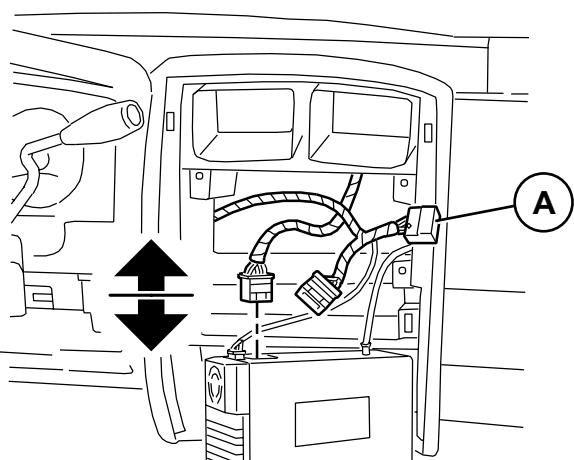


16

Disconnect 22-way radio connector.

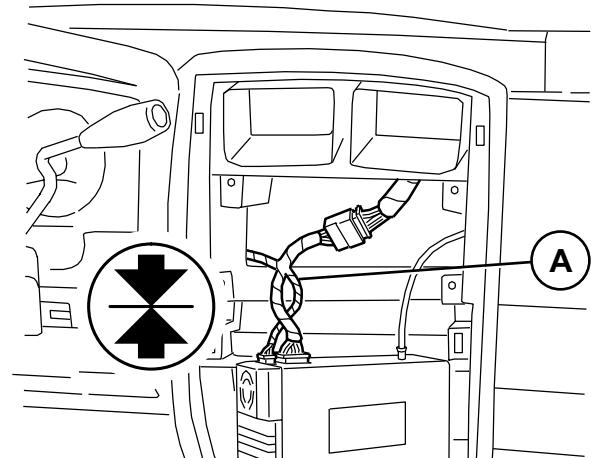


17

Plug and lock harness connectors in between.

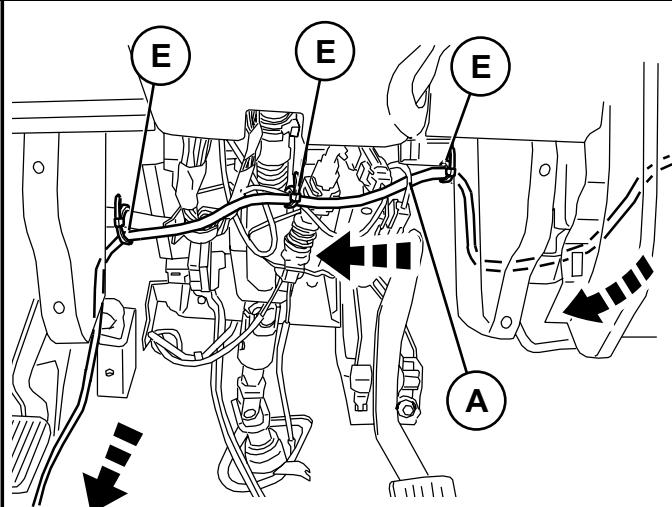


18

Tie strap harness away from sharp edges, heat sources, or moving parts.

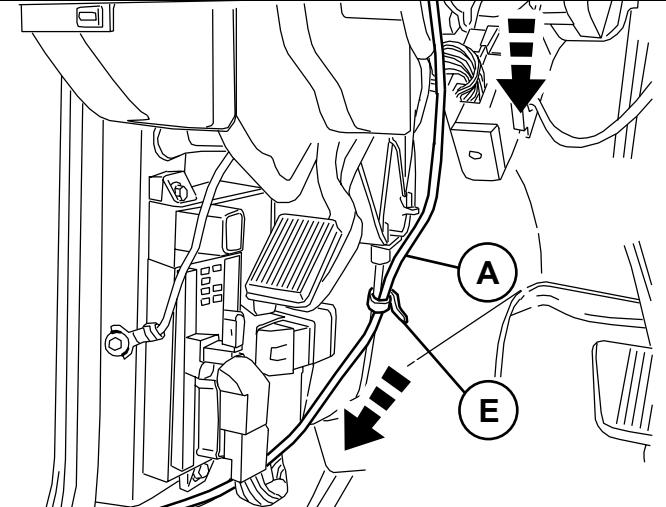



19

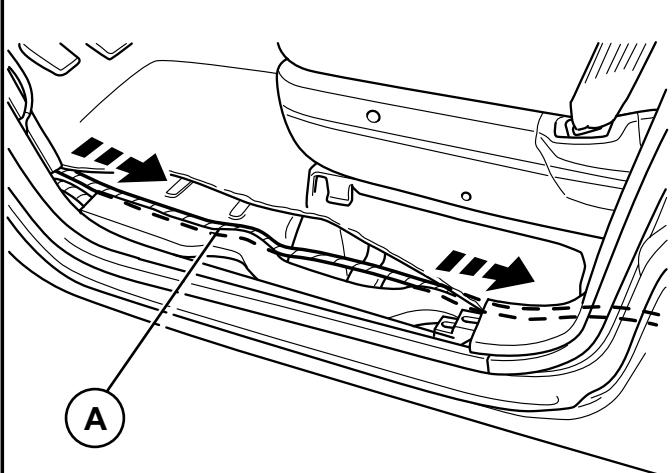

QUAD CAB ONLY


20

Tuck harness under front and rear carpet liner. Tuck harness under lower B-pillar trim.

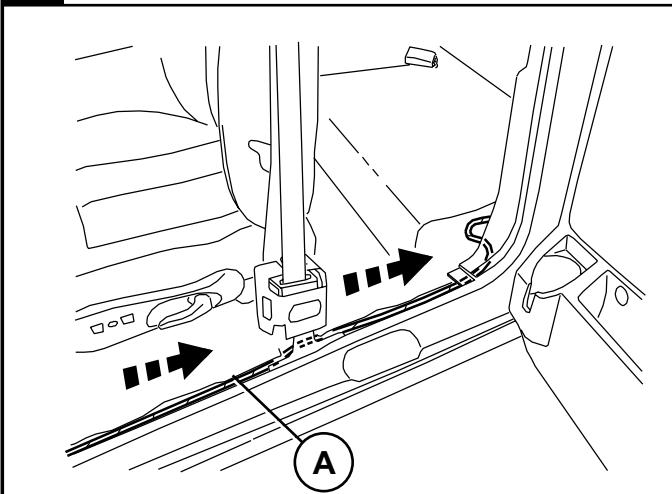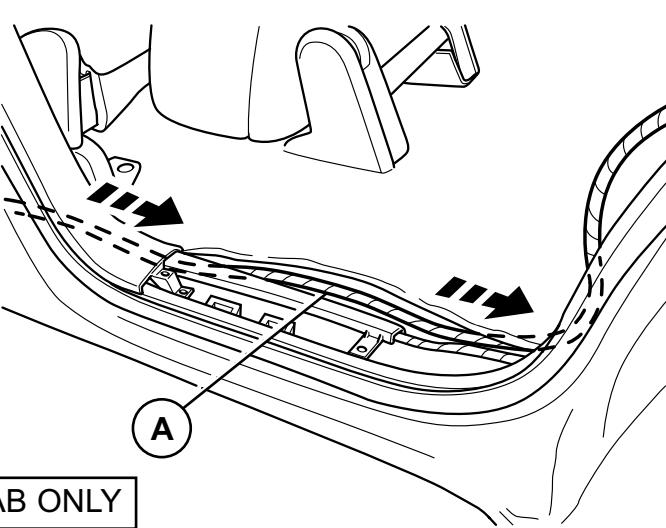

21


EXTENDED CAB ONLY

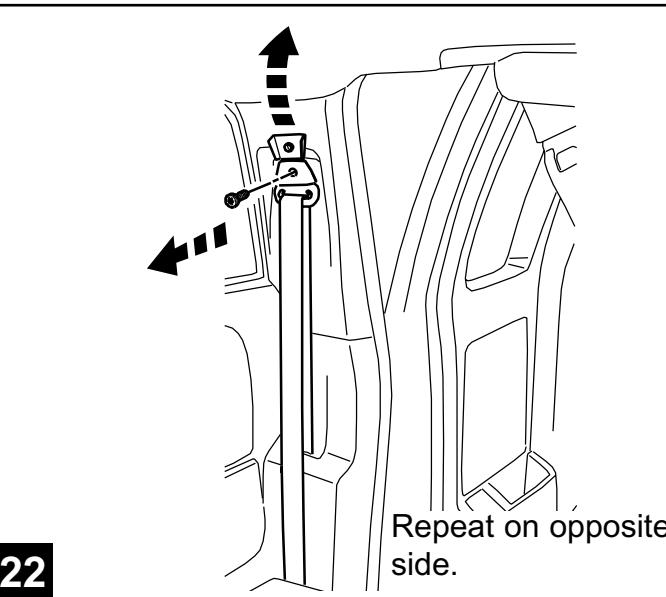

22


Repeat on opposite side.

Repeat on opposite side.

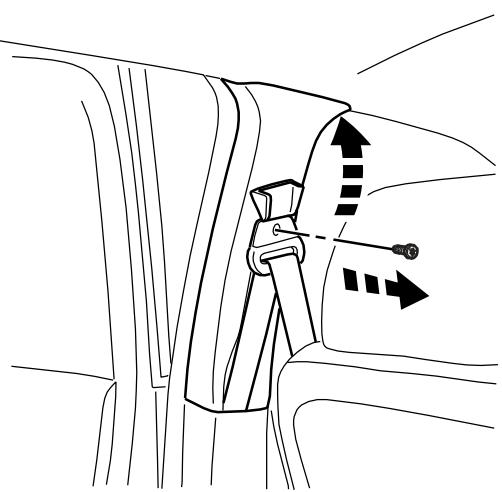


QUAD CAB ONLY

23

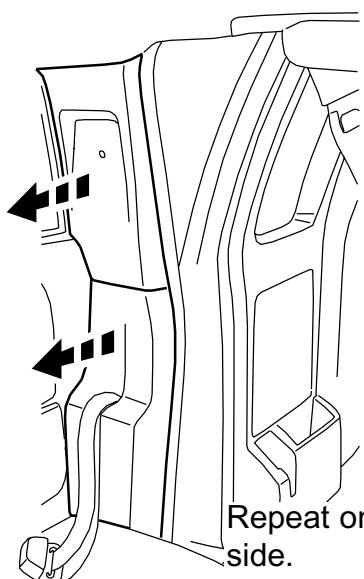

Repeat on opposite side.


24

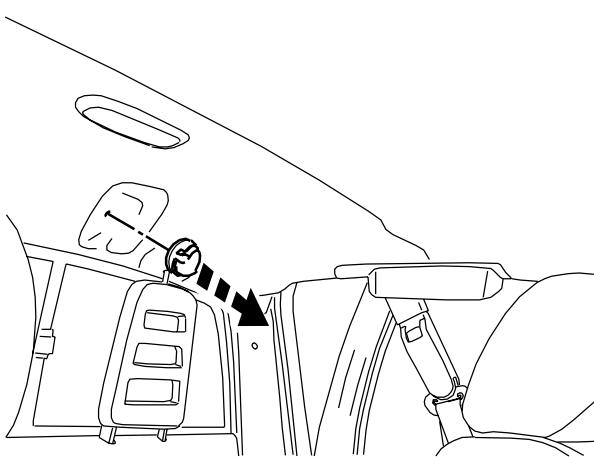

Repeat on opposite side.


25

Repeat on opposite side.

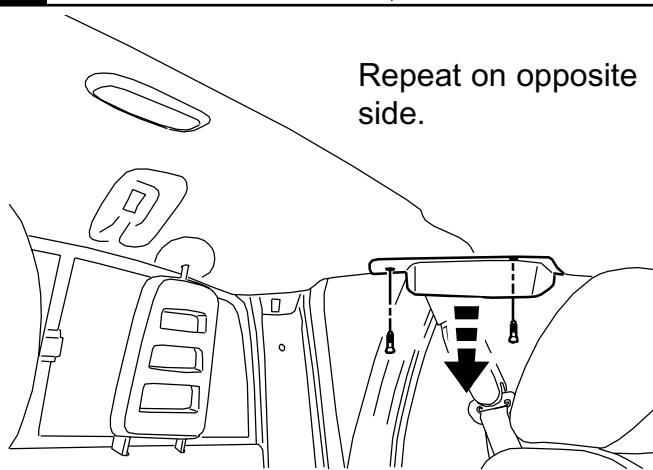


EXTENDED CAB ONLY

26

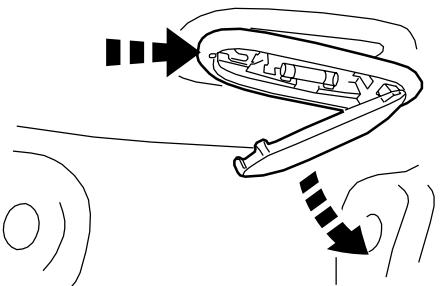


27

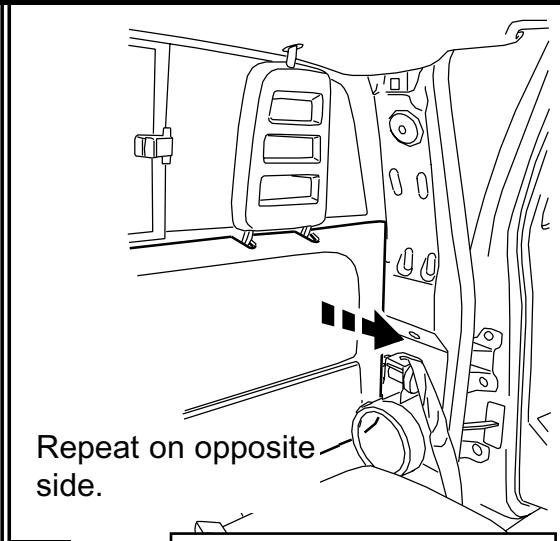


28

EXTENDED CAB ONLY

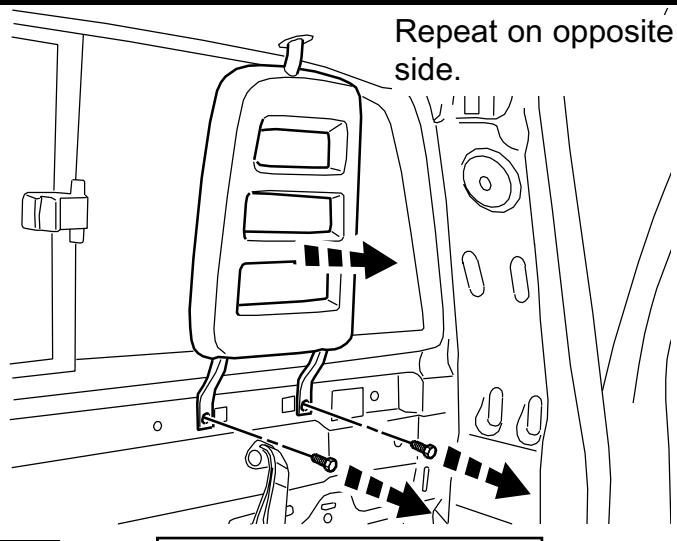


29

EXTENDED CAB ONLY

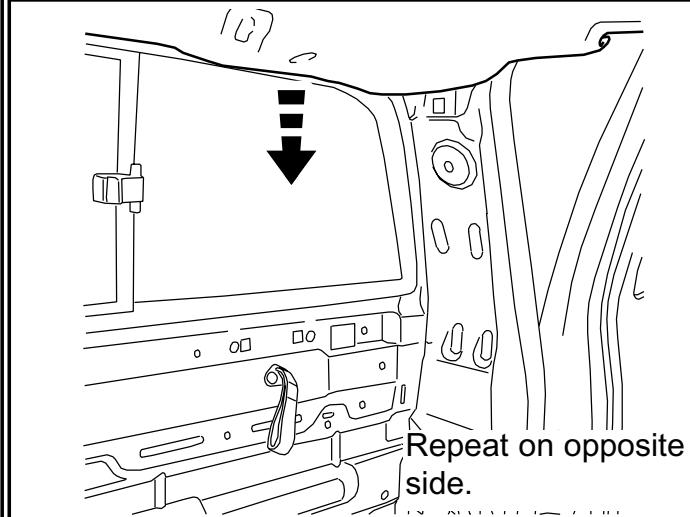


30

EXTENDED CAB ONLY

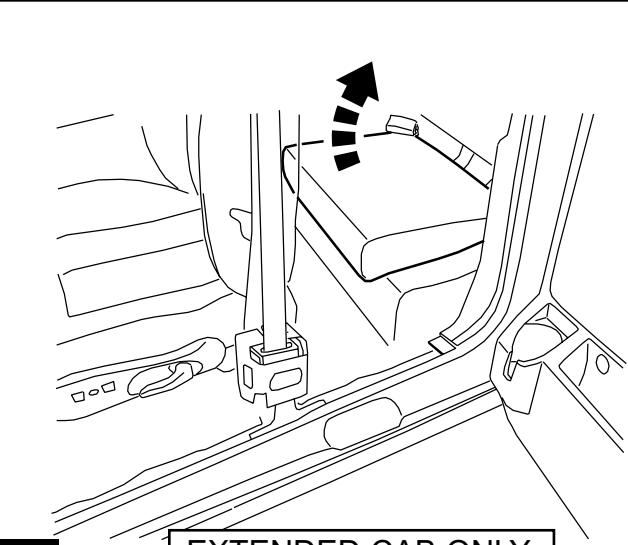


31

EXTENDED CAB ONLY

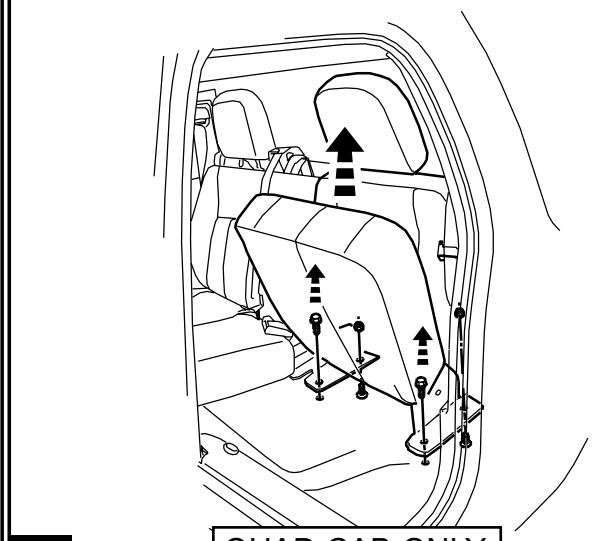



32

QUAD CAB ONLY


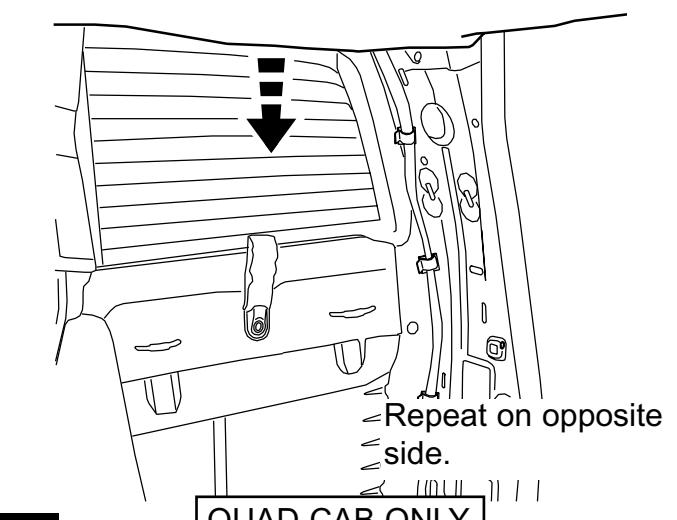


33


QUAD CAB ONLY

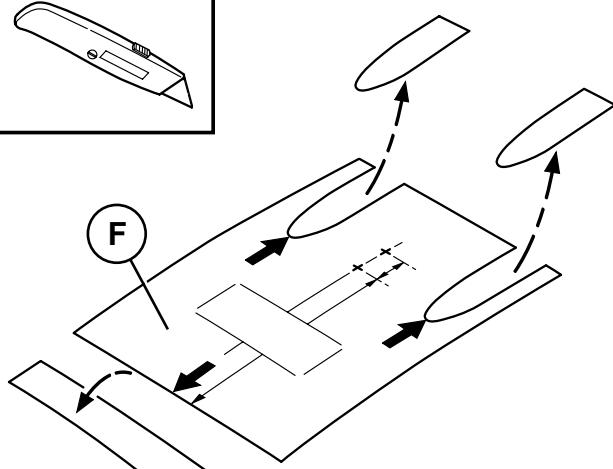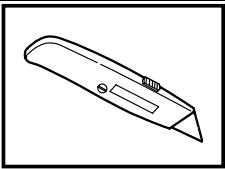


34 Verify cab size on double-sided template and trim out appropriate template.

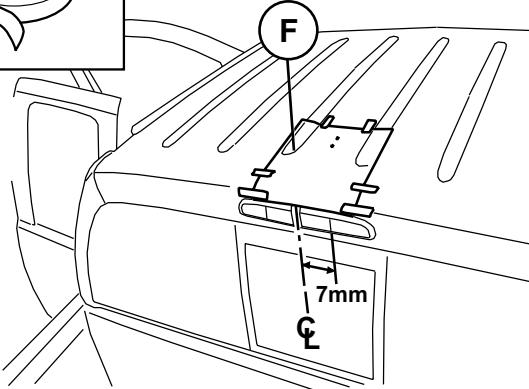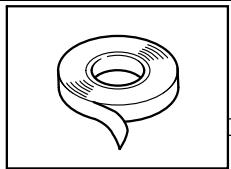


35 Center template on roof and tape in place

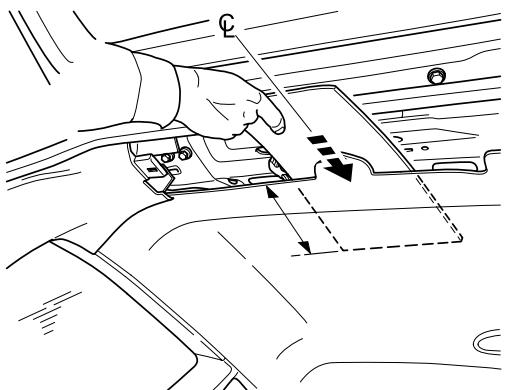

36 Insert scrap cardboard to catch metal shavings.


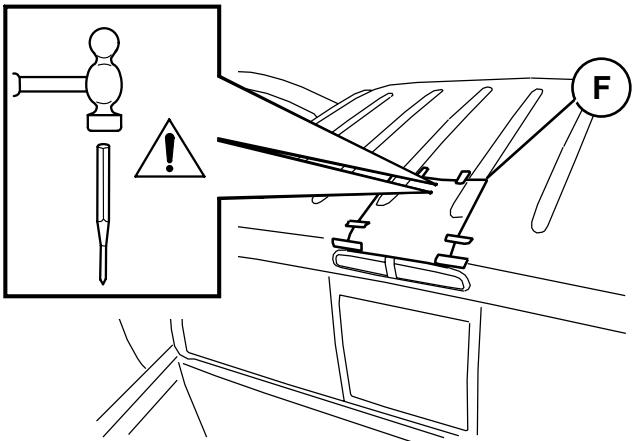


37 Carefully center punch at (2) locations. Discard template.

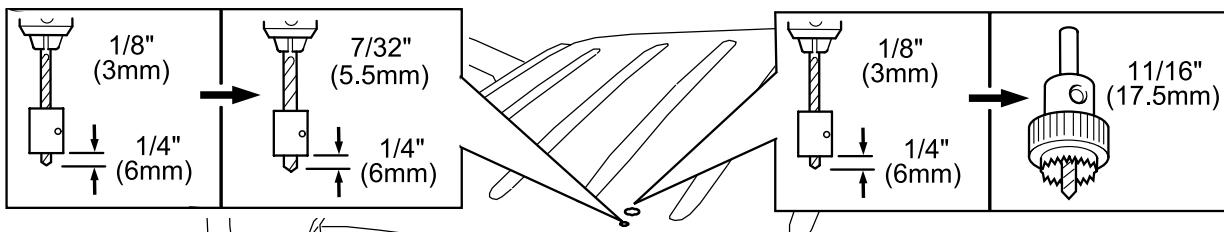


38

Drill antenna mounting holes through the roof.

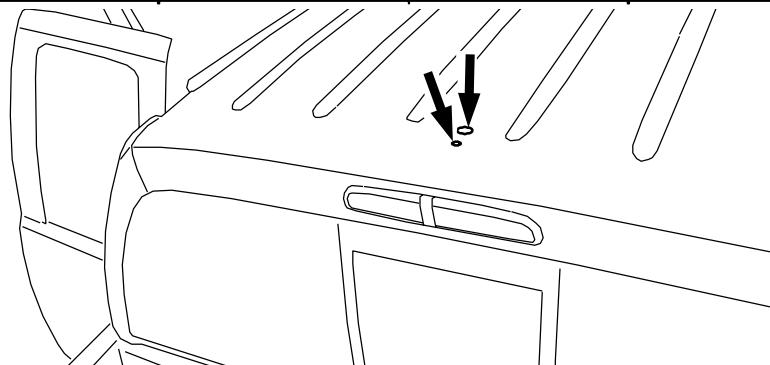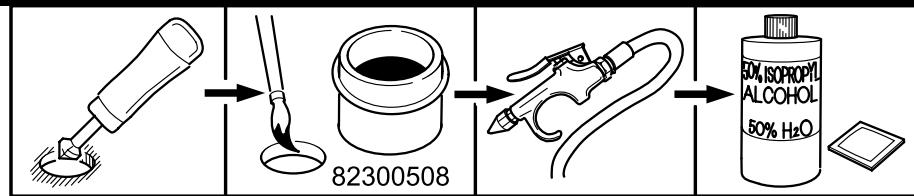


39

Prep, prime and clean the drilled holes.

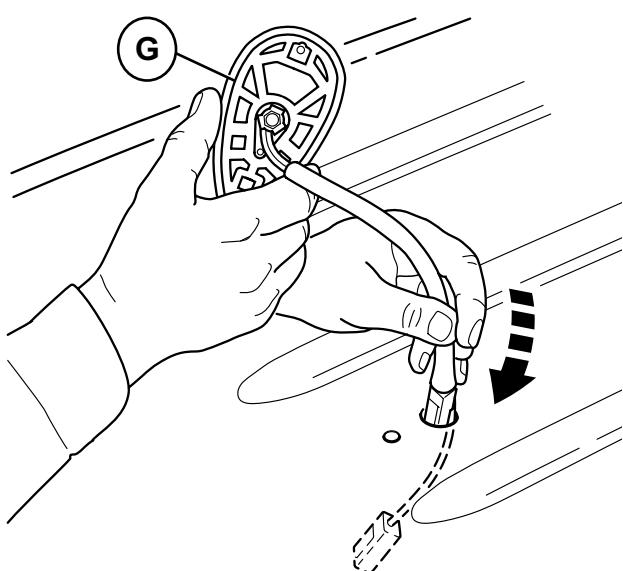


40

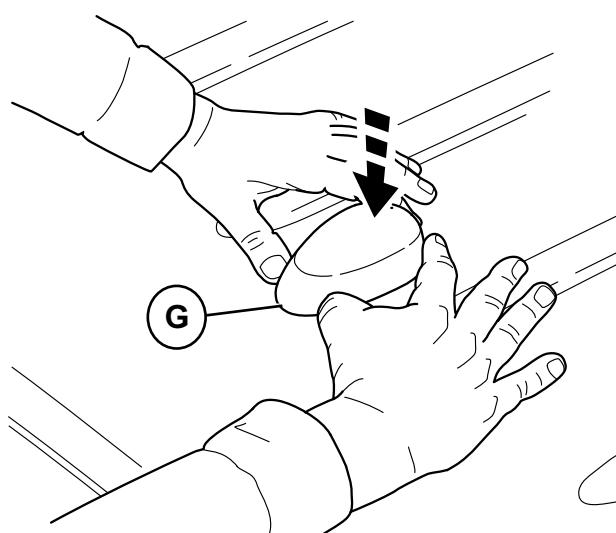


41

Seat antenna to the roof.

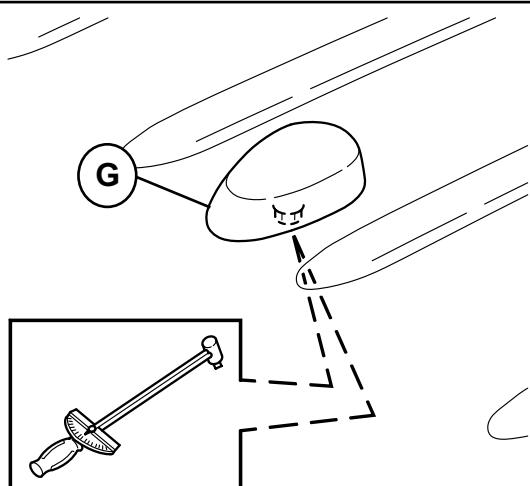

42


Tighten antenna mounting bolt to 80 in.-lbs. (9 N·m).

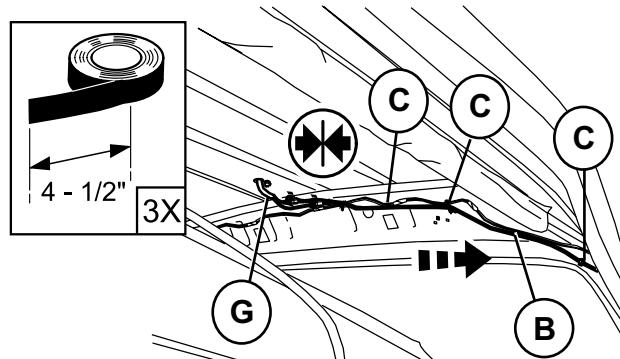

MATCH CONNECTOR COLORS AND KEYING.
APPLY TAPE AROUND CONNECTOR.


43

QUAD CAB ONLY

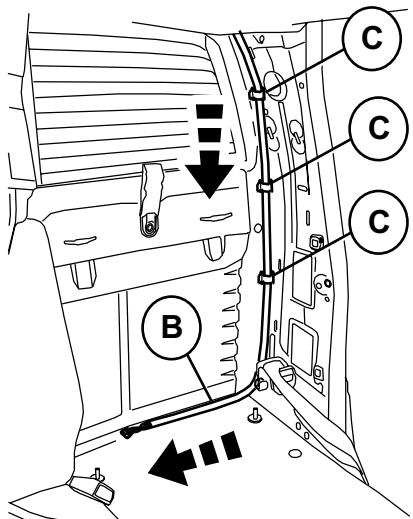


44

QUAD CAB ONLY

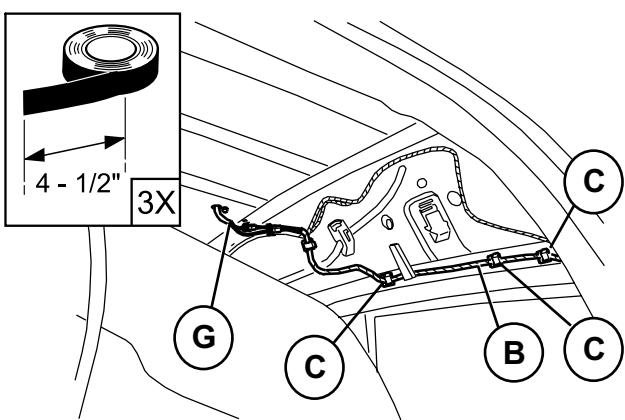


45

EXTENDED CAB ONLY

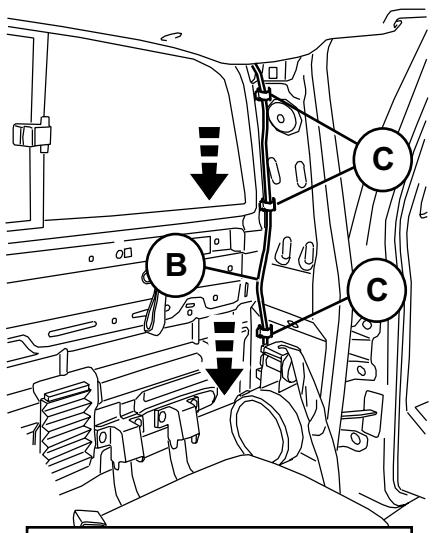


46

EXTENDED CAB ONLY

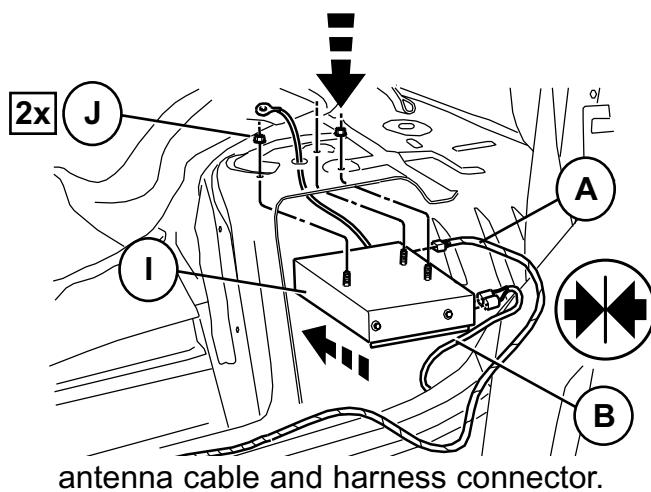


47

EXTENDED CAB ONLY

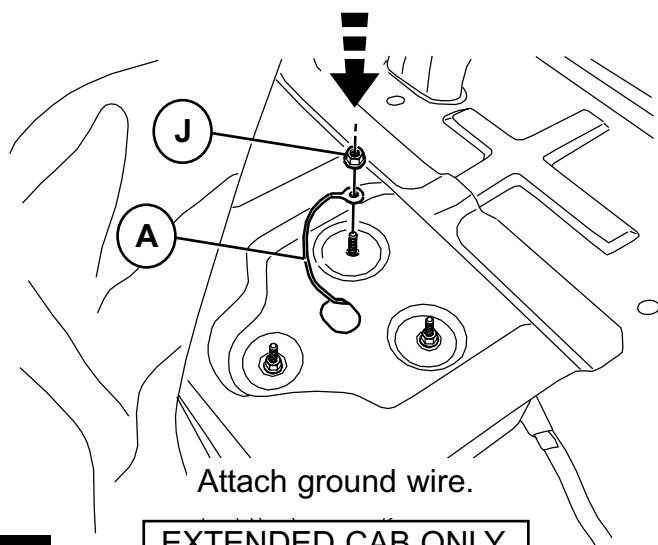


48

EXTENDED CAB ONLY

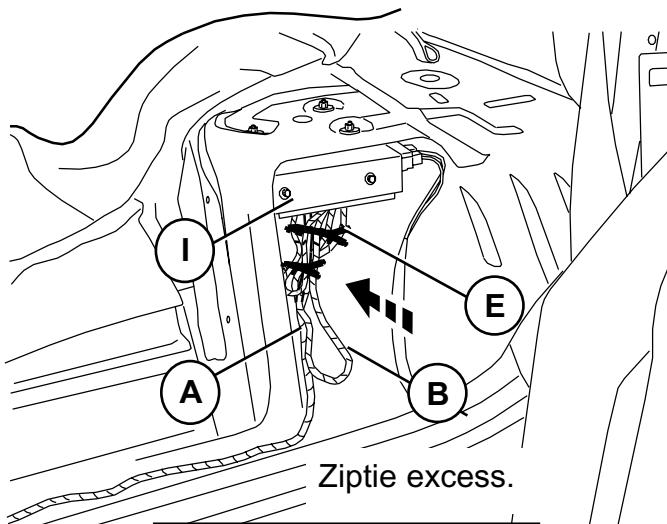


49


EXTENDED CAB ONLY

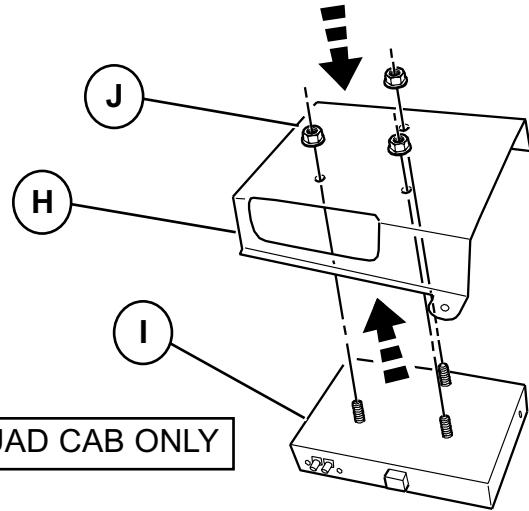


50

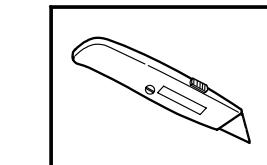

Locate floor dimples under carpet.

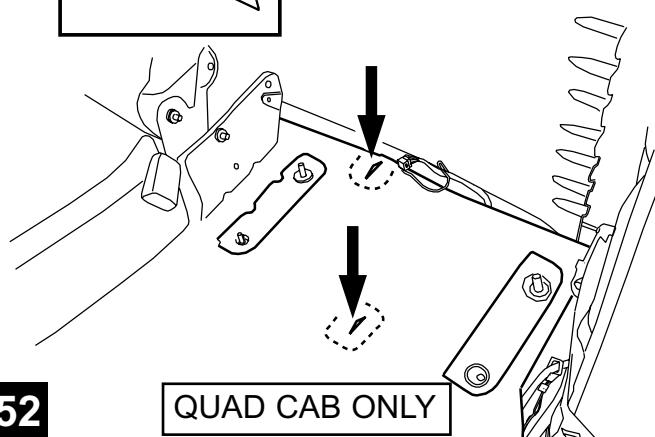


QUAD CAB ONLY

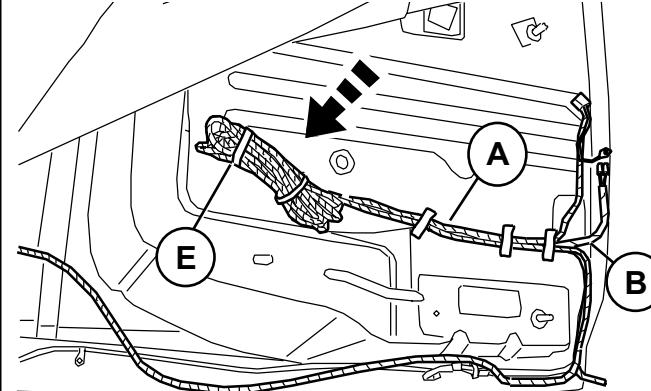

51

Ziptie excess and tape harness to sheet metal.

QUAD CAB ONLY

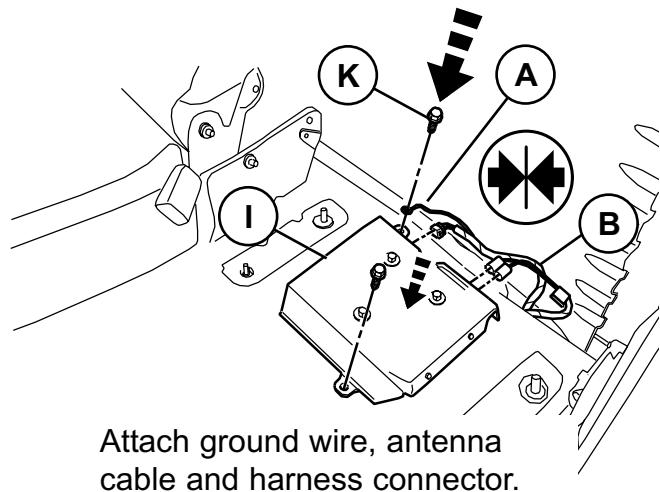


Attach ground wire, antenna cable and harness connector.

QUAD CAB ONLY

- Re-install all previously removed and saved panels, and fasteners.
- Tighten shoulder belt anchor to 29 ft.-lbs. (39 N·m).
- Ensure that harness and cables are not pinched under trim panels
- Drive vehicle outside to allow for a clear satellite signal to the antenna.

IMPORTANT: Please affix ESN stickers to owner's manual, mirror tag and orange tag. Install mirror tag and attach orange card to invoice.
(These items in receiver kit).

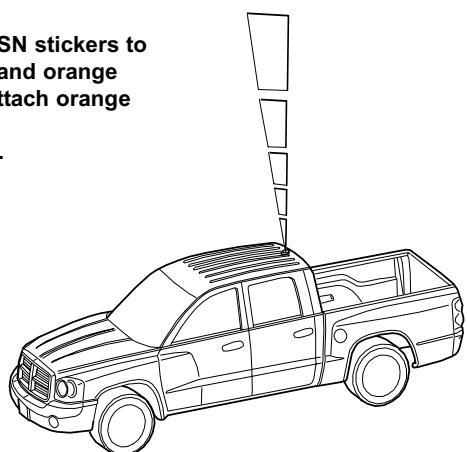

54