


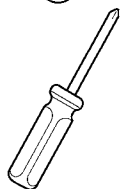
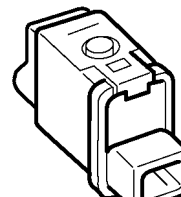
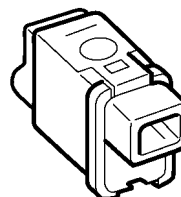
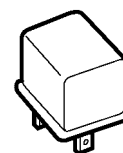
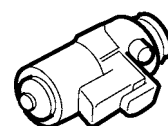
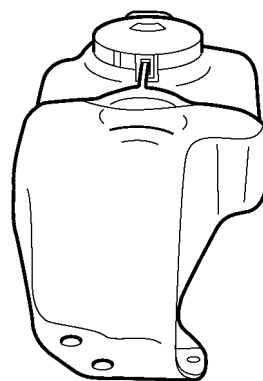


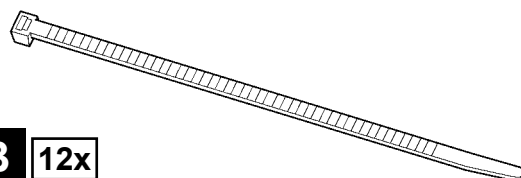

JEEP WRANGLER





Hardtop Wiring


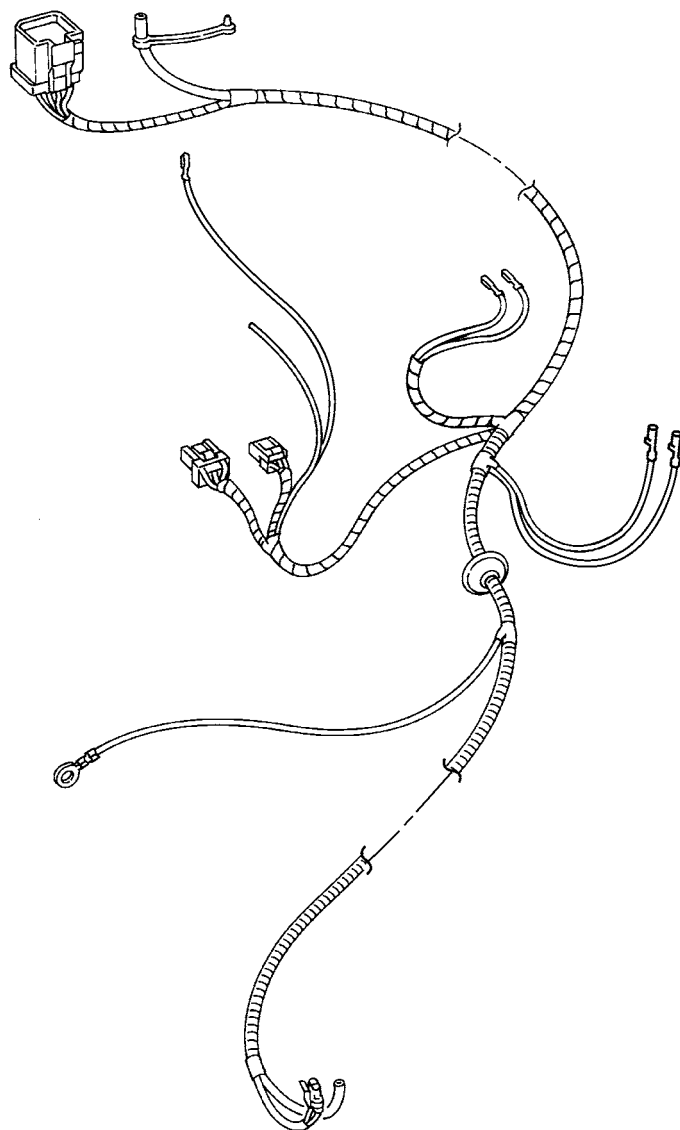


10mm





15mm

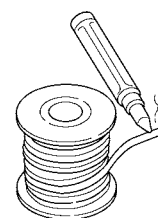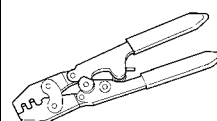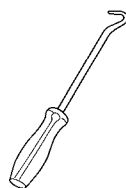

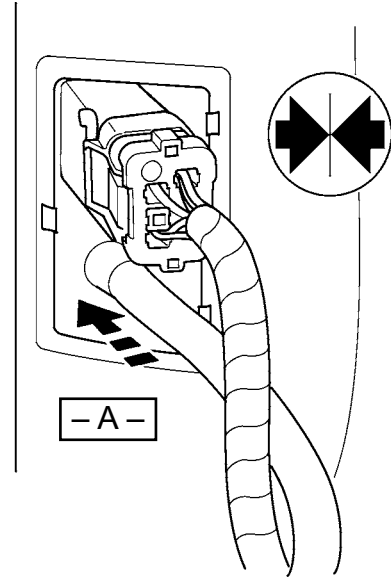
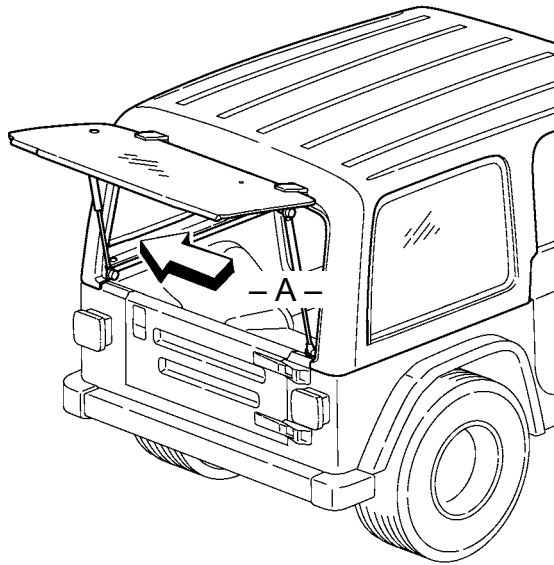


1

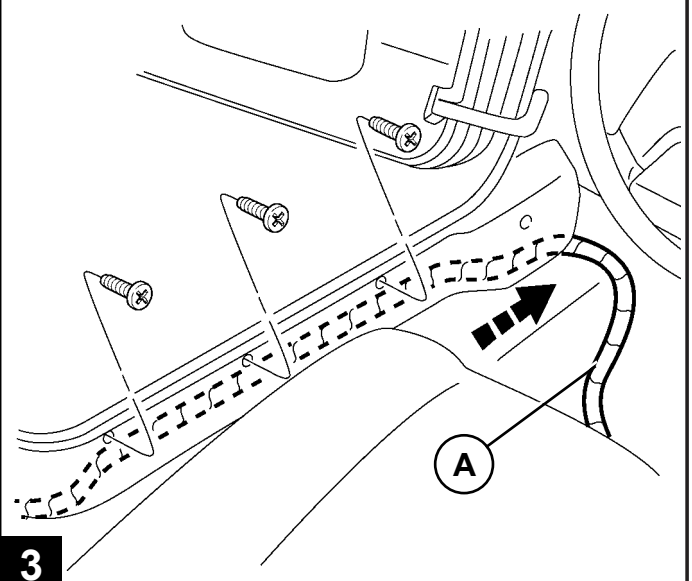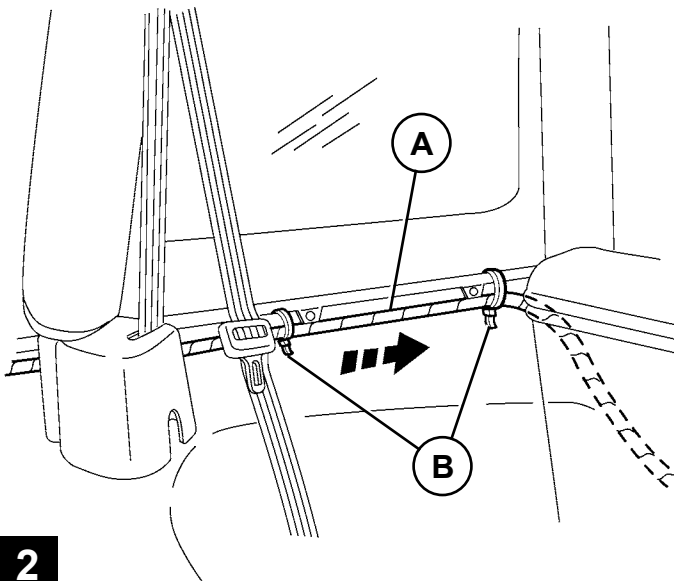







2


3

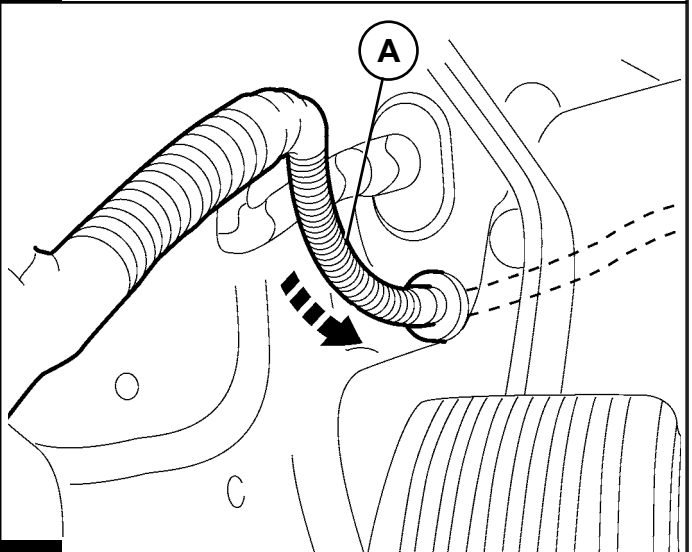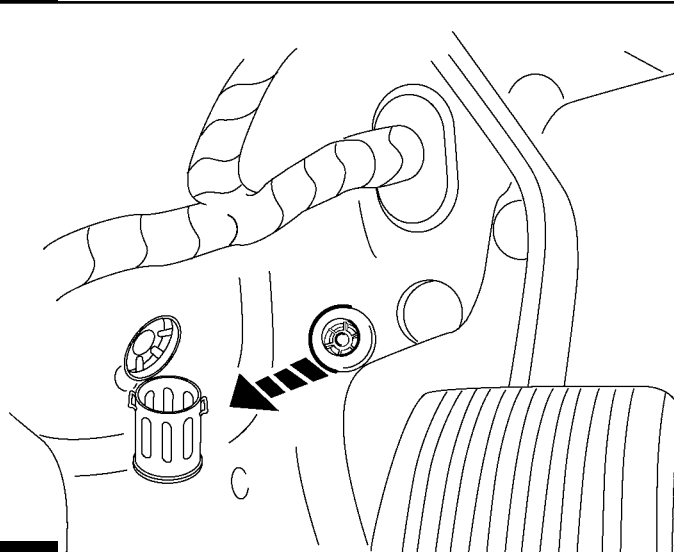


4


5

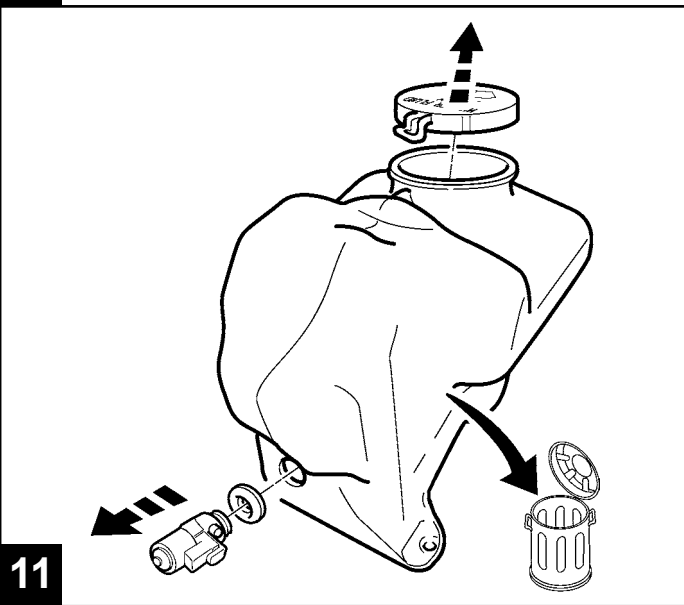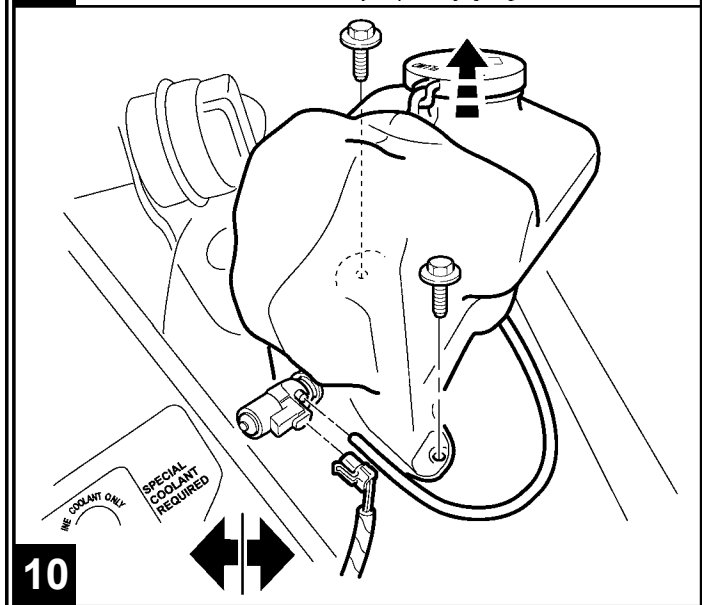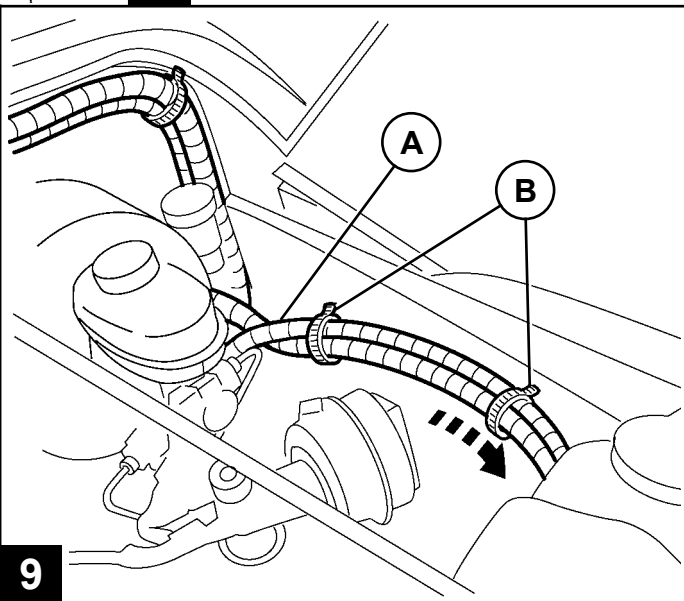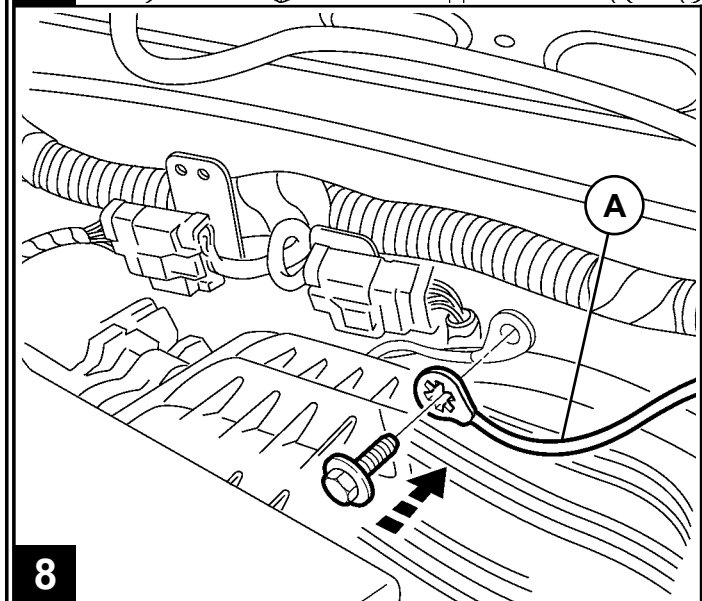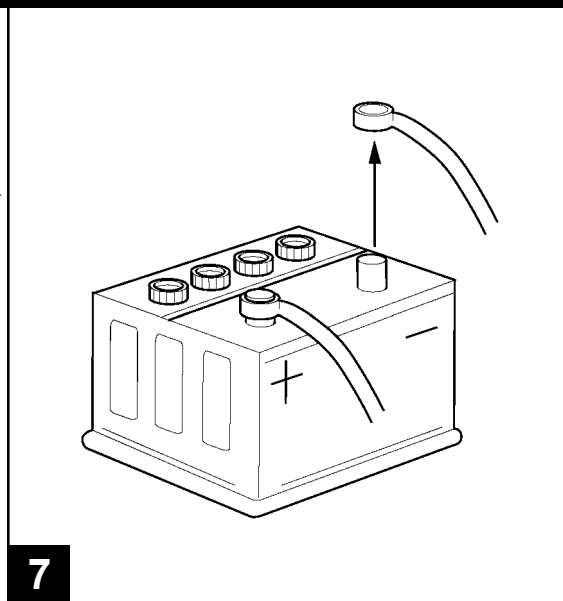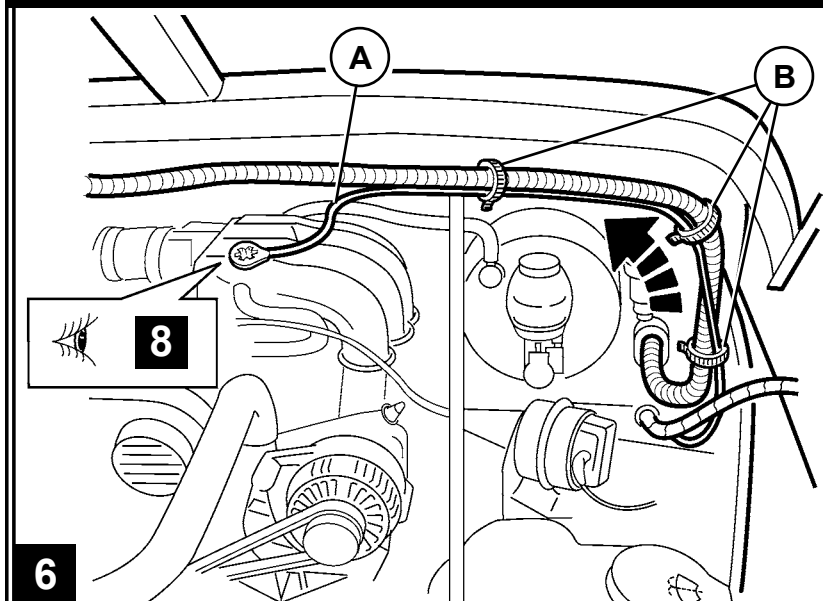

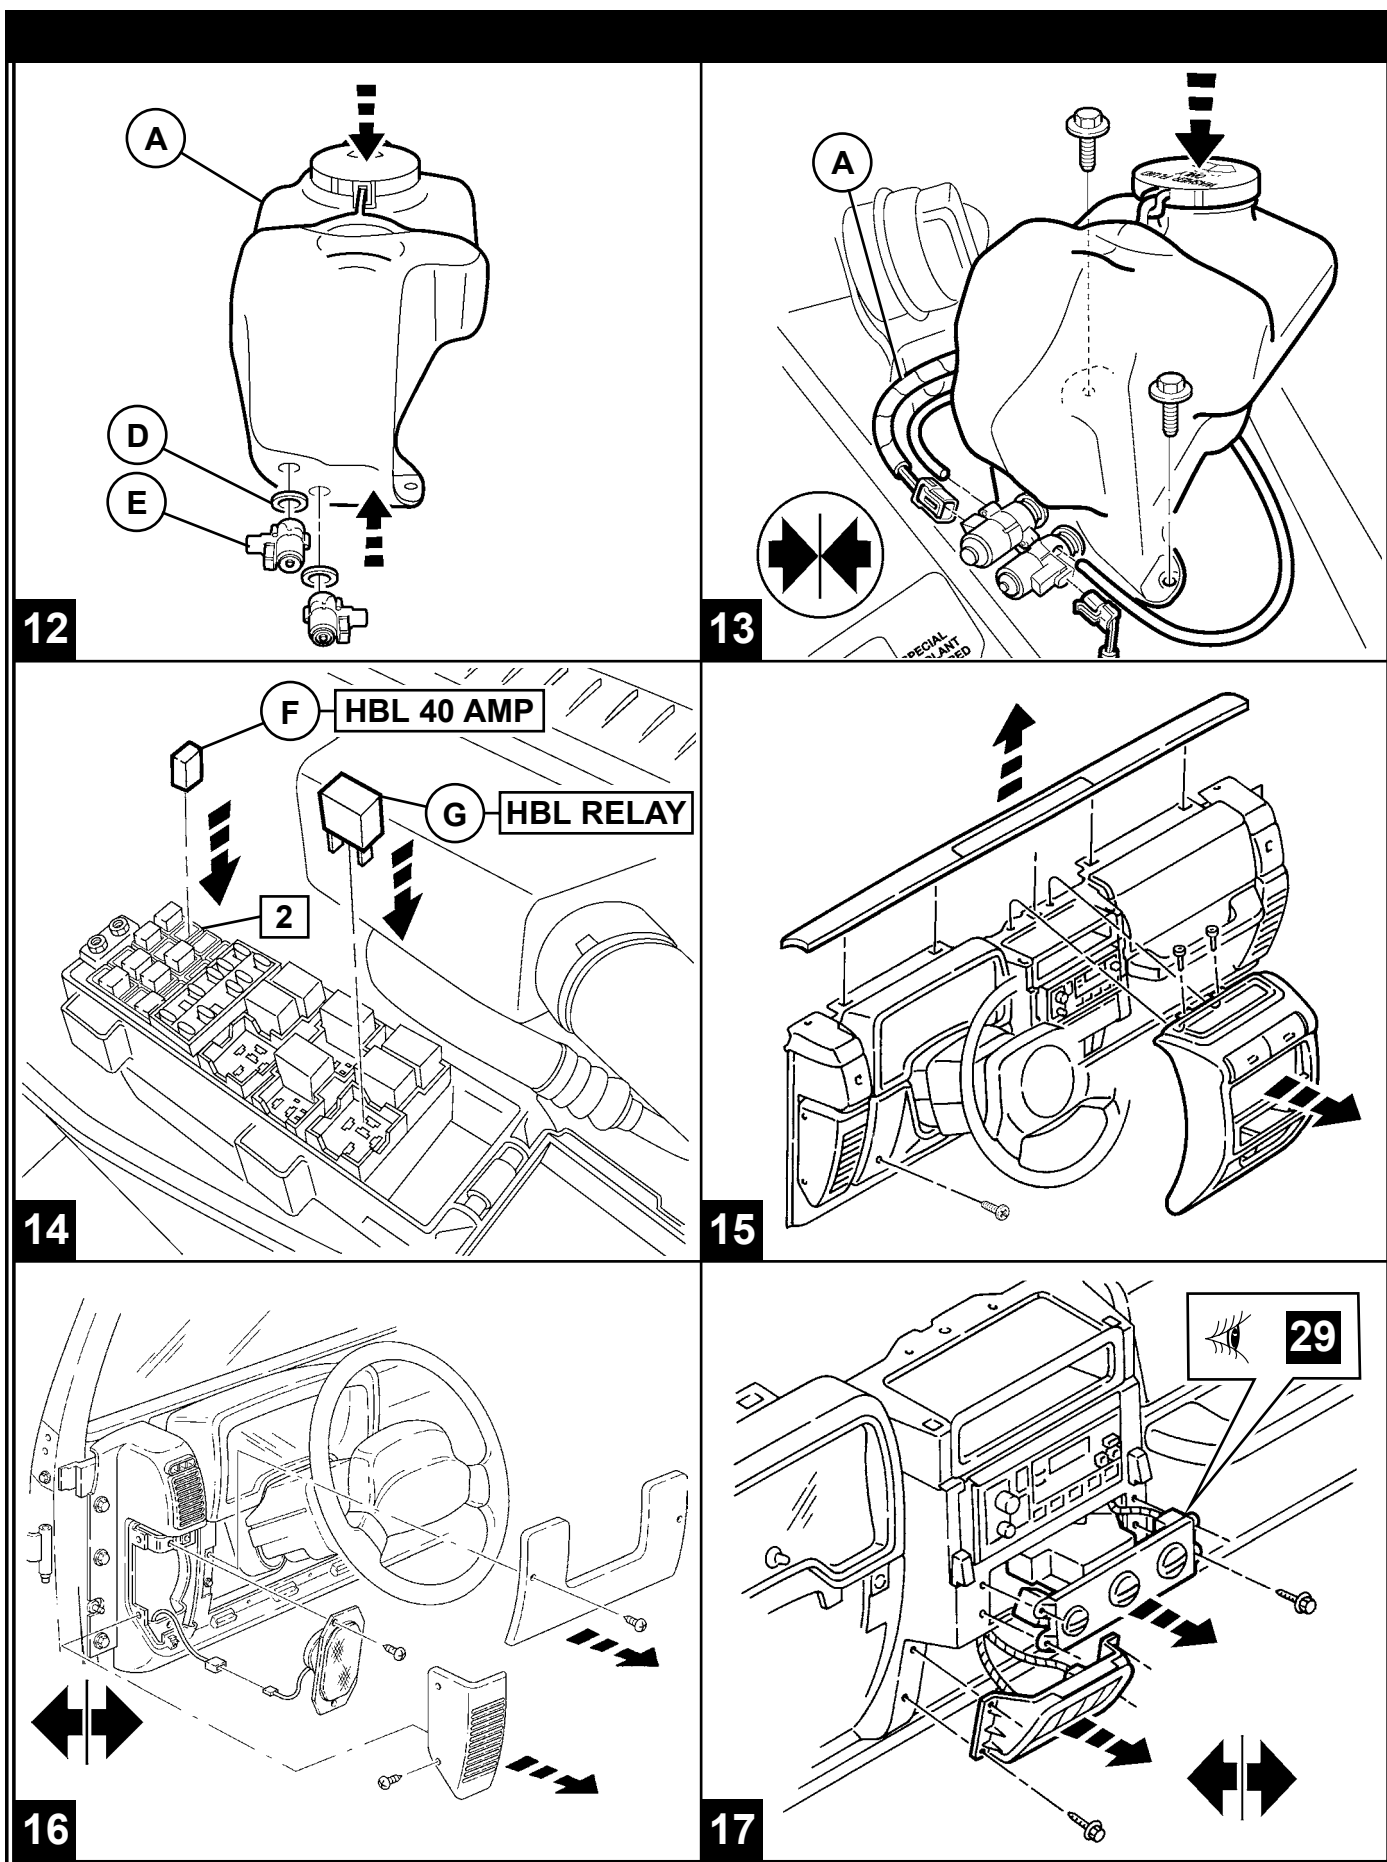


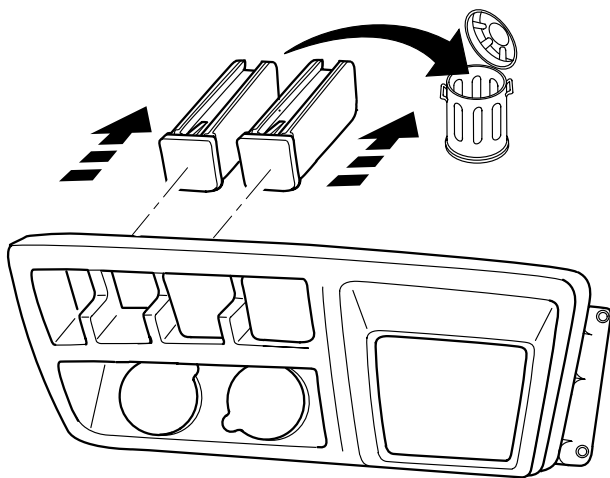


18

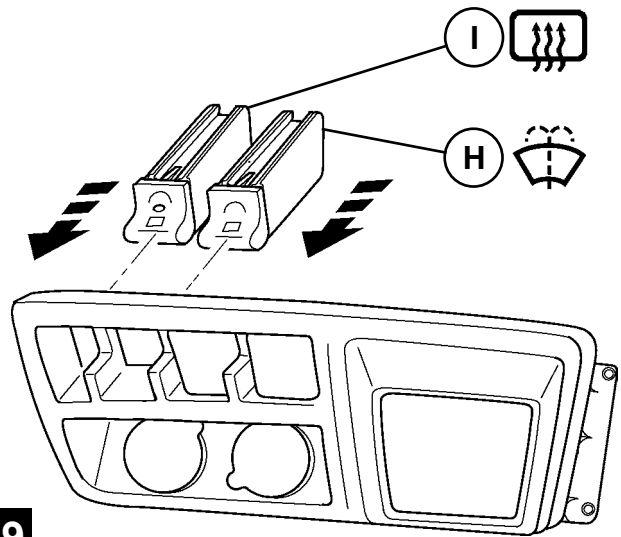


19

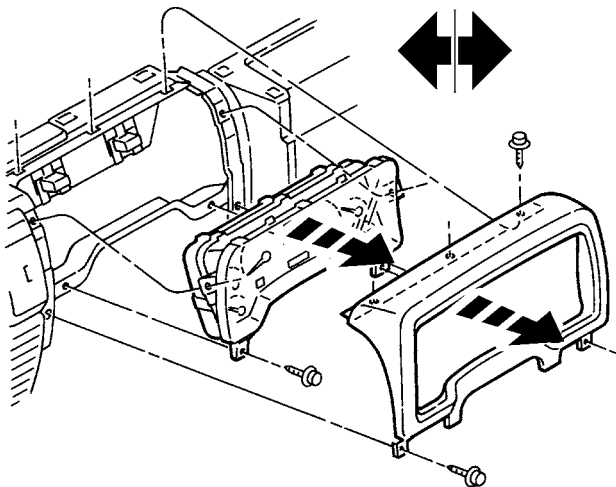


20

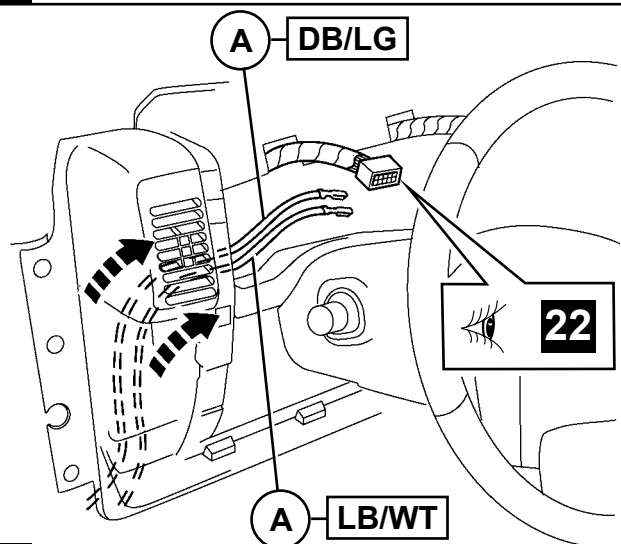


21


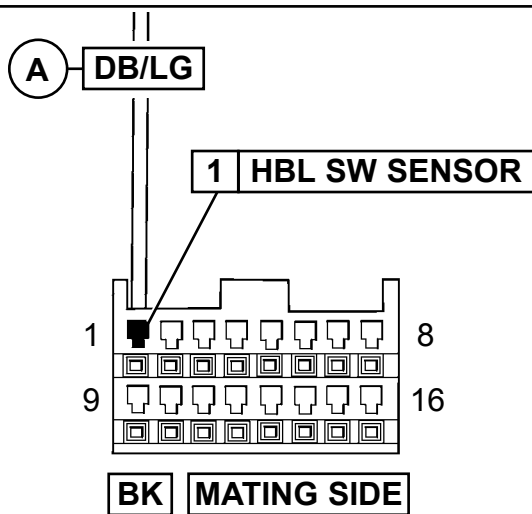


22

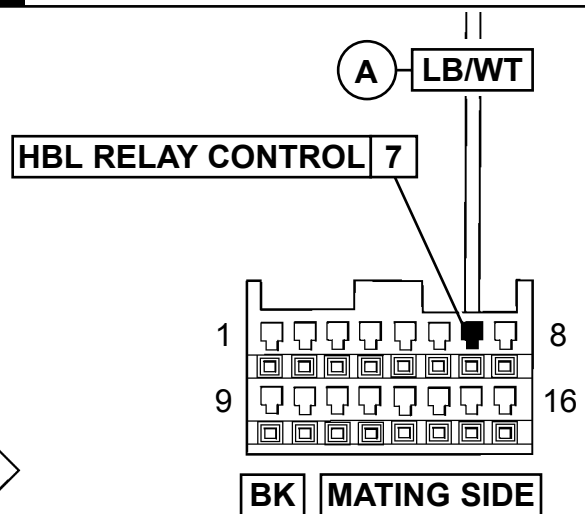


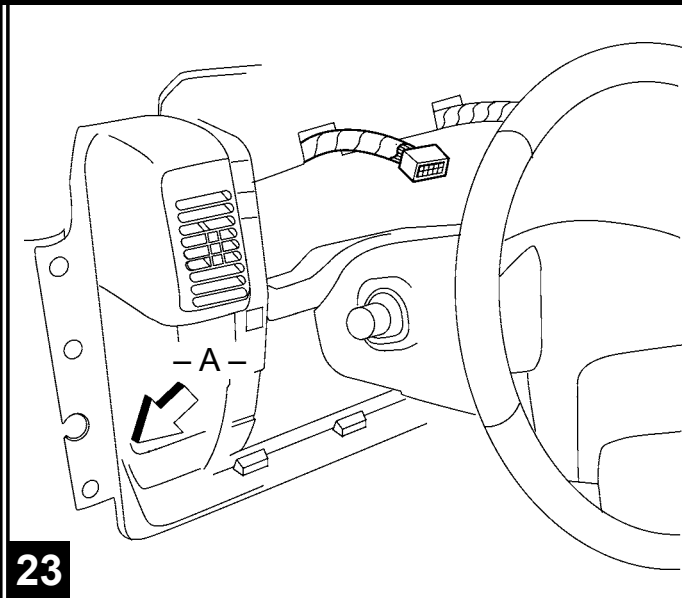


23

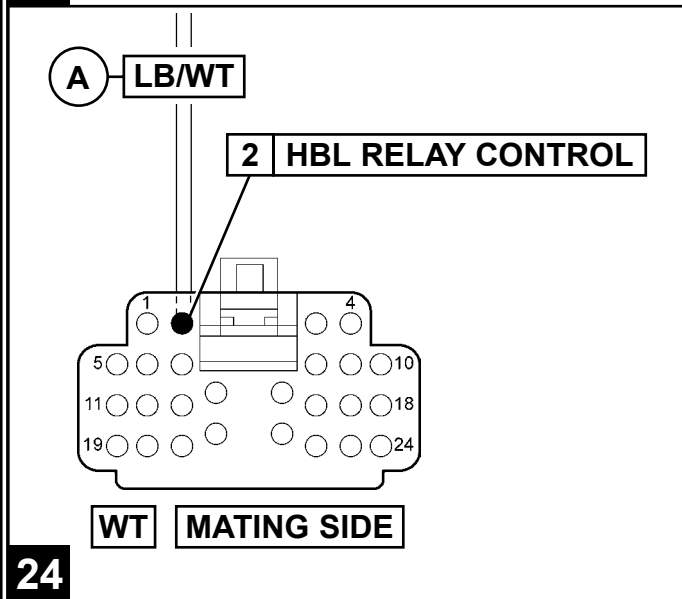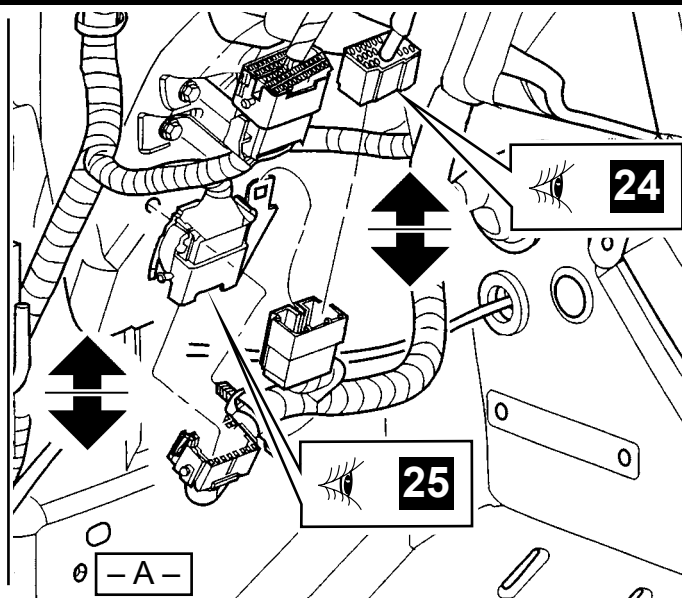


24

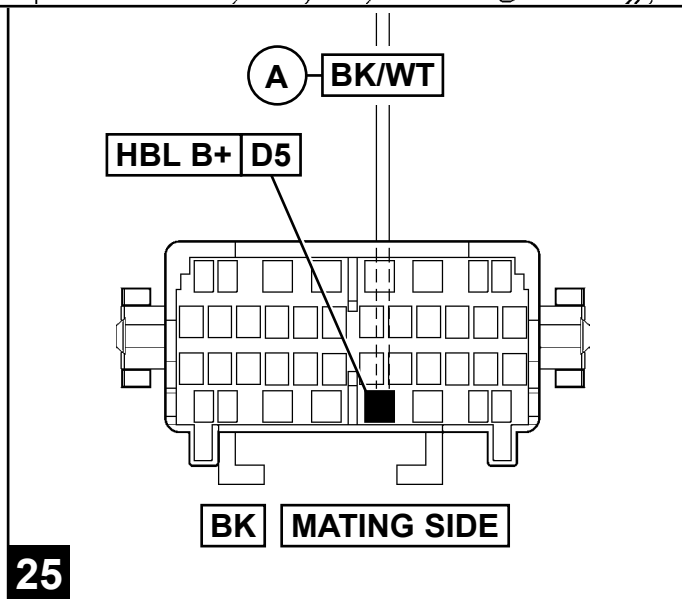

25

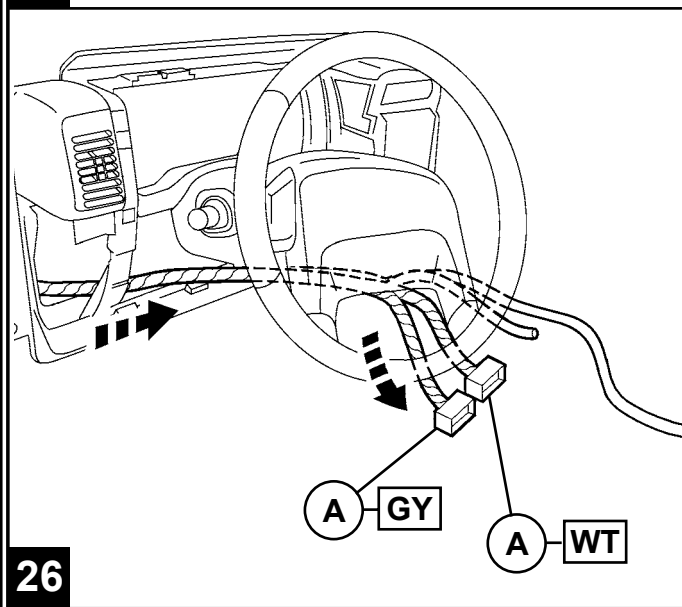

26

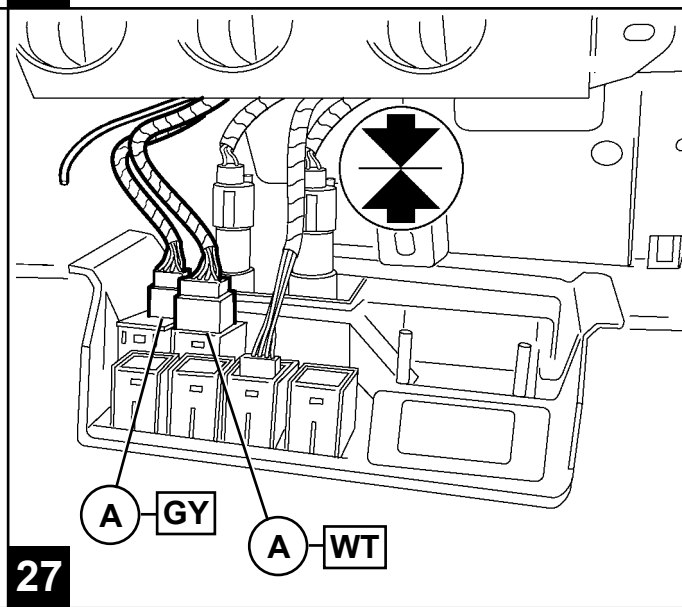

27

