






FIAT SPORT GRILLE

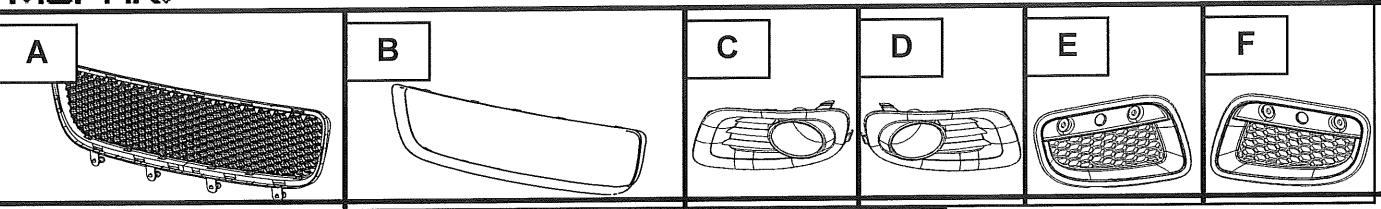

FRONT




1

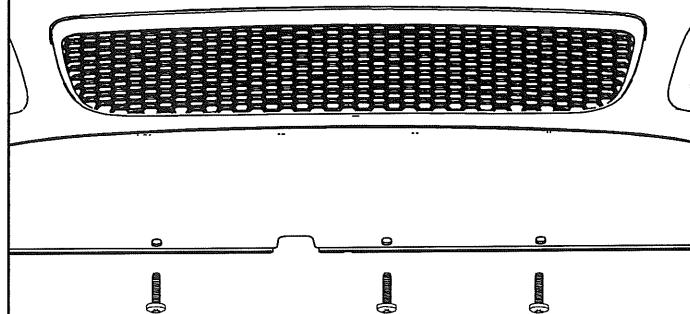


Remove 3 bolts from underside of front Fascia using T30 Torx bit. Save bolts for re-installation.

2

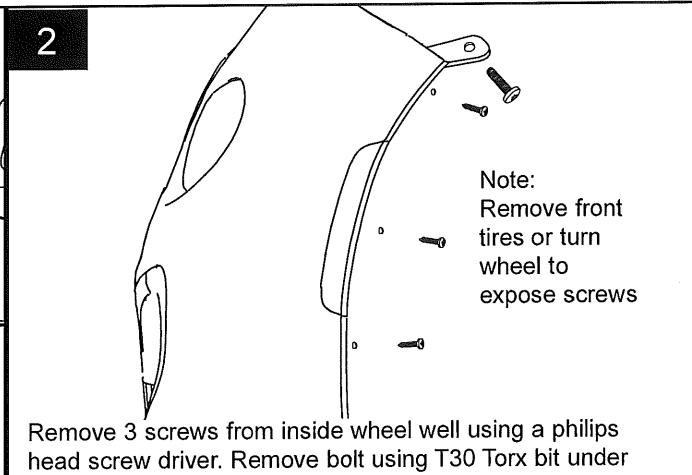


Note:
Remove front
tires or turn
wheel to
expose screws

3

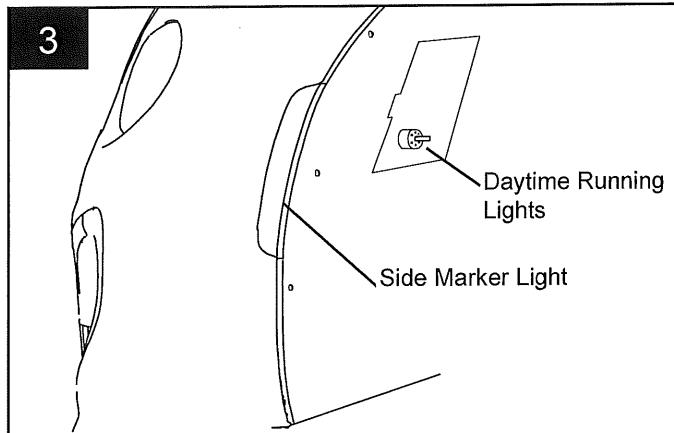

Disconnect headlight wire harness. Disconnect side marker light wire harness. Disconnect Daytime running light wire harness. Repeat for opposite side.

4

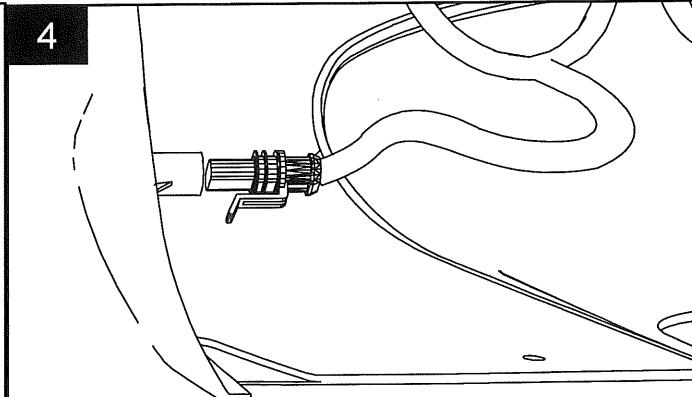


Disconnect fog light wire harness at drivers side of radiator support.




MOPAR.

5

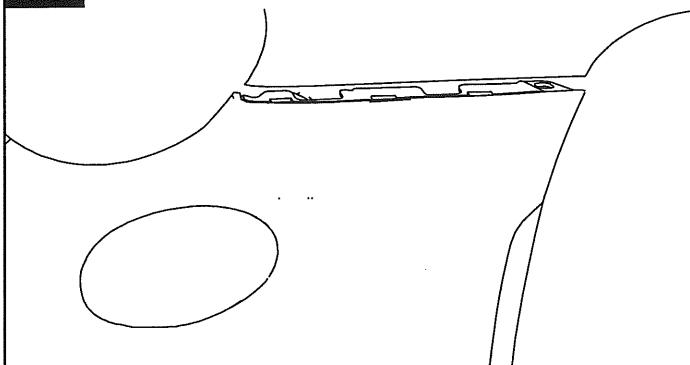


Gently pull top corner of the front fascia to dis-engage clips. Repeat for opposite side.

6

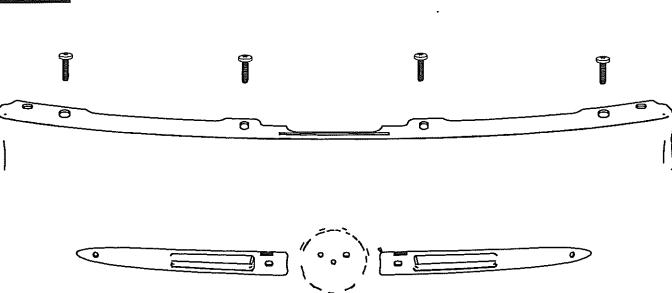


Remove bolts at top of fascia using a T30 Torx bit. Completely remove front fascia from vehicle. Save bolts for re-installation.

7

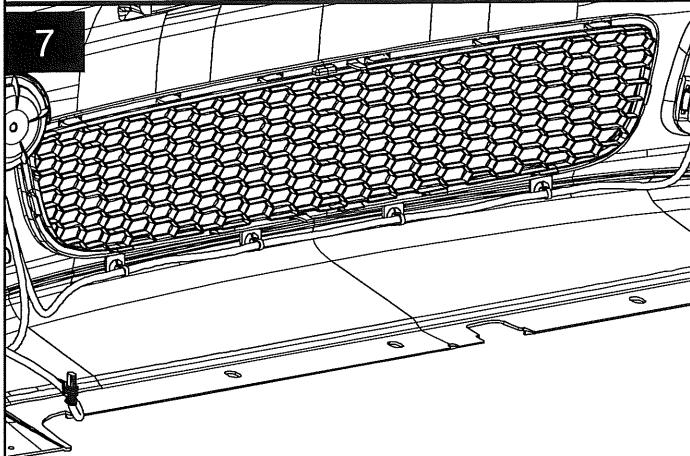


Remove 4 wire harness clips from bottom of lower grille

8

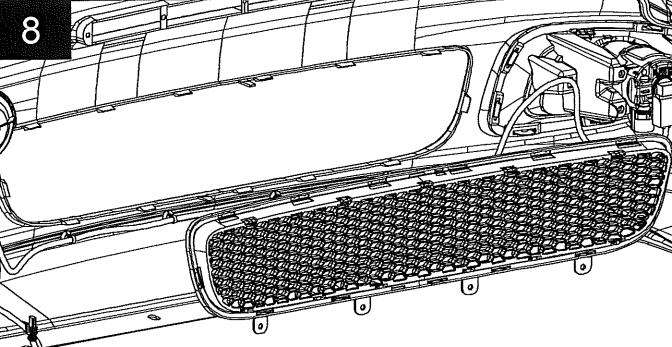


Remove lower grille from opening. A pry tool may be required for this step. Install supplied lowered grille (Item A) to fascia. Ensure all clips are fully engaged by applying pressure at each clip location.

9

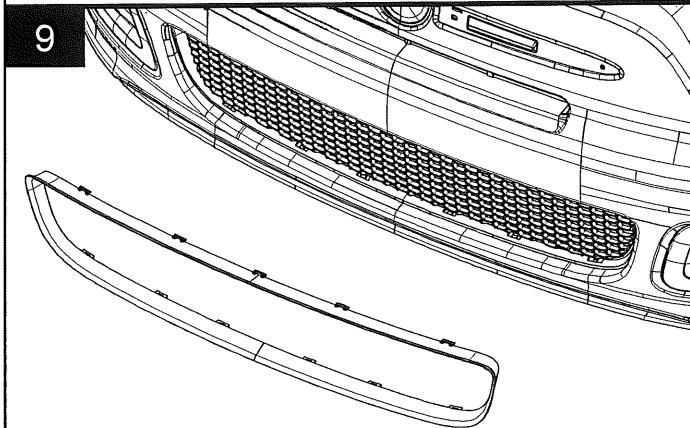

Install lower grille surround (Item B). Ensure all clips are fully engaged by applying pressure at each clip location.

10

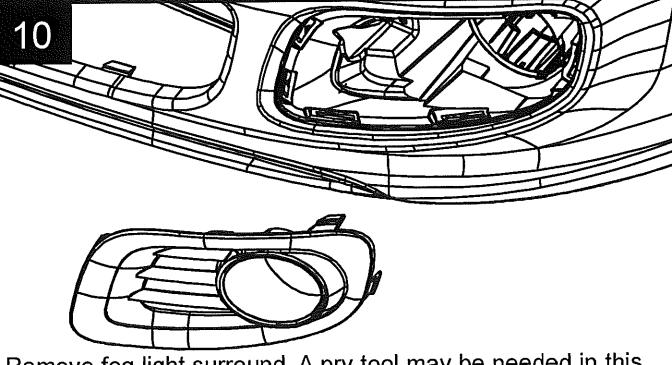


Remove fog light surround. A pry tool may be needed in this step. Install supplied fog light surround (Item C). Ensure all clips are fully engaged by applying pressure at each clip location. Repeat for opposite side.

Re-install fascia repeating step 1-6 in reverse order.




REAR

11

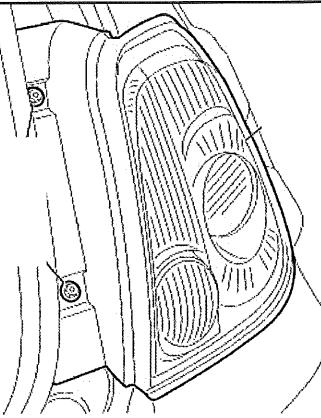


Remove 2 bolts using a 10mm socket. Save bolts for re-installation.

12

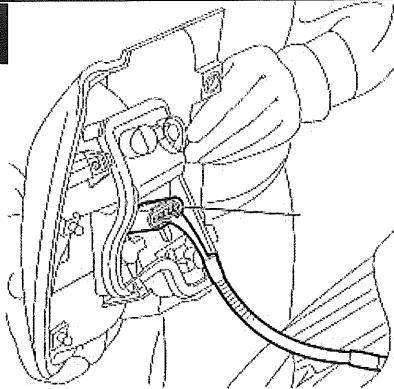


Disconnect rear tail lamp wire harness. Set Tail lamp aside for re-installation.

13

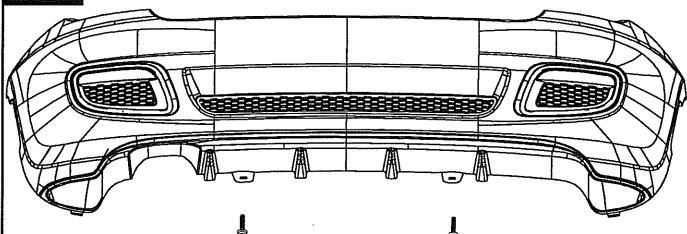


Remove 2 bolts using a T30 Torx bit. Save bolts for re-installation.

14

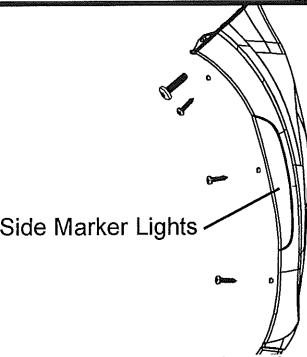


Remove 3 screws from inside wheel well using a philips head screw driver. Remove bolt using T30 Torx bit. Disconnect side marker light wire harness. Repeat for both sides. Save fasteners for re-installation.

15

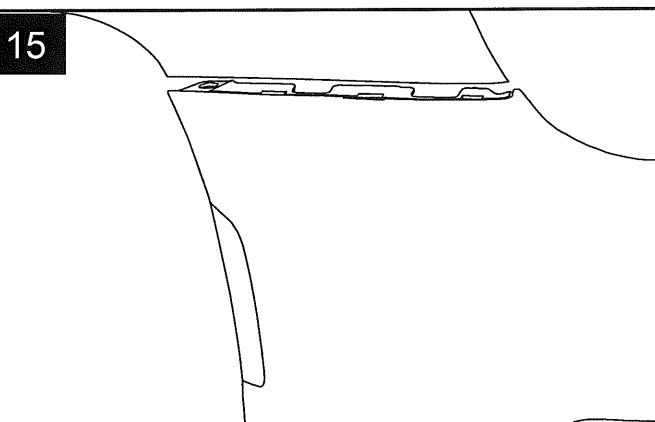

Gently pull top corner of the front fascia to dis-engage clips. Repeat for opposite side.

16

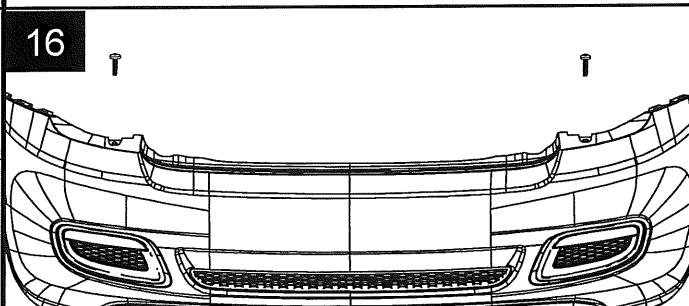


Remove bolts at top of fascia using a T30 Torx bit. Completely remove rear fascia from vehicle. Save bolts for re-installation.




MOPAR.

17

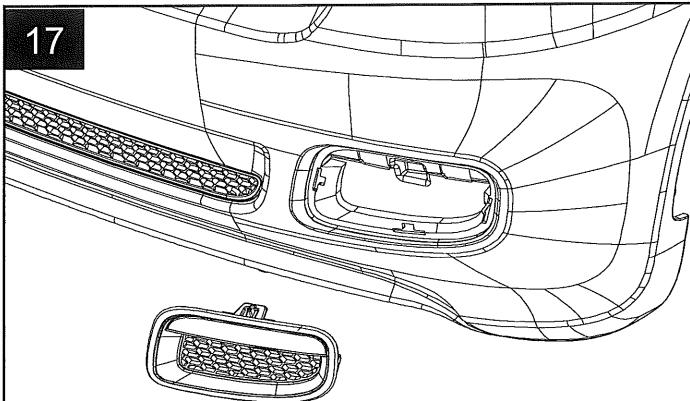


Remove rear side reflector bezel. A pry tool may be needed in this step. Repeat for opposite side.

18

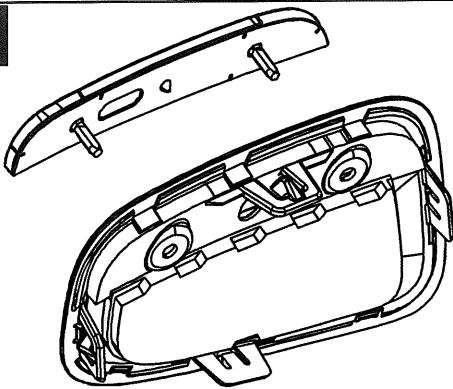

Remove fasteners from rear side bezel to remove reflector. Install reflector on supplied rear side bezel (Item E). Repeat for opposite side

19

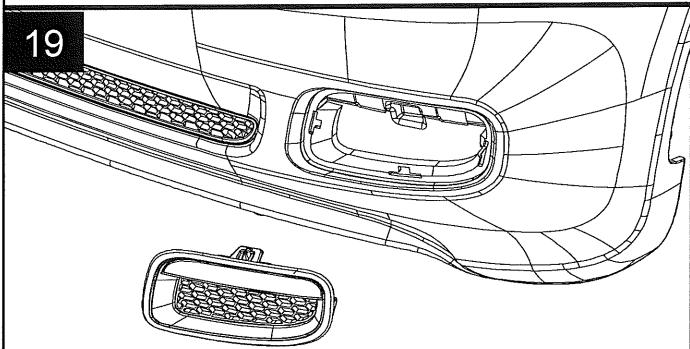

Install supplied Rear Side Reflector bezel (Item E). Ensure all clips are fully engaged by applying pressure at each clip location. Repeat for opposite side

Re-install fascia repeating step 11-16 in reverse order.