






Tool Box

www.mopar.com

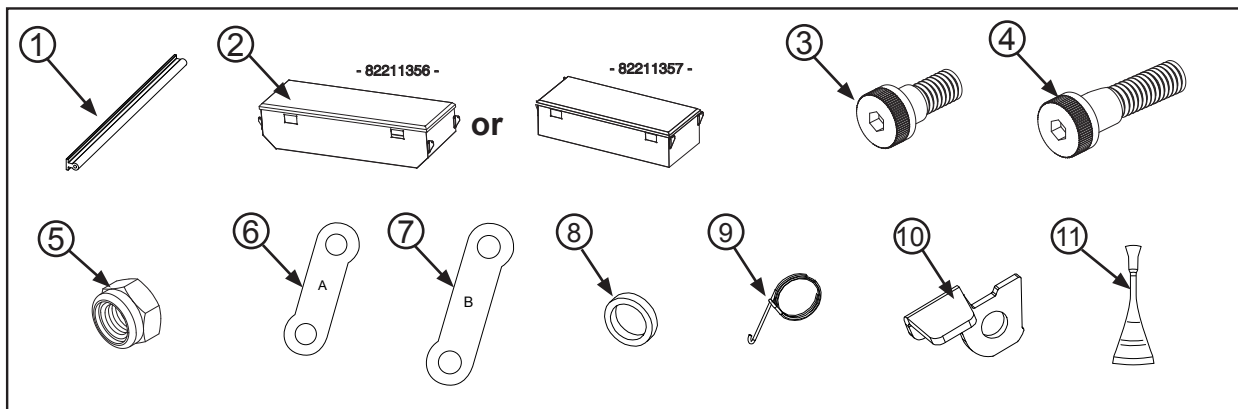


Call Out	Description	Quantity	Service Part (Y/N)	Part Number
1	Extrusion	2	Y	
2	Toolbox	1	Y	
3	Shoulder Bolt P-0759	7	Y	
4	Shoulder Bolt P-0758	1	Y	
5	Nut	4	Y	
6	Swing Link A	4	Y	
7	Swing Link B	4	Y	
8	Spacer	4	Y	
9	Spring	1	Y	
10	Lock Bracket	1	Y	
11	Threadlocker	1	Y	

Tools Required / HERRAMIENTAS NECESARIAS / OUTILS NECESSAIRES


 4 mm Allen Hex 3/16 Allen Hex	 1/2"	 Torque Wrench	 1/2" / 10mm
RECOMMENDED LUBRICANTS	LUBRICANTES RECOMENDADOS	LUBRIFIANTS RECOMMANDÉS	
SILICONE SPRAY LUBE #04318070AB	LOCK LUBRICANT #04318084	SPRAY WHITE LUBE LITHIUM GREASE #04318066AB	

Genuine Accessories

NOTE: Determine application of vehicle prior to beginning assembly of Toolbox Rails. Vehicles **Classic 1500**, **HD2500/3500** will use **Swing Link A**. Vehicles **Ram 1500** will use the longer **Swing Link B**.

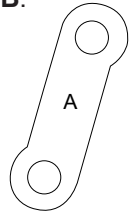


Swing Link A

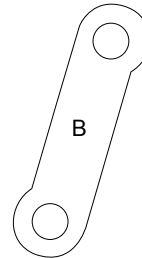

Swing Link B


1

Apply 1-2 drops of Threadlocker (11) to Shoulder Bolt (3).

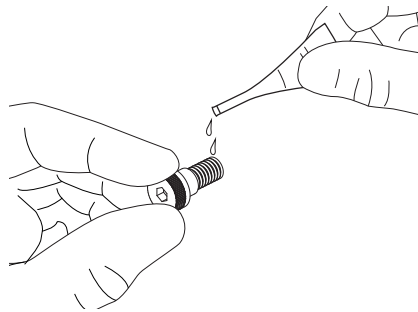

2


Thread Shoulder Bolt (3) into end of Extrusion (1), using Spacer (8) and Swing Link (6 or 7). Tighten to 180 In. lbs. / 20.33 Nm. using a 3/16" allen wrench. **REPEAT (3) TIMES.**

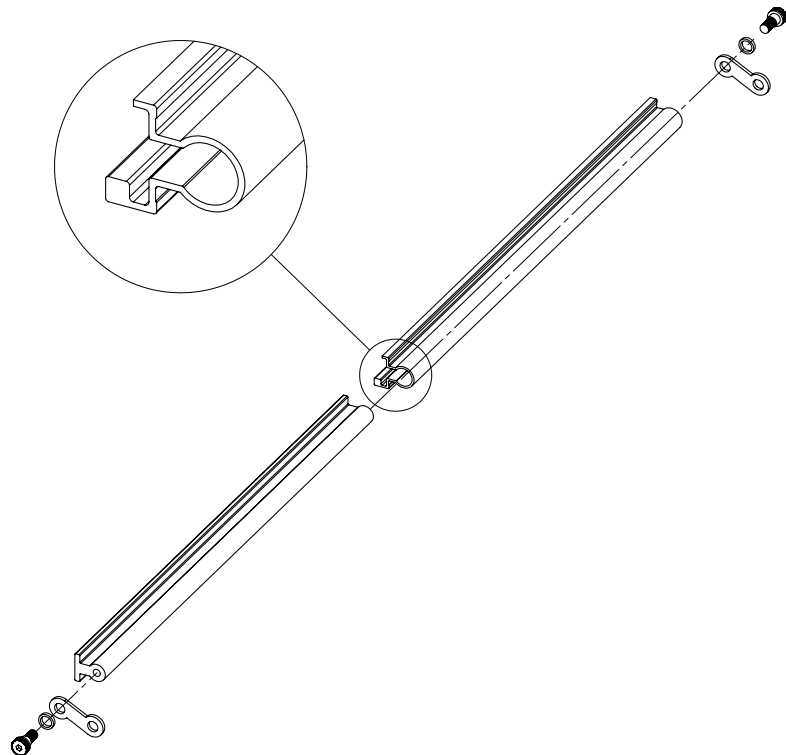

3


Genuine Accessories

For the fourth Shoulder Bolt (4), install Lock Bracket (10) and Spring (9), in addition to the Spacer (8) and Swing Link (6 or 7). Tighten to 180 In. lbs. / 20.33 Nm. using a 3/16" allen wrench.

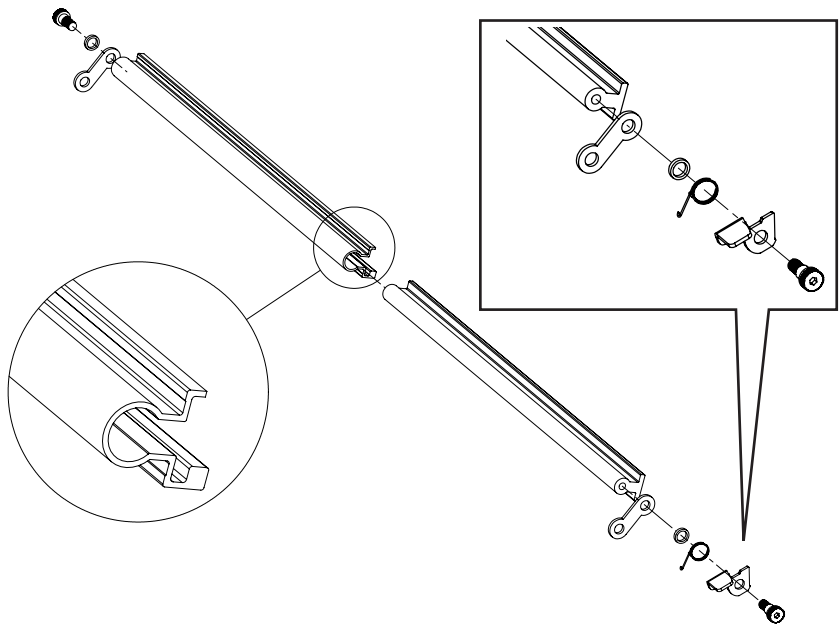


4

Completed Toolbox Rail assemblies.

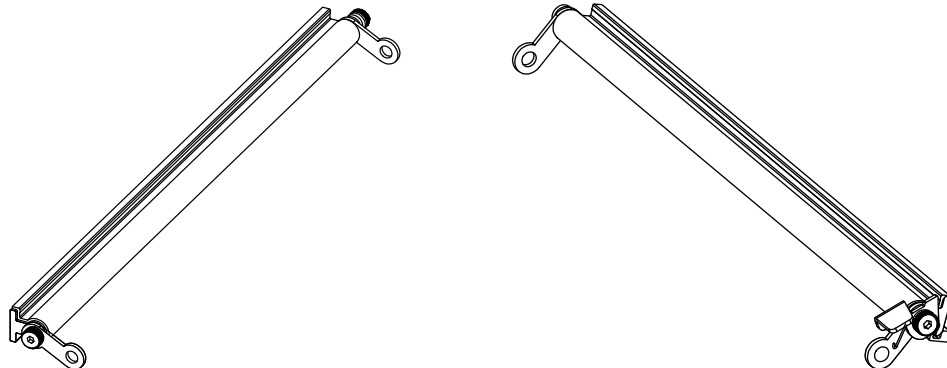

5

NOTE: Before proceeding adjust Spring (9) position as shown to create tension.

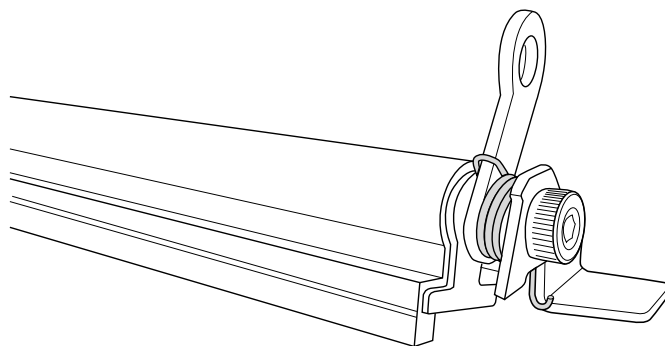

6

Genuine Accessories



CAUTION - Before traveling move and secure toolbox in front most position on slide system.

La PRECAUCIÓN - antes del movimiento que viaja y asegura la caja de herramientas en frente la mayoría de la posición respecto a sistema de la diapositiva.


L'ATTENTION - avant mouvement de déplacement et fixent la boîte à outils dans l'avant la plupart de position sur le système de glissière.

DRIVER


PASSENGER

DRIVER



PASSENGER

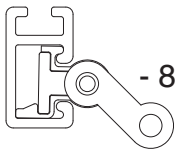

- 82211357 -


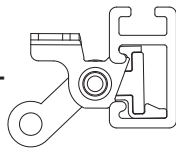


- 82211356 -

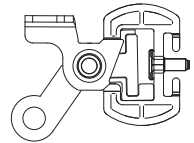
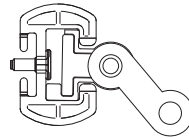


7

- 82211356 -

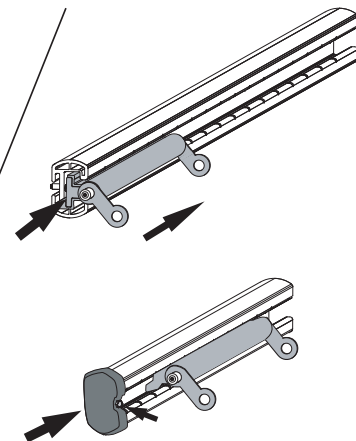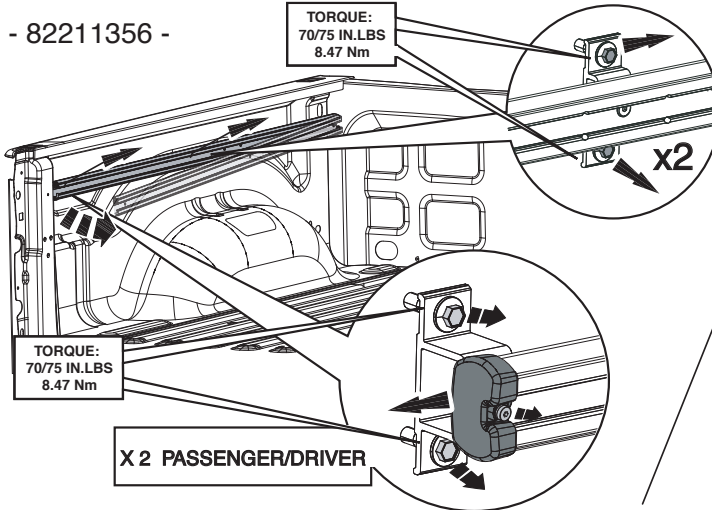

- 82211357 -

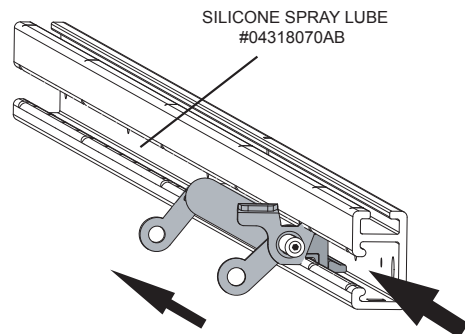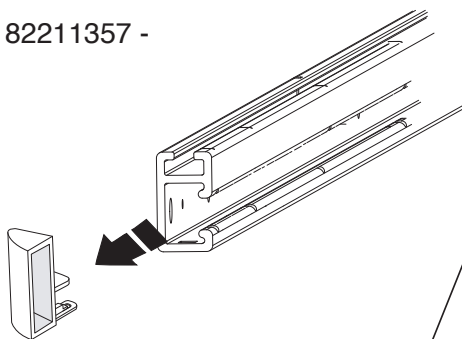

8

Genuine Accessories

NOTE: If using Swing Link "A" align with bracket hole "A". If using Swing Link "B" align with bracket hole "B". Refer to **Step 1**.

- 82211356 -
- 82211357 -

TORQUE:
122 IN.LBS
13.78 Nm

x4

9

SILICONE SPRAY LUBE
#04318070AB

x8


SPRAY WHITE LUBE LITHIUM GREASE
#04318066AB

LOCK LUBRICANT
#04318084



10

Completed toolbox installation.

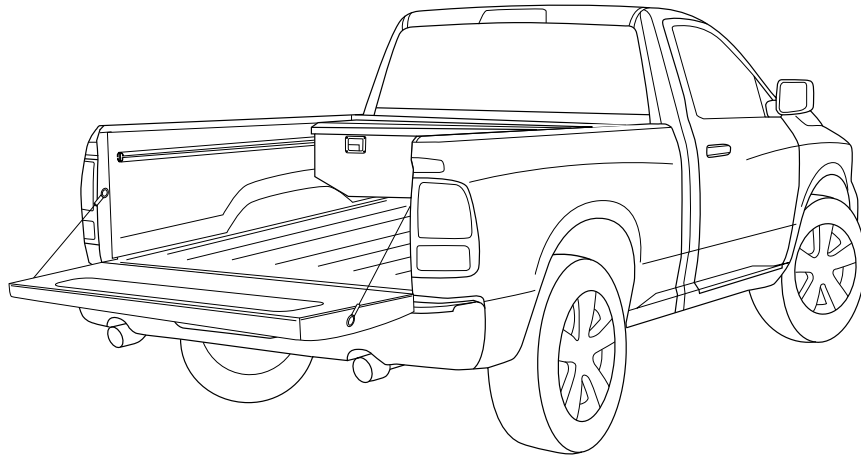

11

- **Fold and place this instruction sheet in your vehicles glove box.**
- **For customer service questions, refer to your Chrysler, Dodge, Jeep, Ram, or Fiat Dealership.**