


CHARGER SPOILER

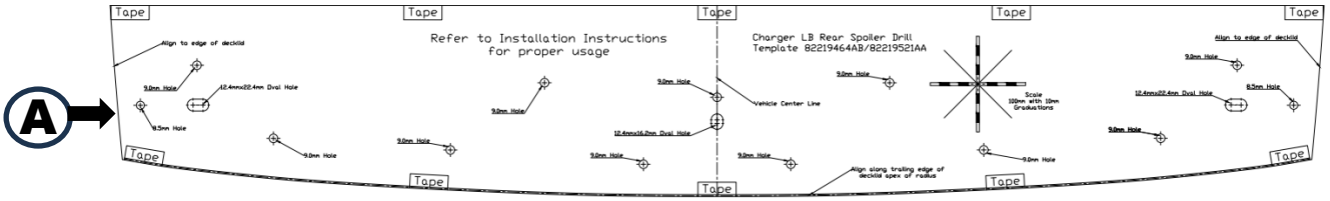

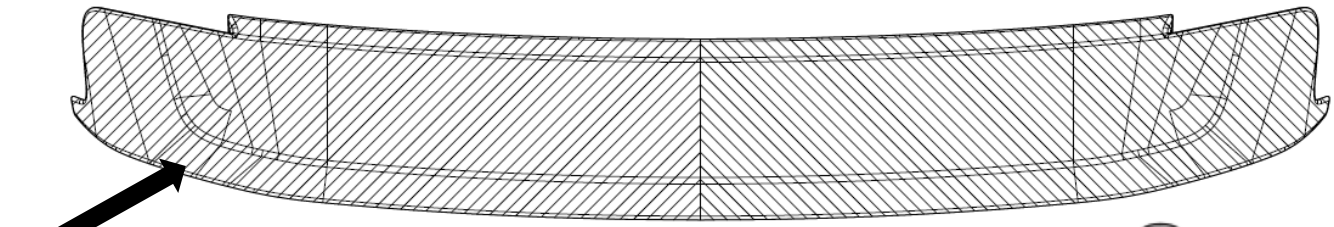



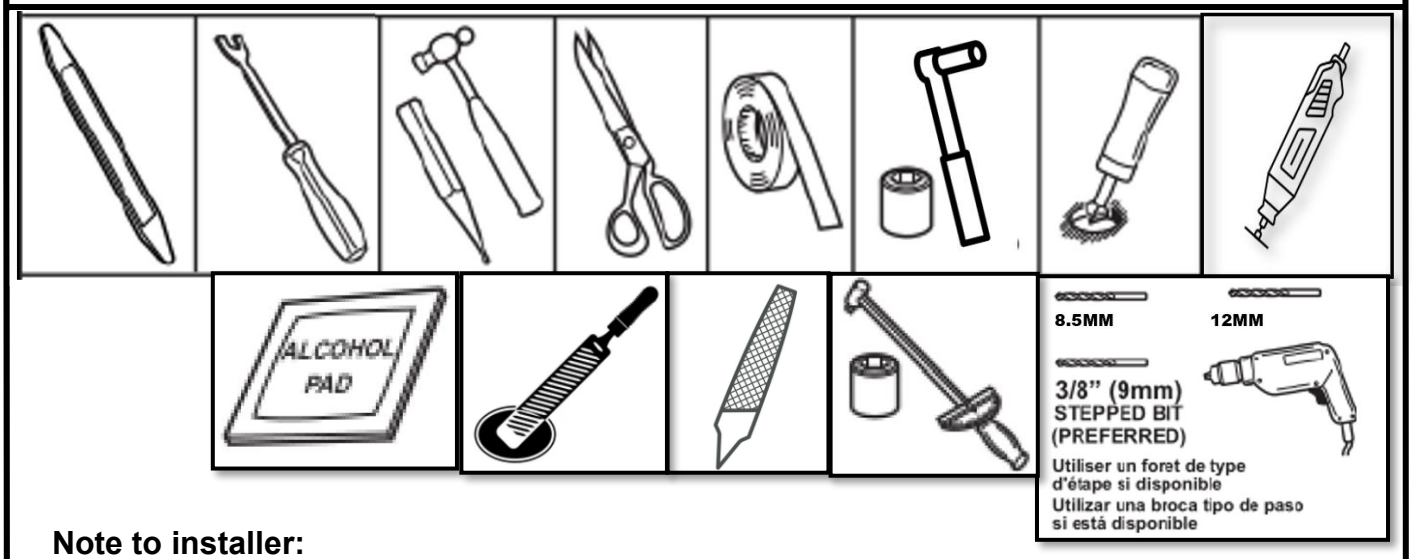


Note to installer:


- Carbon fiber spoiler comes pre-painted in a satin or high gloss exposed carbon finish. No additional work is required.
- Wear clean gloves while handling spoiler to avoid grease on finished surface
- Use a matte or gloss paint surface cleaner such as “Wizards wipe down spray” to clean surface
- Ensure that surface temperatures of decklid sheet metal is between 70°-90° F before starting installation
- Clean decklid surface before and after drilling surface holes
- Mylar drill template (A) is only for decklids that not been predrilled for spoilers

CHARGER SPOILER

1. Disconnect the Battery. Disconnect the negative terminal of the vehicle battery before beginning any electrical work to prevent short circuits or accidental deployment of electrical components

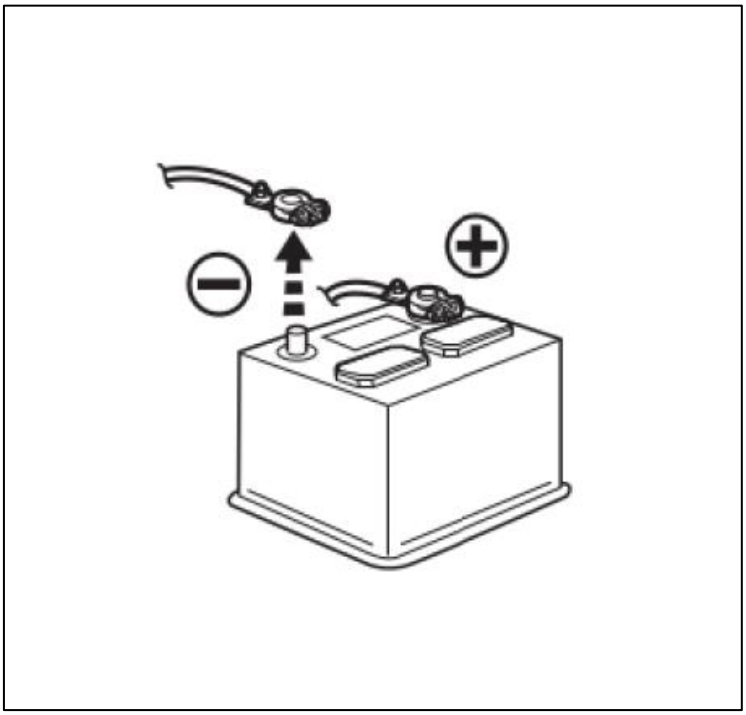


2. Open the trunk

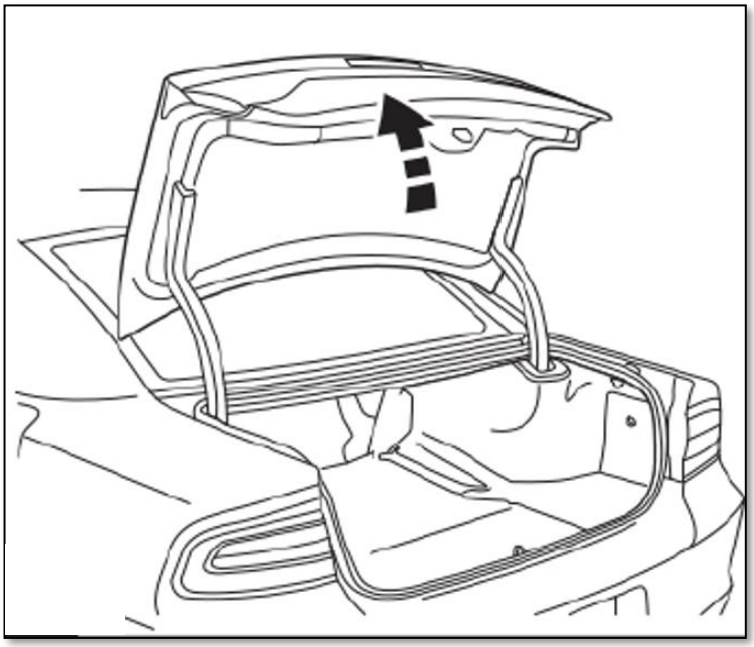


CHARGER SPOILER


3. Remove Interior Tailgate Trim Panel. Use a plastic trim removal tool to carefully release all perimeter clips securing the tailgate's interior plastic cover. Gently pull the panel away and set it aside.

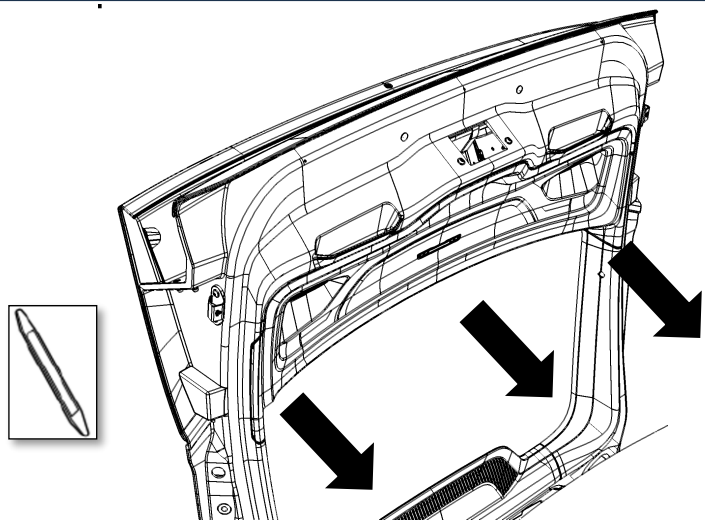

4. Locate the taillight electrical connector.

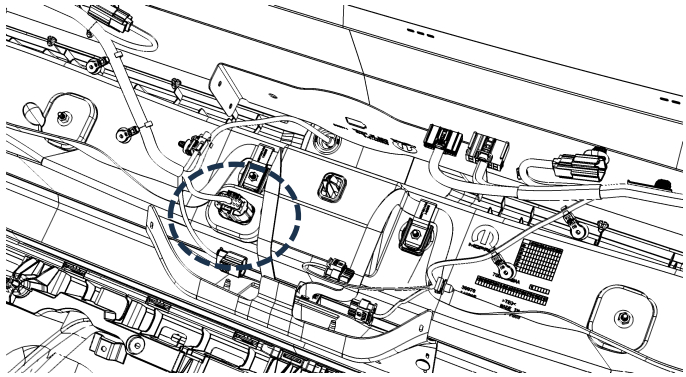


5. Slide the red lock tab backward to unlock, pull and disconnect the harness from the taillight assembly.

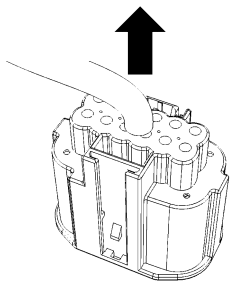


CHARGER SPOILER

6. Remove Inner Taillight Mounting Nuts. Using a 3” extension and 10mm socket, remove the 4 nuts securing the taillight assembly from the inside of the tailgate.

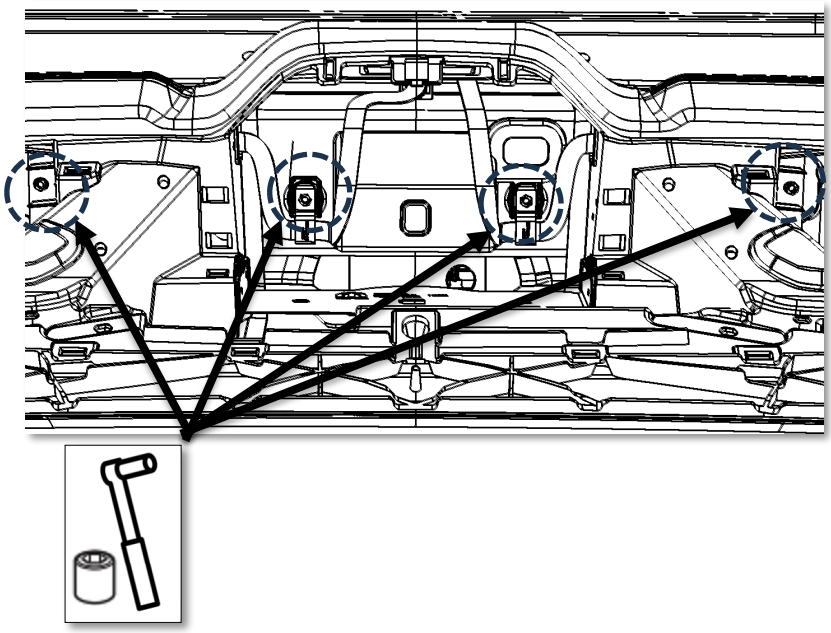


7. Remove Outer Taillight Mounting Nuts. Remove the 4 nuts located at the outer ends of the tailgate using a 3” extension (accessible with the hatch open).

⚠ Caution – Taillight can fall out easily once nuts are removed.

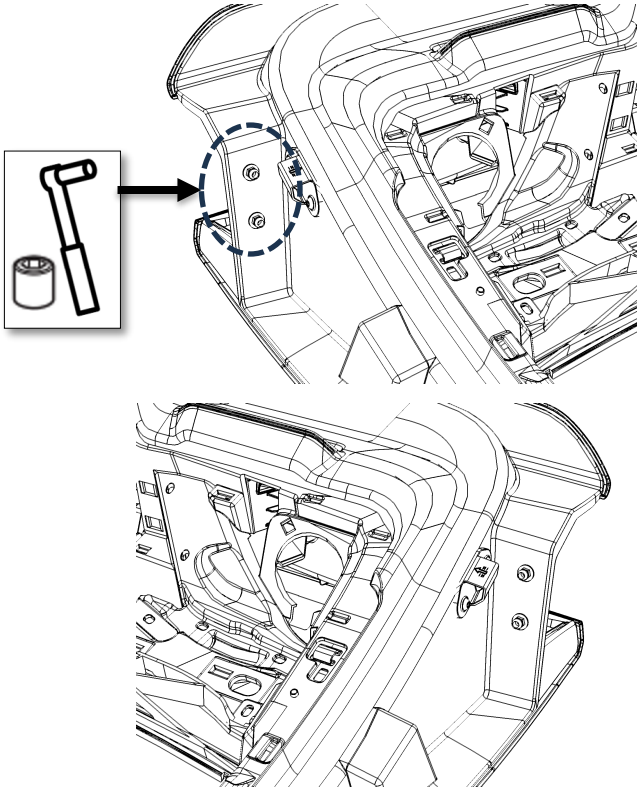


CHARGER SPOILER

8. Remove Taillight Assembly. Carefully pull the taillights straight out from the tailgate, ensuring not to damage alignment pins or remaining clips.

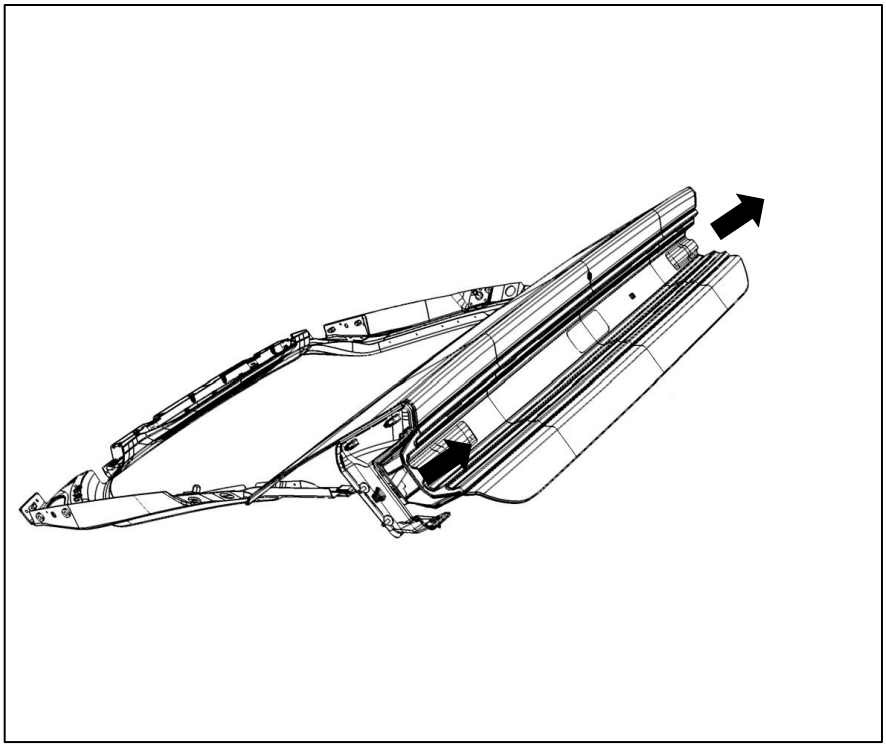


9. Remove Spoiler Mounting Nuts. Inside each exposed taillight cavity, locate and remove the 2 nuts (one per side) using a 3” extension securing the spoiler to the tailgate.

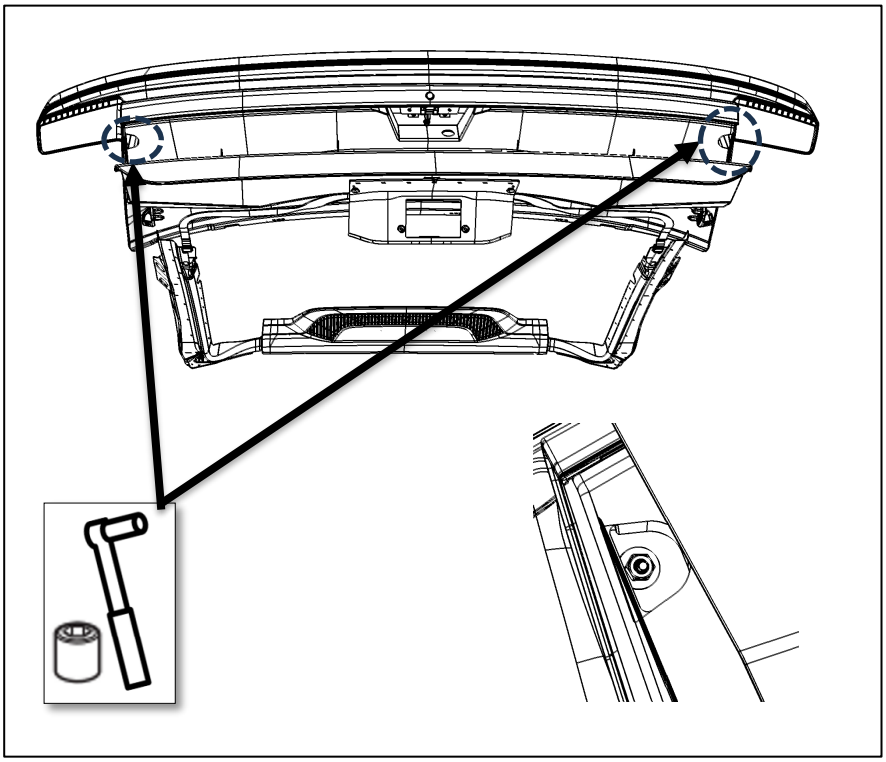

CHARGER SPOILER

10. Disengage Spoiler Clips. Gently pull upward on both ends of the spoiler to disengage the integrated clips from the tailgate. Take care not to flex or damage the spoiler during removal.


* If vehicle has factory spoiler, please proceed to step #18

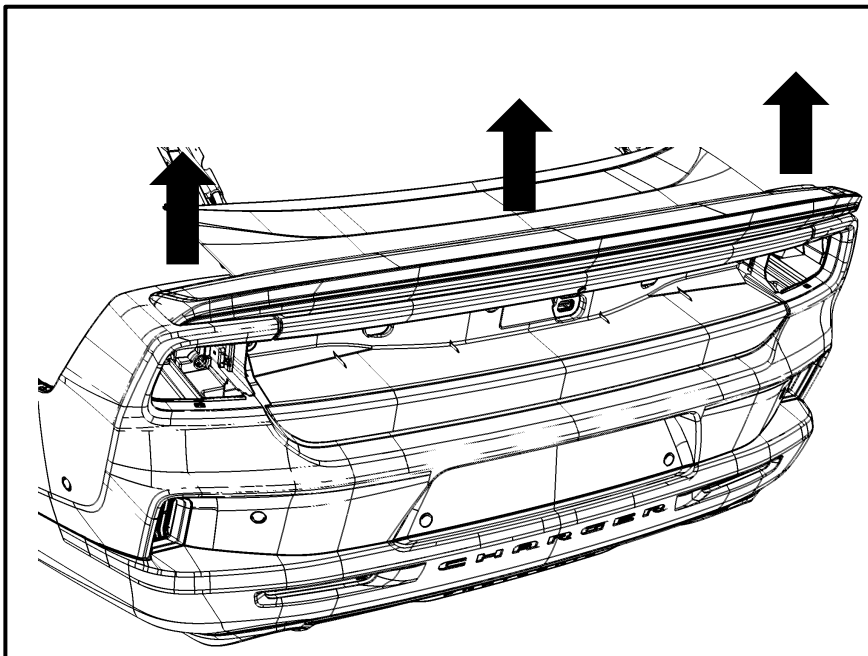

11. Tape template A into position. Align the template to back edge of decklid. Mark all hole locations and use a punch to set positions for drilling.






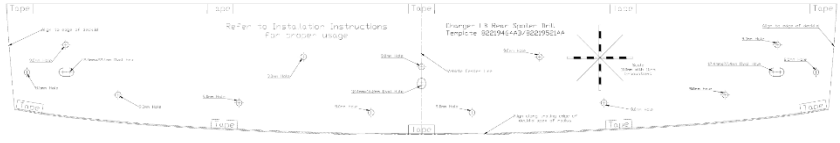


CHARGER SPOILER


12. Drill center alignment hole

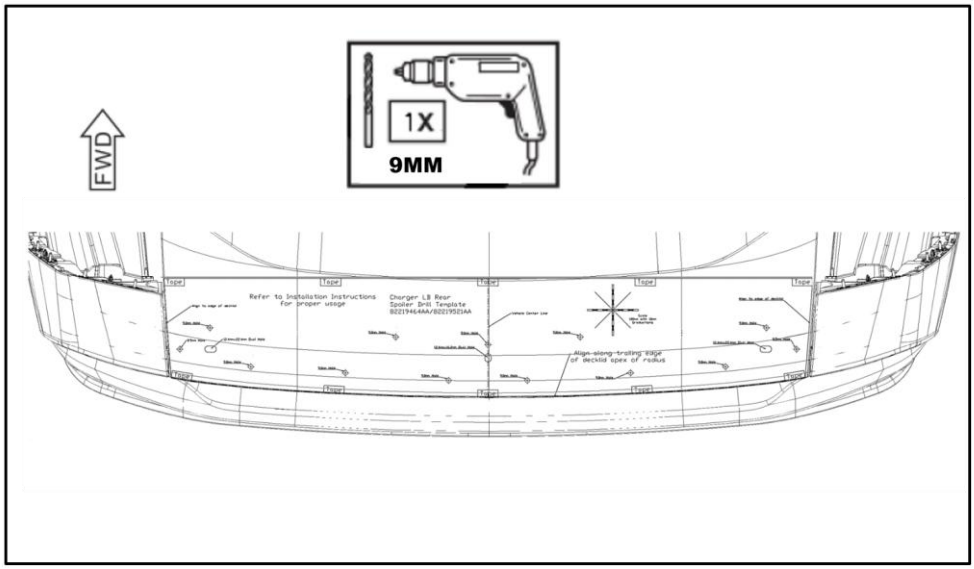

13. Drill remaining 9mm holes 10x

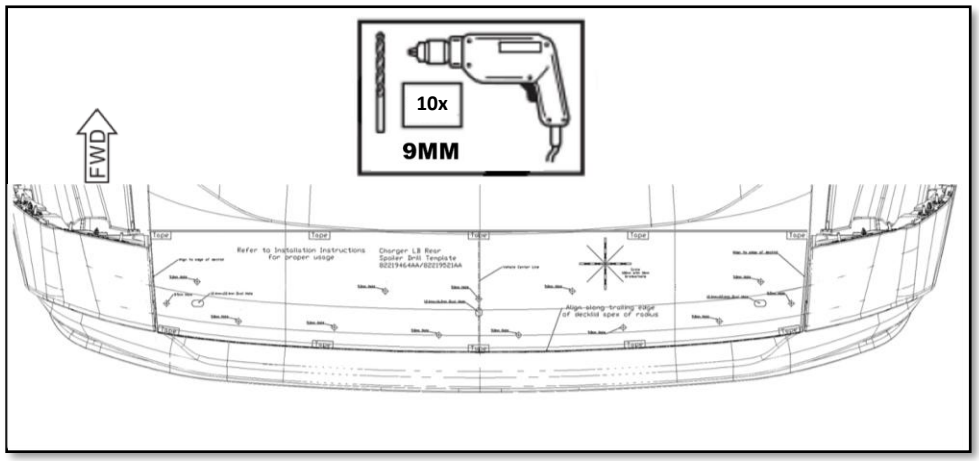


14. Drill 8.5mm holes 2x

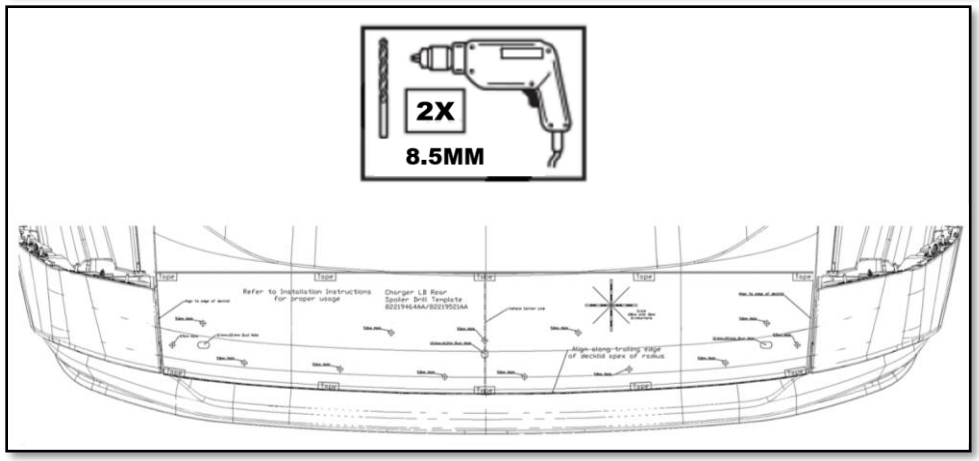


CHARGER SPOILER


15. Drill 12mm holes 8x for the oval holes.

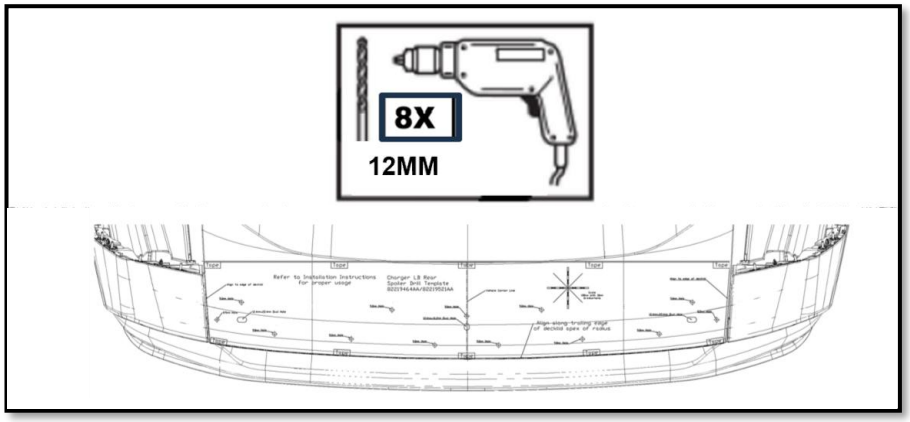

16. Use cutting tool to remove the edges of the oval hole areas.

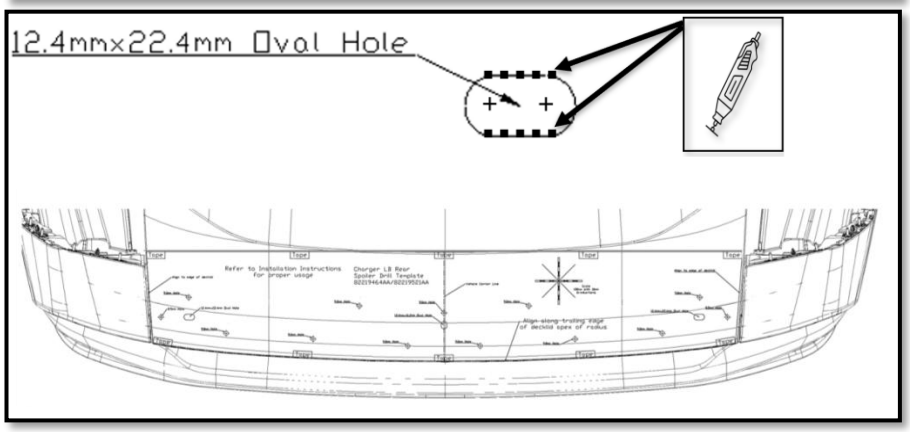


17. Use round and flat file to smooth the oval holes and circular holes edges.

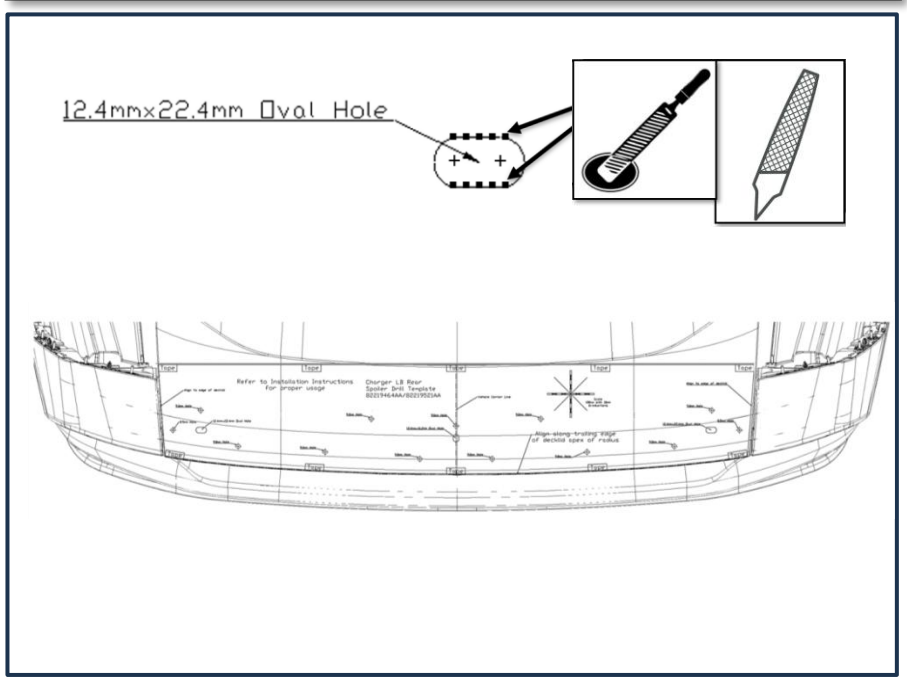


CHARGER SPOILER

18. Remove template.
Clean mounting surface.
Clean and prep holes.

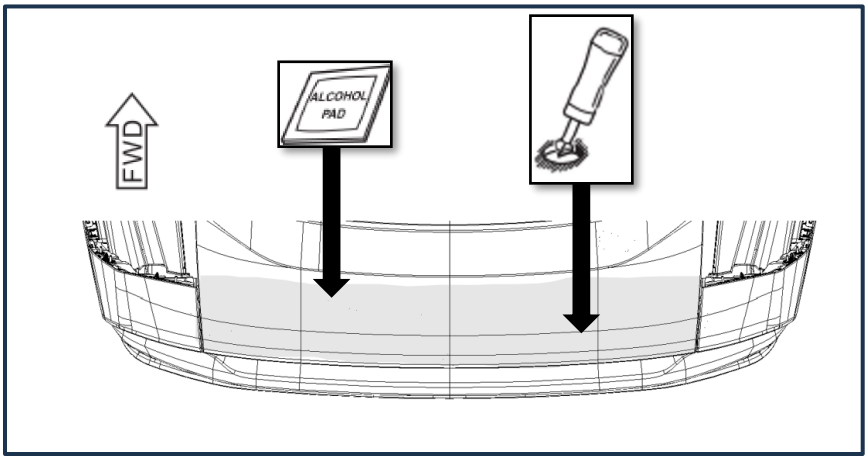


19. Unpack Spoiler “B” and inspect for any blemishes. Confirm all mounting hardware is included. Check and confirm for 3x foam washers for alignment pins, 2x foam washers for studs, 11 w-clips with foam washers, and 2x double sided adhesive

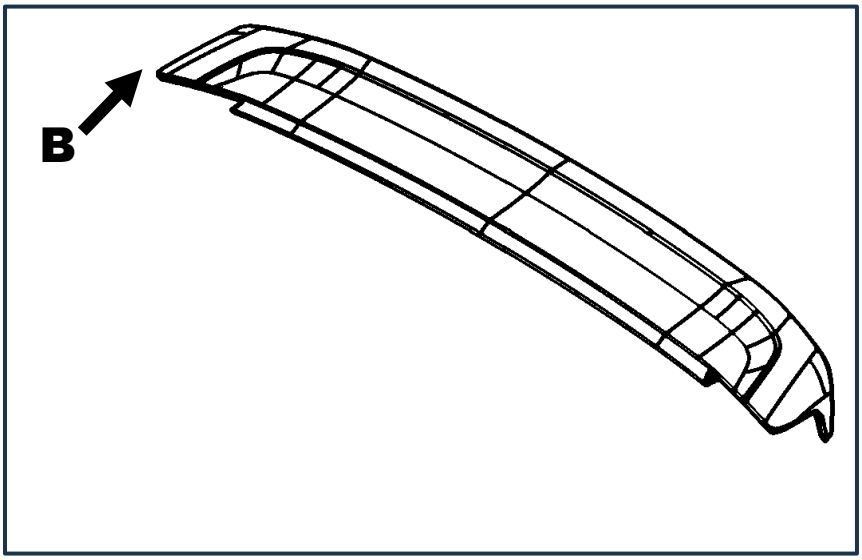


20. Mount Spoiler “B” to trunk lid. Align the spoiler to the mounting holes and apply firm pressure. Be sure to inspect spoiler is properly seated in position.

Note: Ensure all W-clips are engaged before proceeding

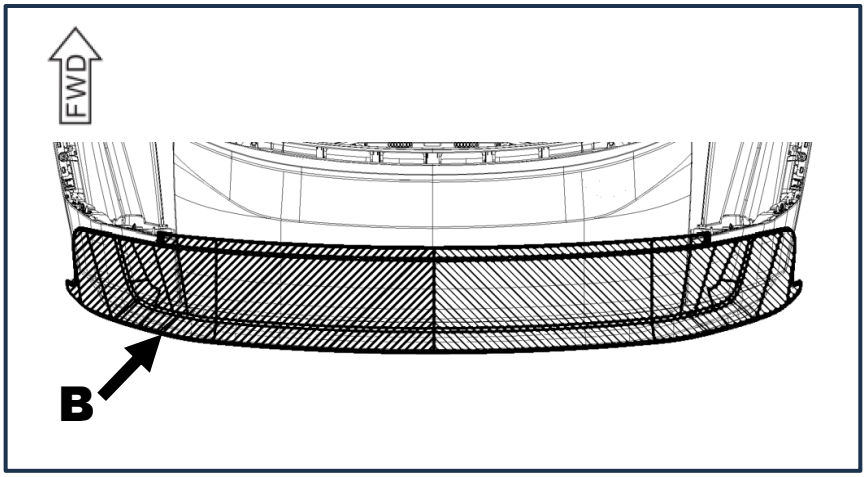


CHARGER SPOILER


21. Fasten Spoiler Mounting Nuts. Inside each exposed taillight cavity, locate and fasten the 2 “C” nuts (one per side) securing the spoiler to the tailgate. Torque to spec using a 3” extension. 6Nm or 53.1 in-lbs

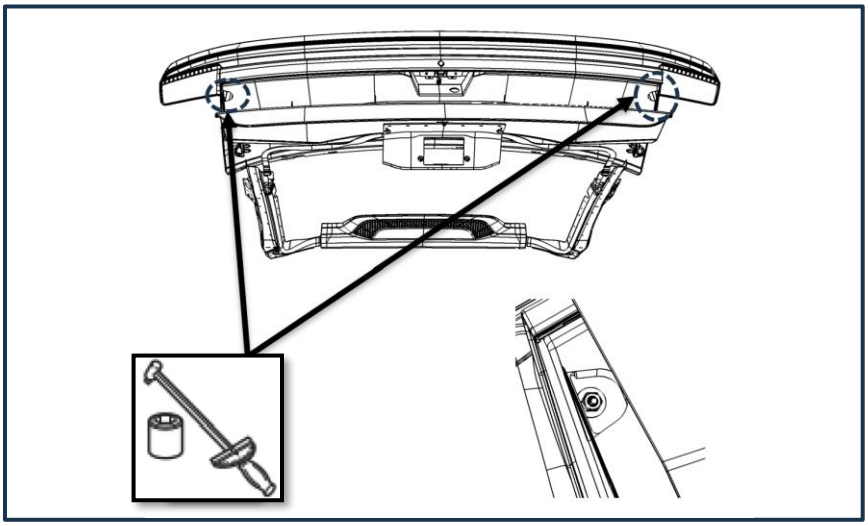

22. Install taillight assemblies. Carefully insert the taillight straight in from the tailgate, ensuring not to damage alignment pins or remaining clips.

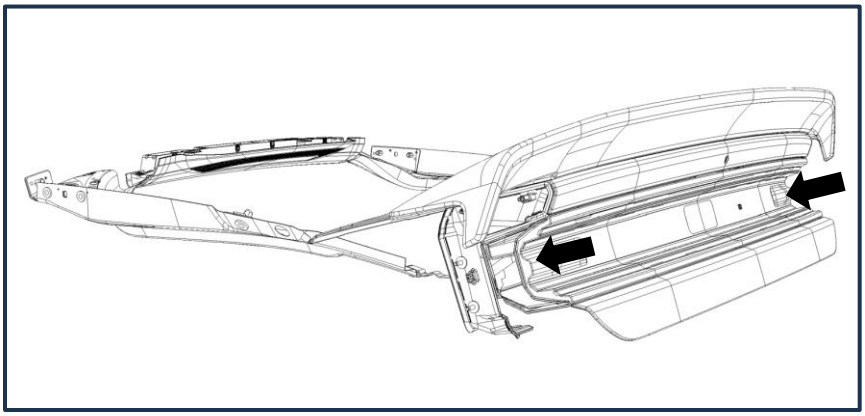


23. Install Outer Taillight Mounting Nuts. Fasten the 4 nuts located at the outer ends of the tailgate (accessible with the hatch open). Torque to spec using a 3” extension. 6Nm or 53.1 in-lbs

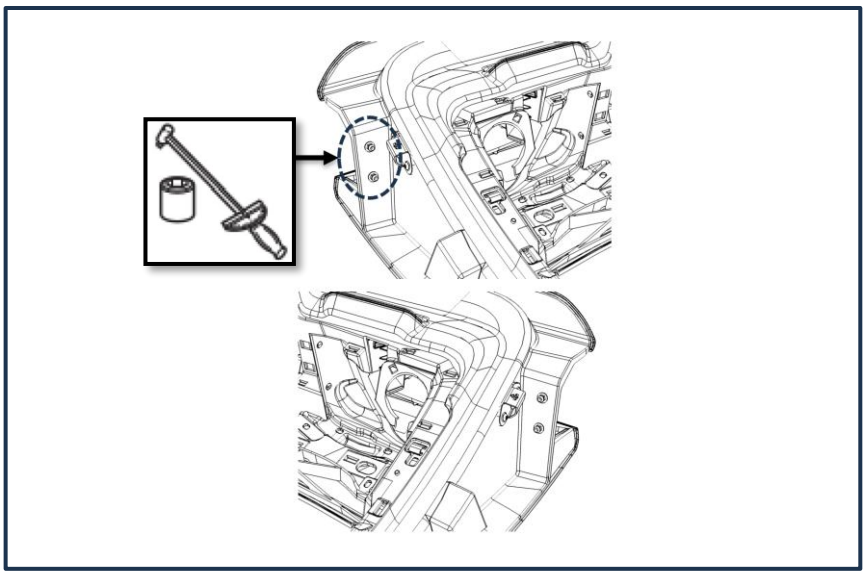


CHARGER SPOILER


24. Install Inner Taillight Mounting Nuts. Using a suitable socket, fasten the 4 nuts securing the taillight assembly from the inside of the tailgate. Torque to spec using a 3” extension. 6Nm or 53.1 in-lbs

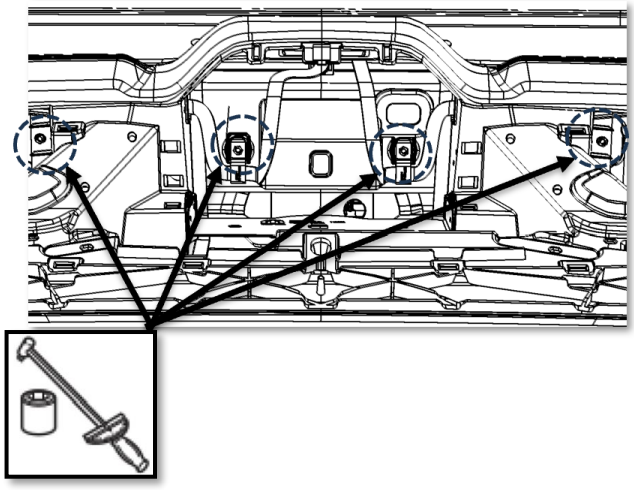

25. Install taillight electrical connector.

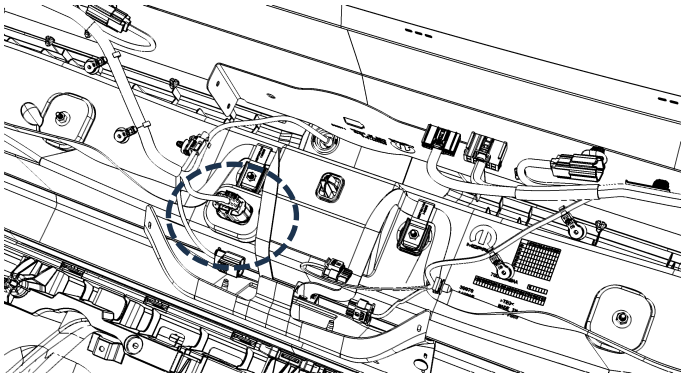


26. Install Interior Tailgate Trim Panel.

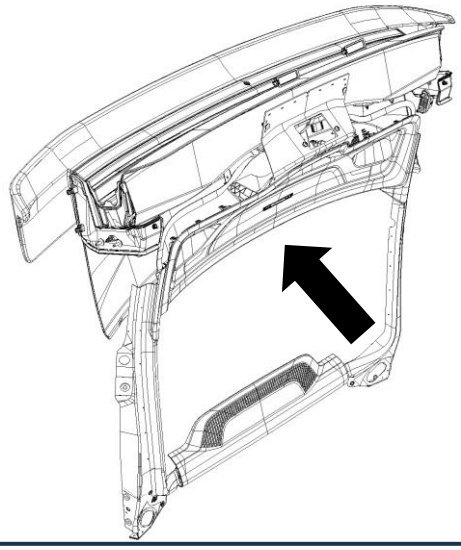

CHARGER SPOILER

27. Connect the Battery

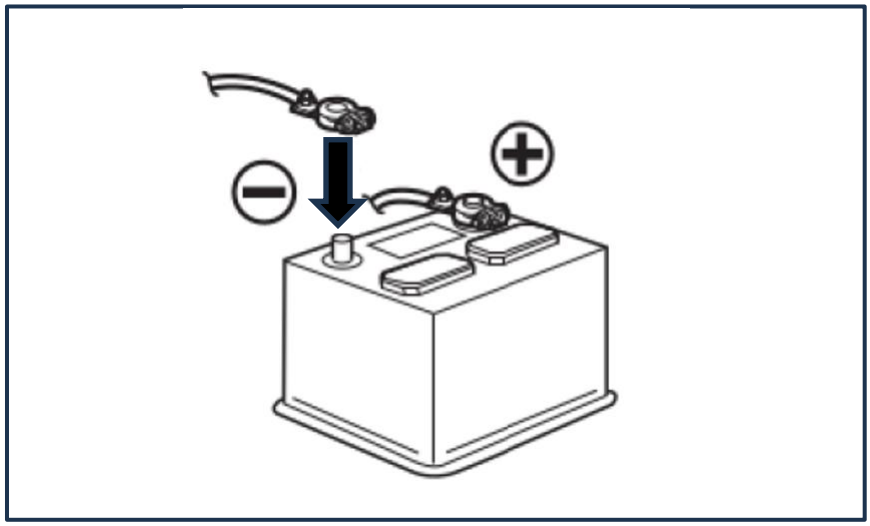

Document Revision History

Date	Section	Summary of Changes Made	Notes