



# TEMPLATE DRAWING

DWG # 2257A  
Rev A, new drawing #  
10/5/99

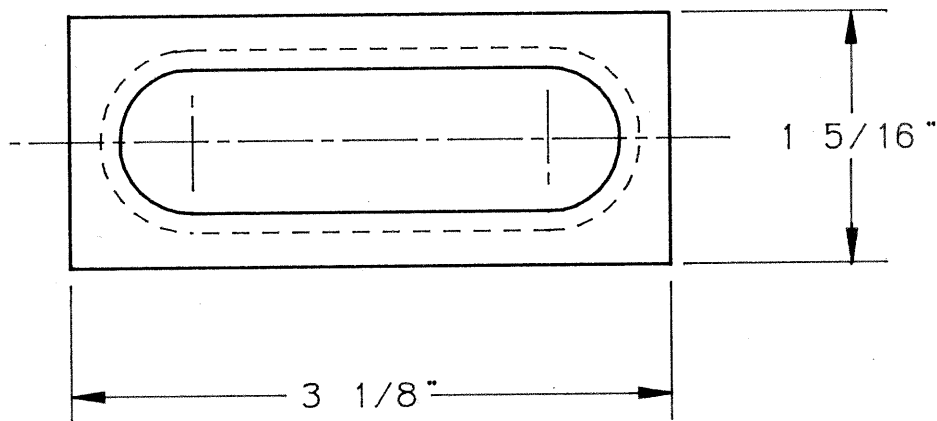



1.0" DIA  
(3/8" DP. MIN)

## HOLE PREPARATION

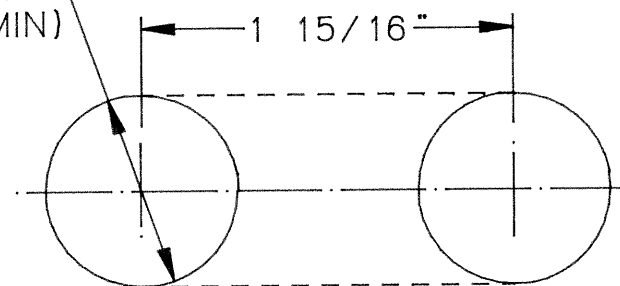

## INSTALLATION INSTRUCTIONS

1. REMOVE BACK PLATE FROM PULL BODY
2. PLACE PULL INTO PREPARED HOLE AND MARK SCREW HOLE LOCATIONS
3. REMOVE PULL AND DRILL SCREW HOLES WITH 3/32" BIT, 5/8" DEEP
4. ASSEMBLE BACK PLATE ON PULL, PUSH INTO HOLE AND SECURE WITH (2) #4 OVAL HEAD WOOD SCREWS

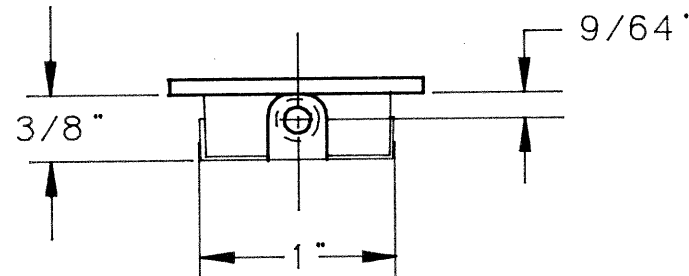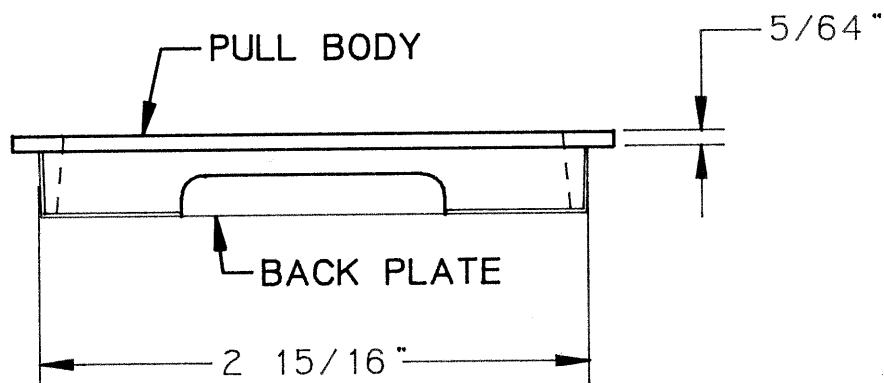

**IVES**

222TEMPL (FJH DISK #9)

**222 FLUSH PULL**

P/N 137001

TEMPLATE NO. HB-222-121

DRAWN BY: FJ HARRIS

DATE: 12-21-95

**H.B. IVES**

P.O. BOX 1887, NEW HAVEN, CONN. 06508