


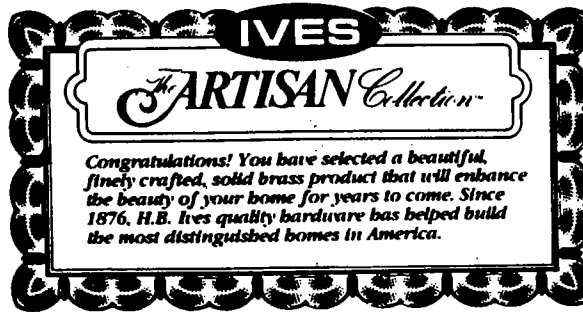


DOOR EDGE PULL

FOR USE ON POCKET SLIDING DOORS

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Phillips screwdriver, drill, 3/32" drill bit for pilot holes, hammer, small chisel and pencil.

1. Position in center of door edge approximately 40"-42" from bottom of door, with pull handle facing out. Mark outside shape and screw hole locations.
2. Mortise door edge to fit plate and pull handle in position. (See illustration A for cutout dimensions).
3. Drill, position and secure.

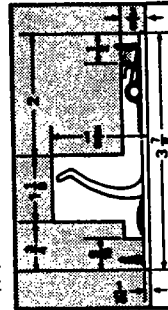

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE
HARDWARE BY H.B. IVES



WINDOW
LOCKS




DOOR
STOPS



COAT &
HAT HOOKS



DOOR
BOLTS

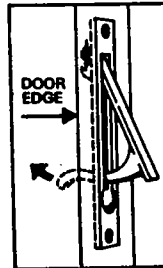

DOOR EDGE PULL C230 B3 BRT

MADE IN U.S.A.