

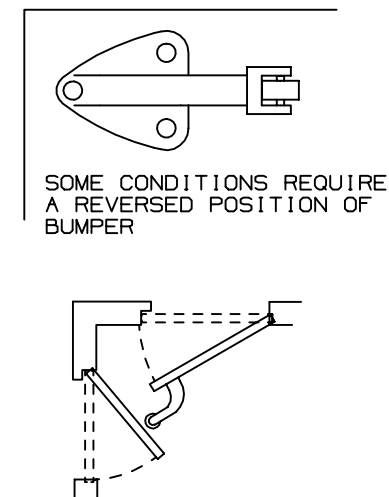
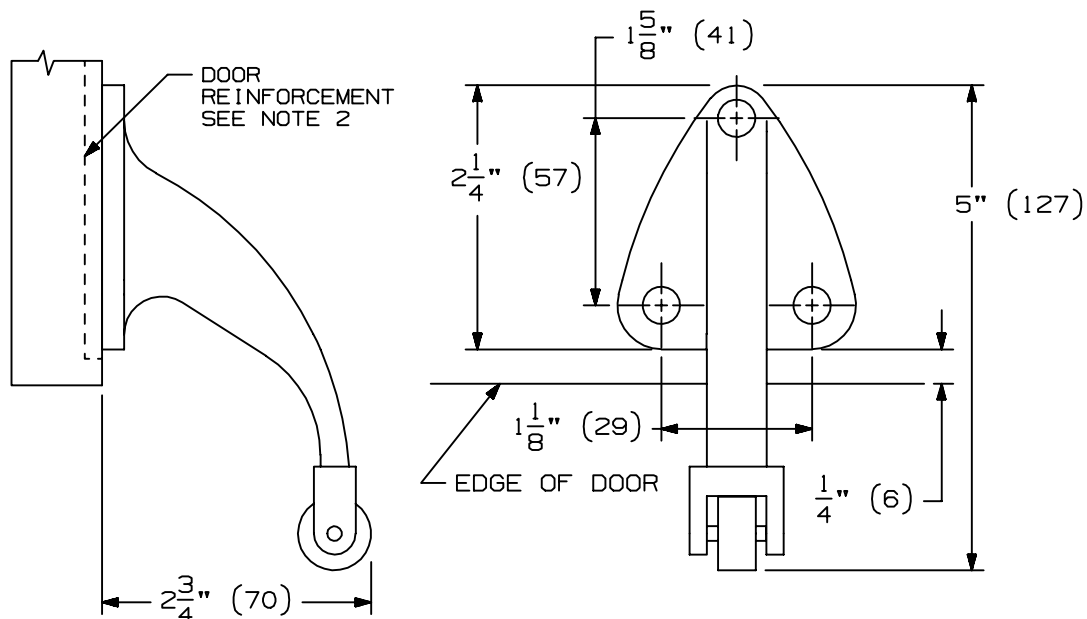
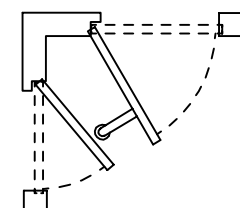


# RB470 ROLLER BUMPER

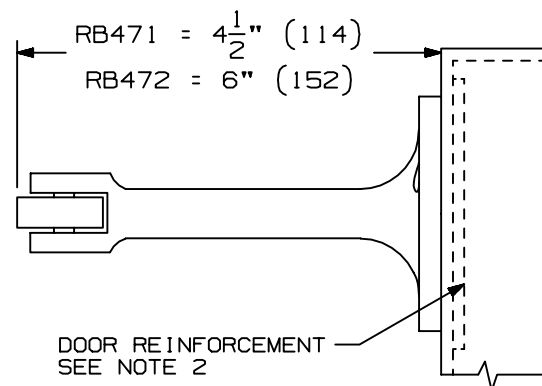

SOME CONDITIONS REQUIRE  
A REVERSED POSITION OF  
BUMPER

## RB471 & RB472 ROLLER BUMPER

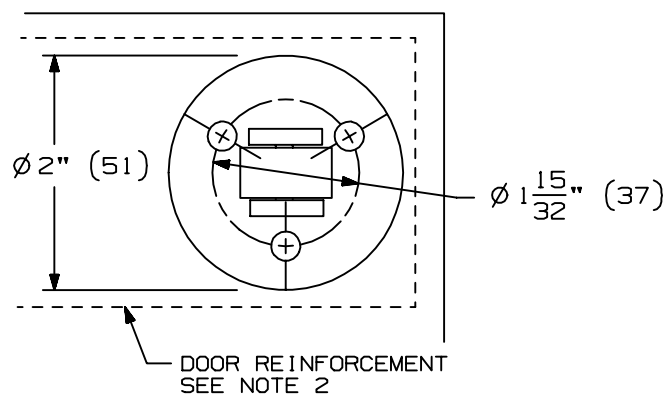

### INSTRUCTIONS:

1. PLACE ROLLER BUMPER AS ILLUSTRATED. THE VERTICAL LOCATION IS UP TO THE INSTALLER.
2. MARK THE SCREW HOLES. DRILL FOR #8 SCREWS
3. INSTALL ROLLER BUMPER.

### NOTES:

1. WHEN TWO BUMPERS ARE REQUIRED, PLACE ONE HIGHER THAN THE OTHER TO PREVENT INTERLOCKING.
2. DOORS SHOULD BE PROPERLY REINFORCED WITH 3/16" (5) MINIMUM THICKNESS.

| QTY | SCREW DETAIL     |
|-----|------------------|
| 3   | #8 X 3/4" FPHSMS |