


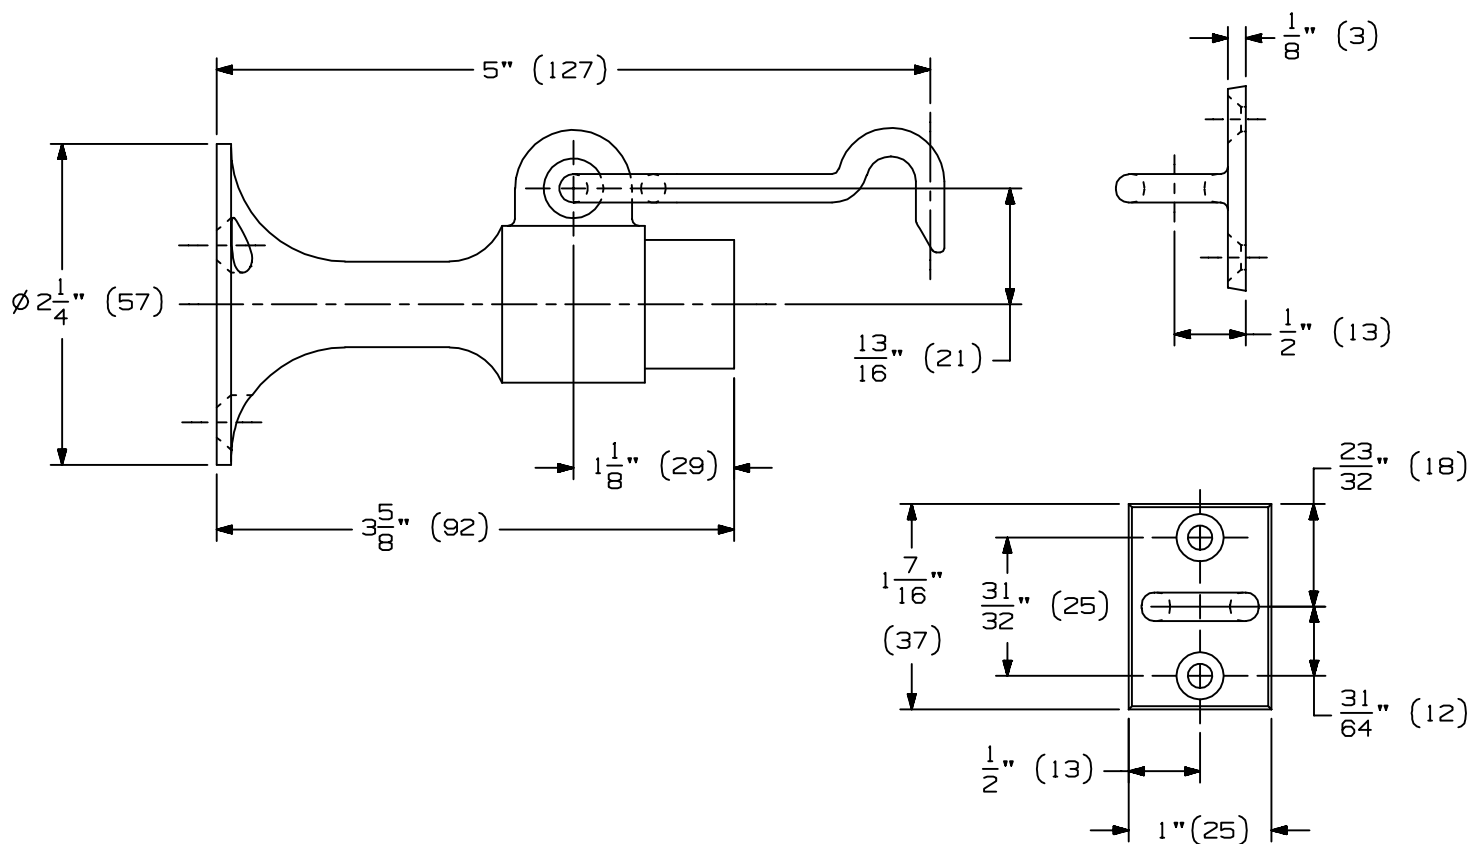

WS445

WS449

INSTRUCTIONS:

1. OPEN DOOR TO DESIRED POSITION.
2. PLACE STRIKE AND HOLDER IN DESIRED LOCATION.
3. LOCATE MOUNTING HOLES FOR BOTH THE STRIKE AND THE BODY.
4. PREPARE MOUNTING HOLES AS NECESSARY.
5. INSTALL BODY AND STRIKE.

	QTY	SCREW DETAILS
WS445 BODY	1	3/8"-12 THREADED STUD
	1	LEAD EXP SHIELD
	1	#8 X 1" OPHWS
WS449 BODY	3	#12 X 1 1/4" OPHWS
	3	#12 PLASTIC SHIELD
STRIKE	2	#8 X 1" OPHSMS

IVES

WS445 & WS449 MANUAL WALL HOLDER INSTALLATION TEMPLATE

IR Security & Safety®

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

TEMPLATE
NUMBER: INST.WS445-449_0

DATE:
09-01-01