




# 1700 Universal Coordinator

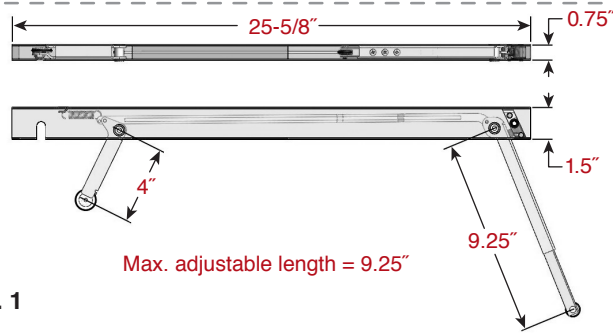


**Fig. 1**

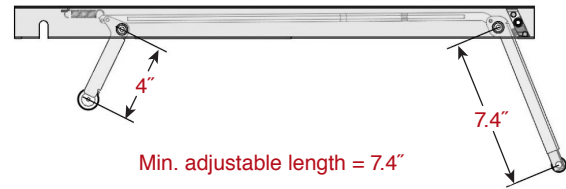

**Fig. 3**

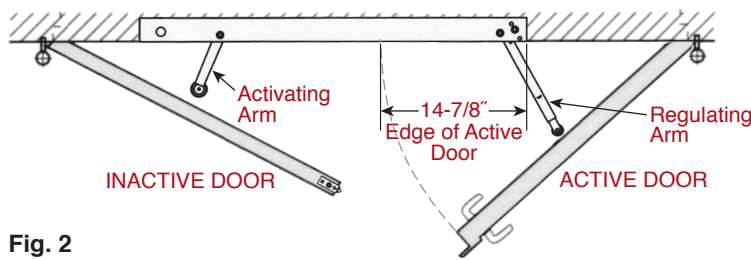


**Fig. 2**

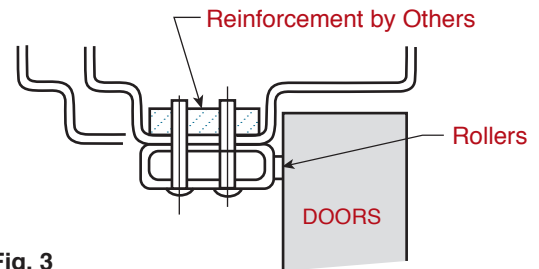


Spot (4) Holes In Door Stop for 10-24 Machine Screws or #10 Wood Screws

Easily adjust arm lengths for multiple door sizes.


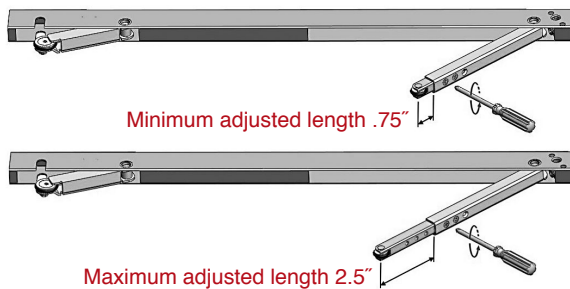


Adjustable wheel.

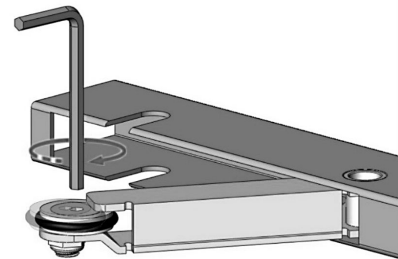

Carry bar.

Adjustable angle parts for easy installation.

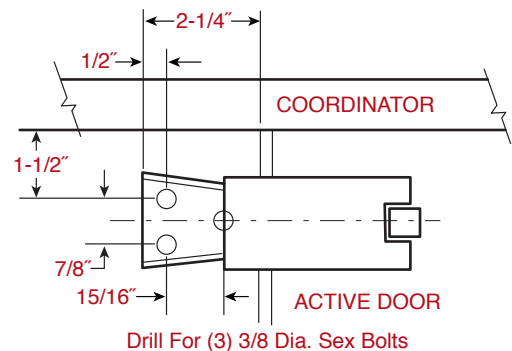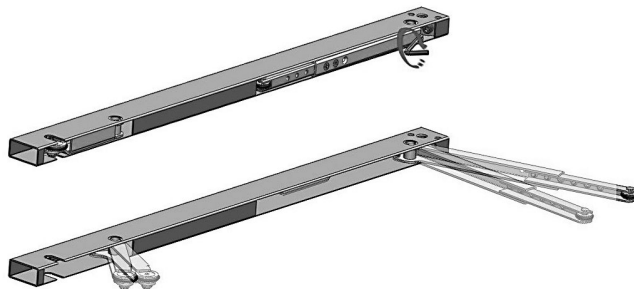

**Fig. 4**

1. Before spotting holes, inactive (short) arm must be oriented with inactive door prep frame (Fig. 2).
2. Mount coordinator with (4) 10-24 machine screws or (4) #10 wood screws (Fig. 2 & 3).
3. Install carry bar when required (Fig. 4).

Not To Scale

**Template No.**  
**T-1700**  
**Rev. 08.08.13**

**NOTE:** Rockwood reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at [www.rockwoodmfg.com](http://www.rockwoodmfg.com) or call us at 800-458-2424.