

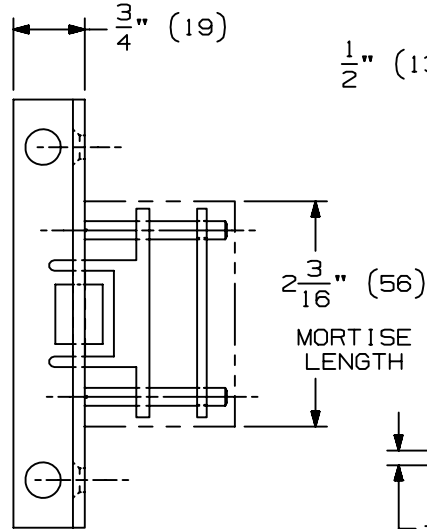


ROLLER LATCH

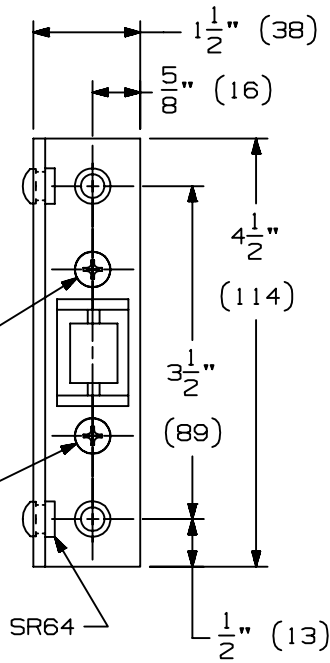


STRIKE

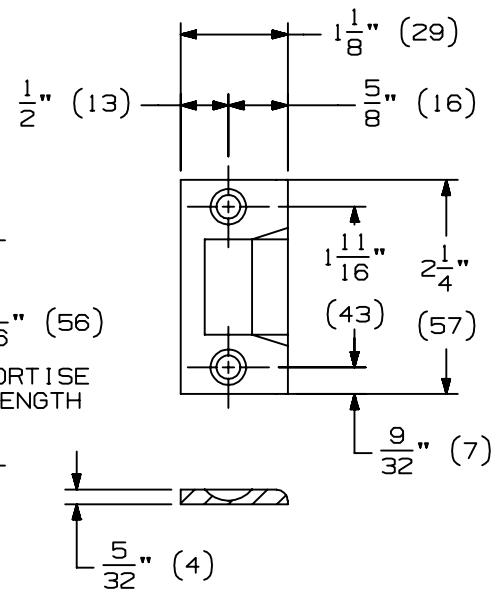


ADJUSTING SCREWS SEE THAT ROLLER EXTENDS EVENLY AND IS PARALLEL WITH DOOR.

HEAD FRAME MOUNTING

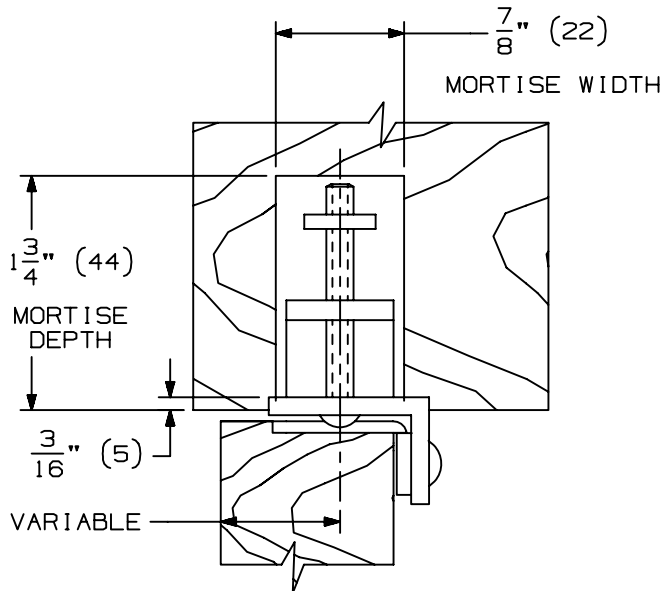

SIDE JAMB MOUNTING

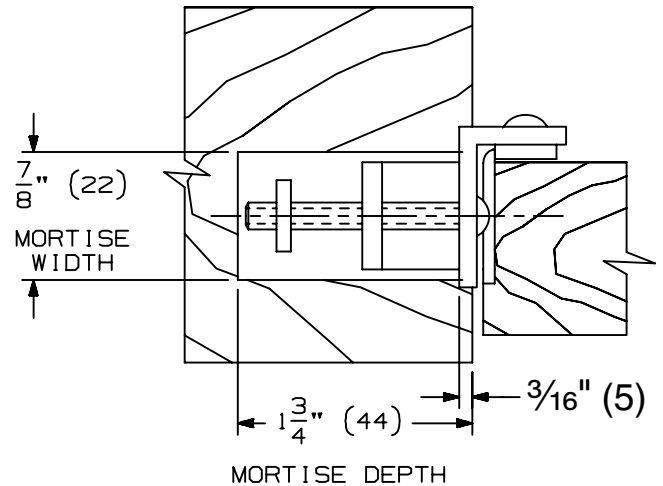

NOTES:

1. HOLLOW METAL DOORS & FRAMES SHOULD BE PROPERLY REINFORCED WITH A 3/16" (5) MINIMUM THICKNESS PLATE.

	QTY	SCREW DETAILS
LATCH	2	10 X 1 1/2" FPHSMS
STRIKE	2	8 X 1" FPHSMS

IVES

RL1152 ANGLE ROLLER LATCH INSTALLATION TEMPLATE

IR Ingersoll Rand
Security Technologies

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

TEMPLATE NUMBER: **INST.RL1152_b**

DATE:
6-6-13