
PERMANENT CLOSER TEMPLATE INSTRUCTIONS

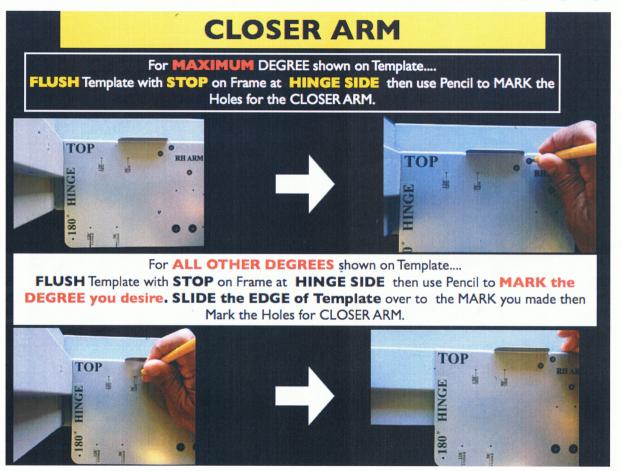


PERMANENT CLOSER TEMPLATE INSTRUCTIONS



For MAXIMUM Degree shown on Template....


FLUSH Template with TOP of Door and EDGE of DOOR at the HINGE SIDE.

Use Pencil or Automatic Centerpunch to MARK the (4) Holes for the CLOSER.

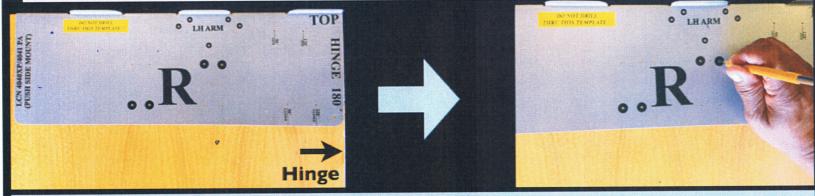


For ALL OTHER DEGREES shown on Template....

FLUSH Template with TOP of Door and EDGE of Door at HINGE SIDE then use Pencil to MARK the DEGREE you desire. SLIDE the EDGE of Template over to the MARK you made then Mark the (4)Holes for CLOSER.

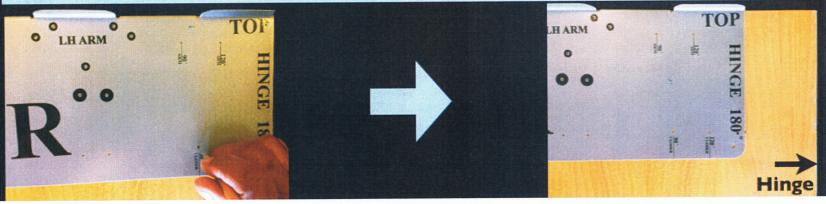


The holes drilled are for the degree of opening shown on the edge of **Permanent Template**.

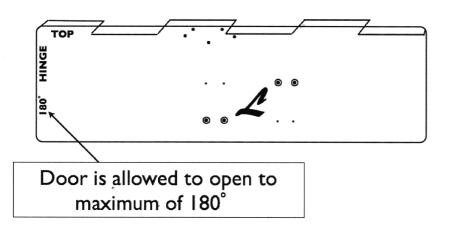

Permanent Templates can also be designed to layout Multiple Degrees.


For Example.....

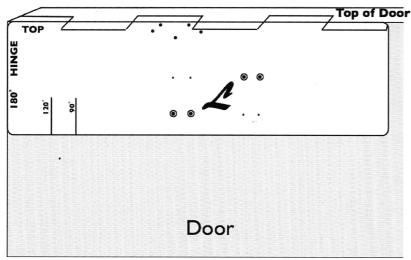

The holes drilled will allow door to open to 180 $^{\circ}$.

This **Permanent Template** also has guide lines for 120° and 90° openings too.


To use this **Permanent Template** for 90° opening

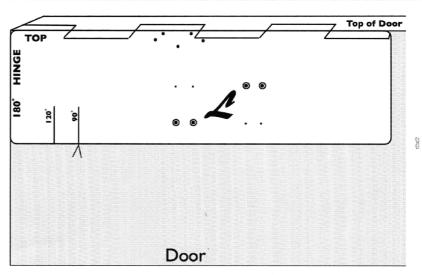

First, flush template with top and hinge side of door.

Then use a pencil to lightly mark the 90° location onto the door.

Slide the **Permanent Template** over to the 90° mark you've made.

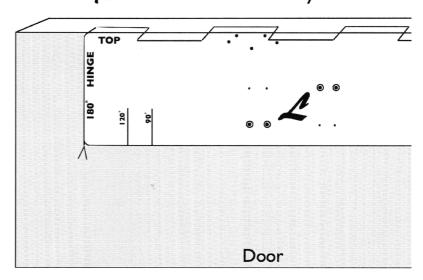

Now it's a layout for a 90° opening!

Use a centerpunch or pencil to mark the holes .