

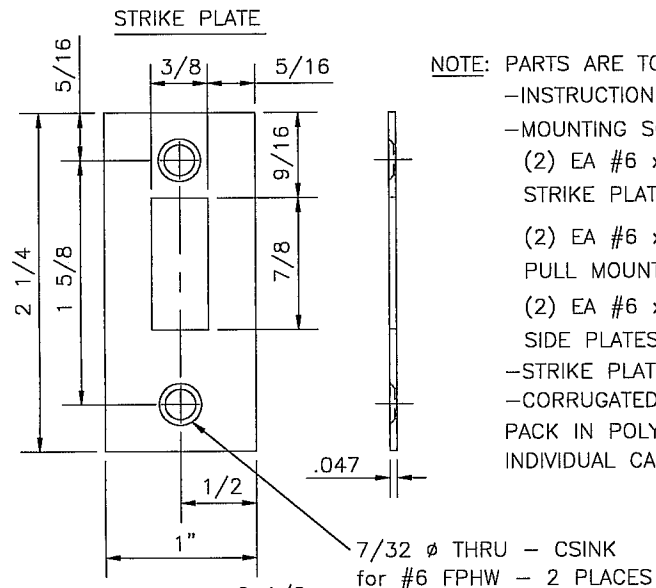


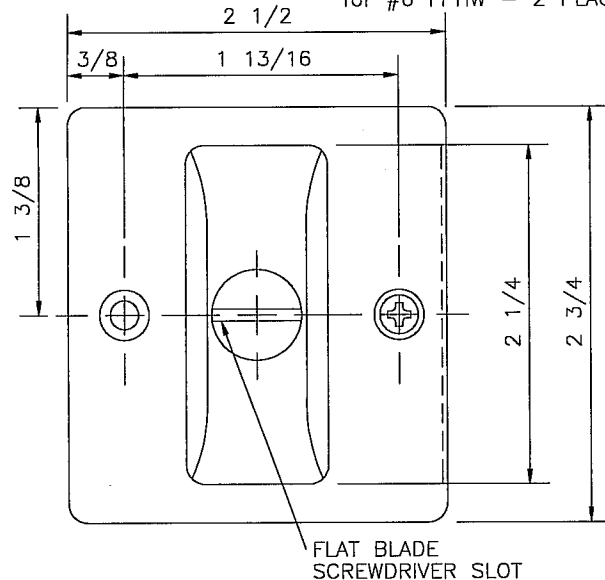


NOTE: PARTS ARE TO BE SUPPLIED WITH THE FOLLOWING -

- INSTRUCTION SHEET
 - MOUNTING SCREWS:
 - (2) EA #6 x $\frac{3}{4}$ FPHW for STRIKE PLATE MOUNT.
 - (2) EA #6 x $\frac{5}{8}$ OPHW for PULL MOUNT.
 - (2) EA #6 x $\frac{1}{2}$ OPHM for SIDE PLATES TO LATCH MOUNT.
 - STRIKE PLATE
 - CORRUGATED SPACER
- PACK IN POLY BAG, THEN INTO INDIVIDUAL CARTONS.

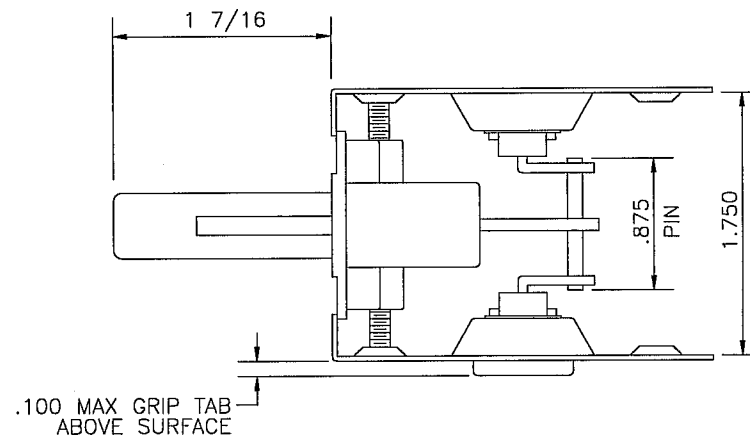

FLAT BLADE SCREWDRIVER SLOT

SHOWN WITH LOCK ARM & PULL LEVER OPENED

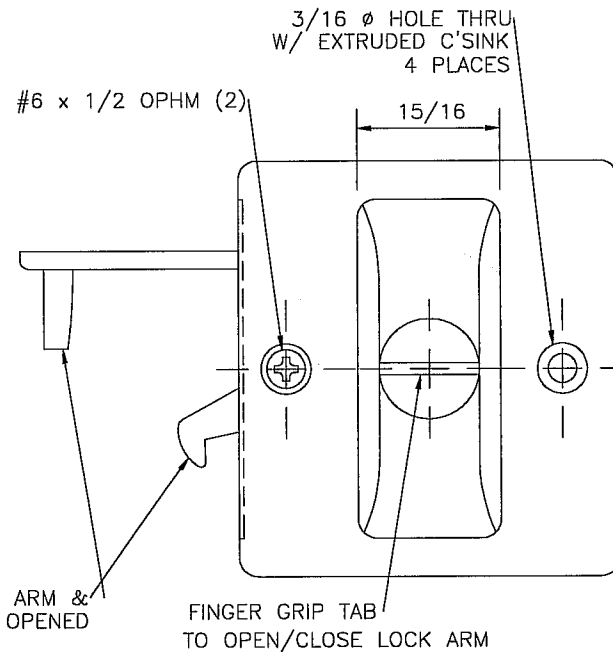

FINGER GRIP TAB TO OPEN/CLOSE LOCK ARM



HAGER RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. CALL HAGER ENGINEERING AT 1-800-325-9995 FOR THE LATEST REVISION DATE OF TEMPLATE.

PRIMARY DIMENSIONS SHOWN IN INCHES, DIMENSIONS IN [] ARE MILLIMETERS.

MATERIAL	DO NOT SCALE DRAWING
FINISH	

DRAWN	NJANSEN	1/24/2008
ENG. APPR.	MMCRAE	1/24/2008
Q.A.		
TOLERANCES:		
FRACTIONAL:	± 0.015	
ANGULAR:	$\pm 1^\circ$ BEND: $\pm 1^\circ$	
TWO PLACE DECIMAL:	± 0.01	
THREE PLACE DECIMAL:	± 0.004	

330M
POCKET DOOR PRIVACY LATCH

SIZE	DWG. NO.	REV.
A	M-TA00019	
SCALE: 1:1	WEIGHT:	SHEET 1 OF 1