

Schlage Lock Company 575 BIRCH STREET FORESTVILLE, CT 06010 PHONE: (866) 322-1237

FAX: (860) 584-2136



NOT TO SCALE

## Door & Header Prep 350+ MagForce

NOT TO SCALE

FORM NUMBER: 35001


**REVISION: A** 

DATE: 1-2008

IMPORTANT: THIS DIAGRAM IS NOT TO SCALE AND FOR DIMENSIONAL REFERENCE ONLY!

DO NOT TAPE TO DOOR & HEADER FOR USE AS A DRILLING TEMPLATE!

USE THE PAPER DRILLING TEMPLATE THAT WAS INCLUDED WITH LOCK.

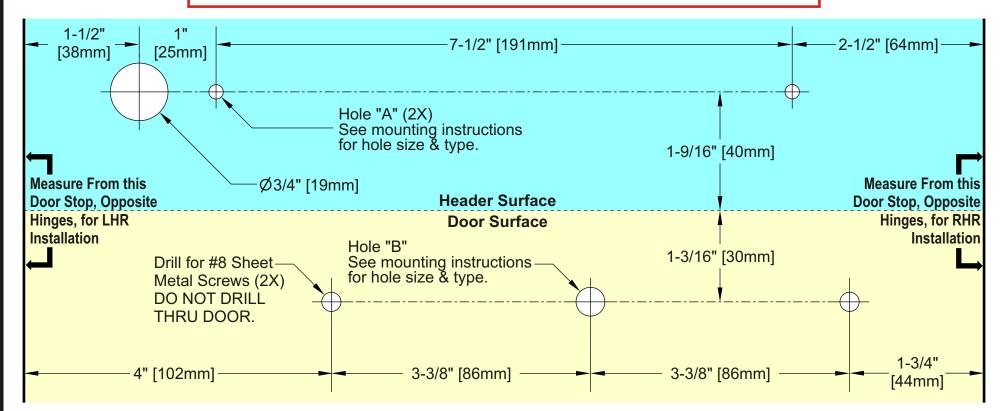

## NOTE:

A variety of #10 fasteners are included in the hardware pack. Select the correct fasteners for the door and header materials involved:

- > For wood or hollow metal doors and headers, use self-tapping sheet metal screws.
- > For reinforced or heavy-gauge metal doors and headers, use machine screws.

Page 1 of 1