

3780 UNIVERSAL COORDINATOR

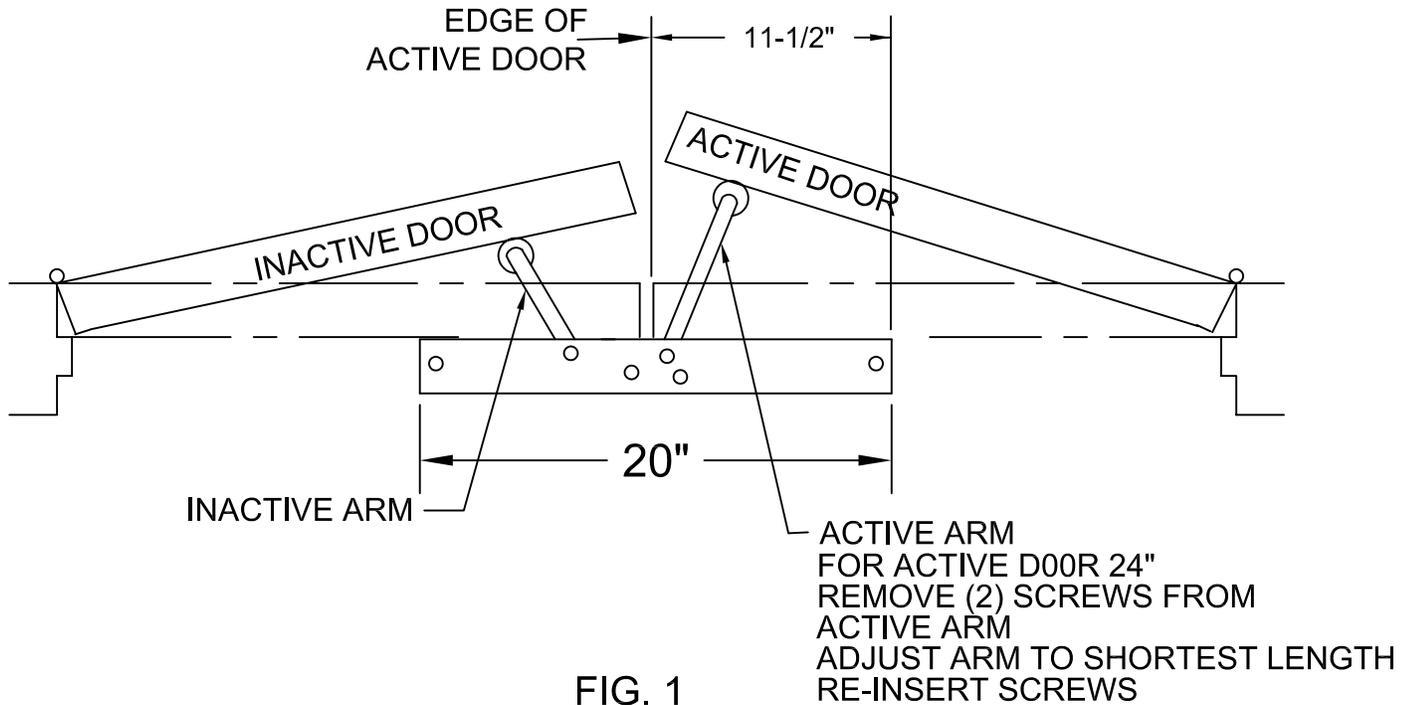


FIG. 1

SPOT (6) HOLES IN DOOR STOP
FOR 10-32 MACHINE SCREWS or #10 WOOD SCREWS

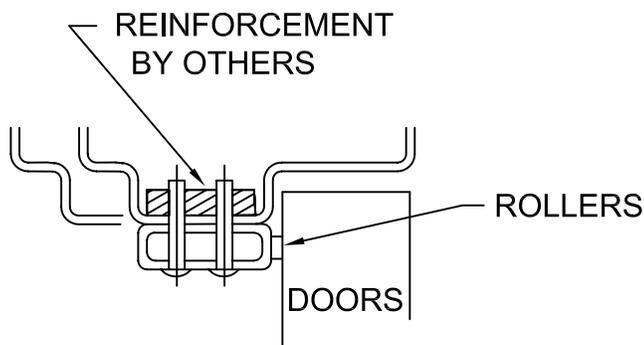


FIG. 2


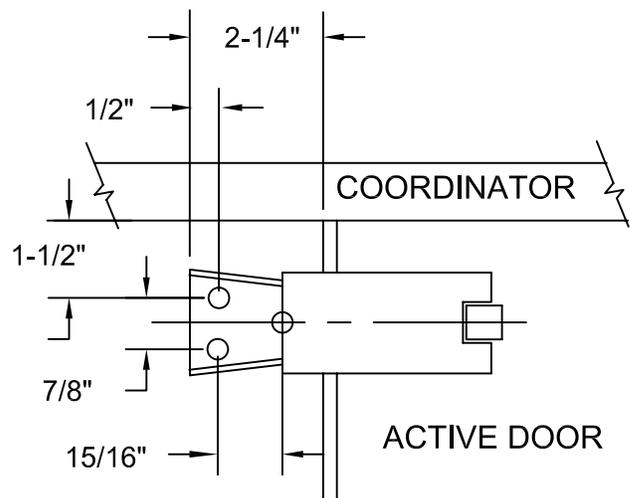


FIG. 3

DRILL FOR (3) 3/8" DIA. SEX BOLTS

1. BEFORE SPOTTING HOLES, INACTIVE (SHORT) ARM MUST BE ORIENTED WITH INACTIVE DOOR. PREP FRAME (FIG 1 & 2)
2. MOUNT COORDINATOR WITH (6) 10-32 MACHINE SCREWS OR (6) #10 WOOD SCREWS (FIG 1)
3. INSTALL CARRY BAR WHEN REQUIRED (FIG 3)

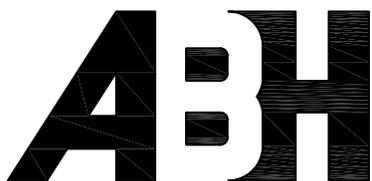

www.abhmfg.com
E-mail: abhinfo@abhmfg.com
Architectural Builders Hardware Mfg., Inc.
1222 Ardmore Ave., Itasca, IL 60143
630.875.9900; FAX 800.9FAXABH (932.9224)

©2005 ABH Mfg., Inc.
printed in USA

3780-01.dwg

3780

REVISED 06-13-05