

WALLBOARD OR PLASTER INSTALLATION

- 1. With metal or wood studding, install a framed opening at specified location. Open dimensions should be 1/4 to 1/2" larger than door size of panel; i.e., for a 12" x 12" panel, opening should be 12-1/4" x 12-1/4".
- 2. Frame above and below access panel. On panels larger than 16" x 16", install a double stud on both sides in the same manner as at passage panels.
- 3. Place panel in position in opening and mark location of attachments on studding using holes in sides of panel frame as marking guide.
- 4. Remove panel and drill 5/32" holes through studs at marked points.
- Place panel in position and attach with #10 sheet metal or machine screws.
- 6. **PW & PWE:** Apply layers of plaster over metal lath and plasterguard on wings. After smoothing plaster, only a slit around the 3 door edges and painted hinge will show.
 - **WB:** apply taping compound to wallboard bead of WB, to outside edge of frame.
- 7. Check panel for freedom of movement. If it binds, shim as necessary to remove any racking of frame at attachments to studding.
- 8. Apply paint to wall and door.

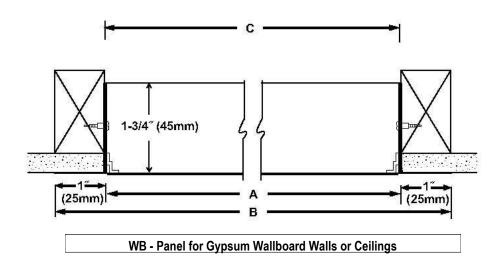



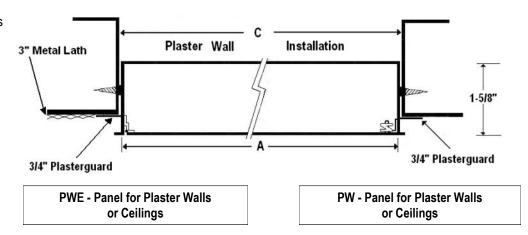



Due to the wide variety of wall assemblies, these drawings are representative of a typical installation scenario, but are not meant to be a guideline for wall construction. Please consult your local AHJ for current wall construction codes.

NOTE - This is not a Fire-Rated Access Panel - See Models FD and FDPW if a fire-rated unit is required.