


## INSTALLATION INSTRUCTIONS FOR 700TL TRANSOM LOUVER

PAGE 1 OF 1

1. Place the louver into the opening in the hollow metal frame, making sure that it is centered side to side and properly positioned front to back.
2. On Inside, align full width angle clip along bottom edge of frame so that it abuts the hollow metal frame on the sides.
3. Using self tapping screws, screw through angle clip into bottom hollow metal frame.
4. Using self tapping screws, screw through angle clip into bottom edge of louver frame.
5. Repeat # 2-4 at the top of the frame, and then the 2 sides.

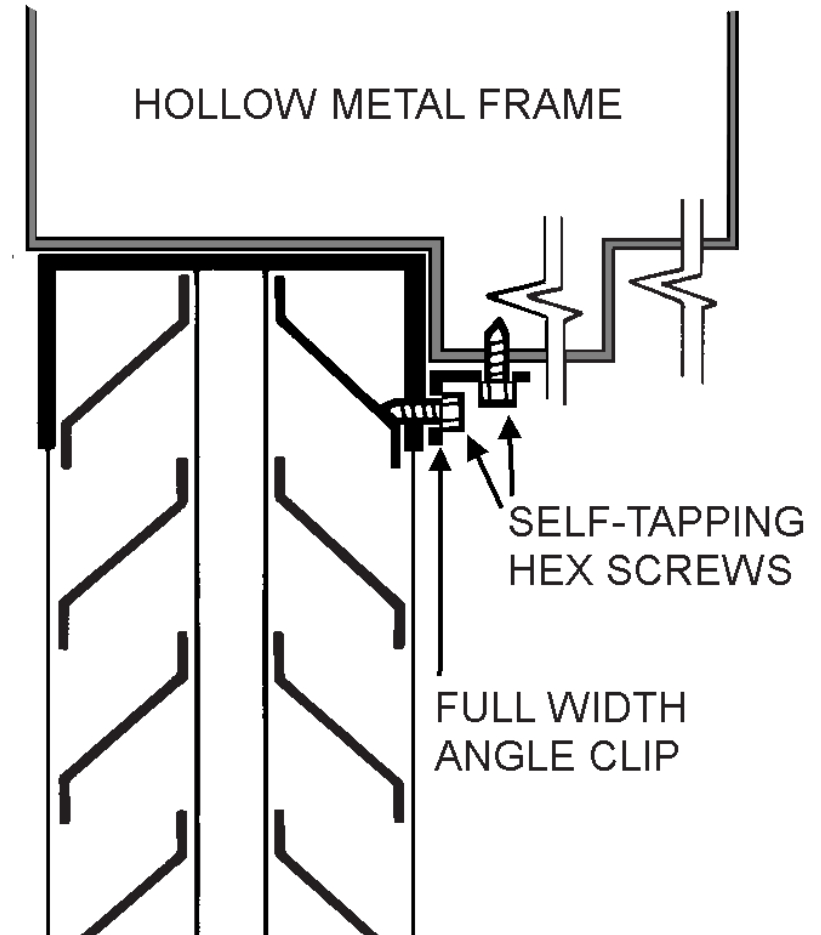

**ACTIVAR**  
INC.

[www.activarcpg.com](http://www.activarcpg.com)

Construction Products Group

### INSTALLATION INSTRUCTIONS FOR 700TL TRANSOM LOUVER

HEADQUARTERS: 4450 WEST 78<sup>TH</sup> ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-766-0660 FAX: 952-835-2218 EMAIL: [SALES@AIRLOUVERS.COM](mailto:SALES@AIRLOUVERS.COM) [WWW.ACTIVARCPG.COM](http://WWW.ACTIVARCPG.COM)  
ACPG WEST COAST (MANUFACTURING): COMMERCE CA • ACPG WAREHOUSES: LANCASTER PA, ATLANTA GA, CHICAGO IL, SEALLT WA, FORT MYERS FL, DALLAS TX 8-22-12