


[illegible]

1. FOR METAL DOORS  
LOCK CASE SUPPORT IS  
REQUIRED FROM DOOR  
MFG.

- 2. INCREASE HOLE TO 13/16 FOR TRIM WITH ESCUTCHEONS.
- 3. CUT CLEARANCE AS REQUIRED FOR ANTI-FRICTION LATCH.
- 4. FOR ELECTRIFIED LOCKS 17-177&17-178 USE 12 FUNCTION TEMPLATE.
- 7/8 ▲ 5. FOR FUNCTION 07 DRILL HOLES ON INSIDE ONLY (#6 AND #7)
- 6. FOR THRU BOLTED TRIM DRILL HOLES #7. FOR 07 FUNCTION DO NOT DRILL THRU DOOR. INSIDE ONLY.

[illegible]

- DENOTES HOLE(S) FOR FUNCTION LISTED. (CHECK BEFORE CUTTING.)
- SEE NOTE 2
- ▲ SEE NOTE 5
- SEE NOTE 6

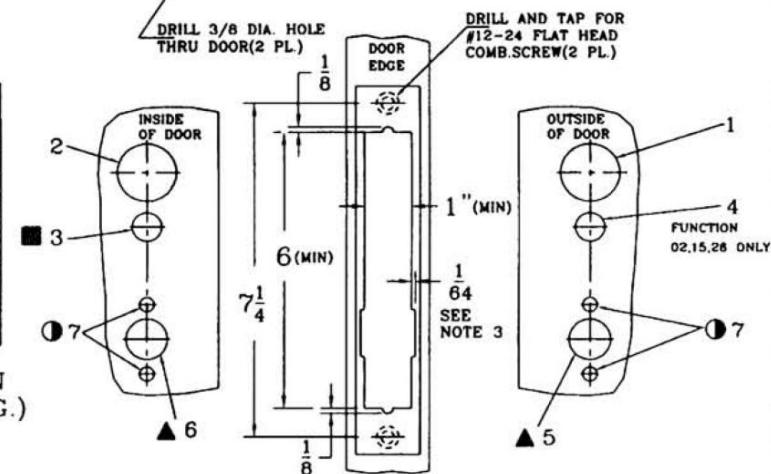

DETAIL OF DOOR-CUT(SEE TABLE)

|     |          |             |
|-----|----------|-------------|
| REV | DATE     | TEMPLATE NO |
| B   | 01.28.15 | AM-001      |

DO NOT SCALE

## ARROW TEMPLATE

|         |                     |
|---------|---------------------|
| PRODUCT | AM & BM SERIES LOCK |
|---------|---------------------|