
WALL BED KIT CONFIGURATION

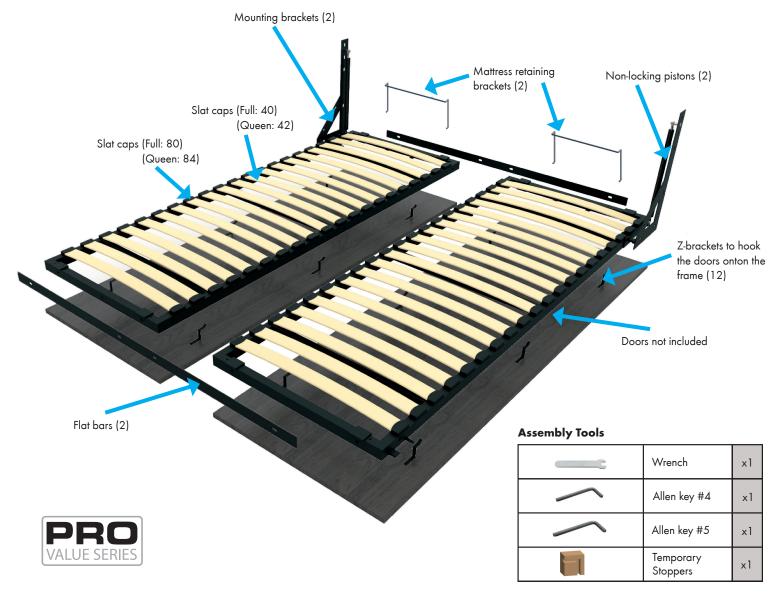



60	1957
YEARS	since

Würth Baer Supply www.wurthbaersupply.com · 800-289-2237 · Fax: 888-558-2237

If you wish to not receive future advertisements from Würth Baer Supply, please send your opt-out request either by mail: creditreference@wurthbaersupply.com, Fax: 847-613-3333, or Phone: 800-289-2237. When submitting your opt-out request, please specify the phone number(s) of the fax machine(s) covered by your request. We will comply with your request as soon as possible. **Thank you & have a great day!**

Included Hardware

	Saddle locking	
	plates	x2
	Brackets to attach wall bed to wall	x2
J	Legs (left and right)	x2
	Tubes (for attaching legs)	x1
	Threaded inserts	x16
	M8 x 16mm Screws	x16
	#10 x 55mm Screws	x8
*Junnino-	#8 x 15mm Screws	x44
Dimini-	#10 x 15mm Screws	x4
Junum	#10 x 30mm Screws	x4
(*)	M5 x 15mm Screws	x2
ŷ-	M6 x 30mm Bolts	x4
Û	M8 x 50mm Bolts	x8
0	M8 x 70mm Bolts	x3
0	Washers	x8
	Nyon Washers (for pivoting legs)	x4
•	M5 Nuts (for saddle locks)	x2
	M8 Locking Nuts	х6