

HORIZONTAL WALL BED





















INSTRUCTIONS - TWIN

PRO
VALUE SERIES


Upper cabinet is a design option. Not included.



Hardware



A		Threaded Insert	x16
B		M8 x 16 Screw	x16
C		M5 x 55 Screw	x26
D		Washer	x4
E		M8 x 40 Screw	x2
F		M8 Nut	x6
G		Piston	x2
H		Mattress Support	x2
I		M5 x 10 Screw	x2
J		Fastener	x2
K		Bracket	x2
L		Washer	x8
M		M6 x 20 Screw	x8
N		Wrench	x1
O		Allen Key	x1
P		Plate	x2
Q		Leg	x2
R		Tube	x1
S		M5 Nut	x2
T		5/8" x 15mm Screws	x18

Drilling Guide

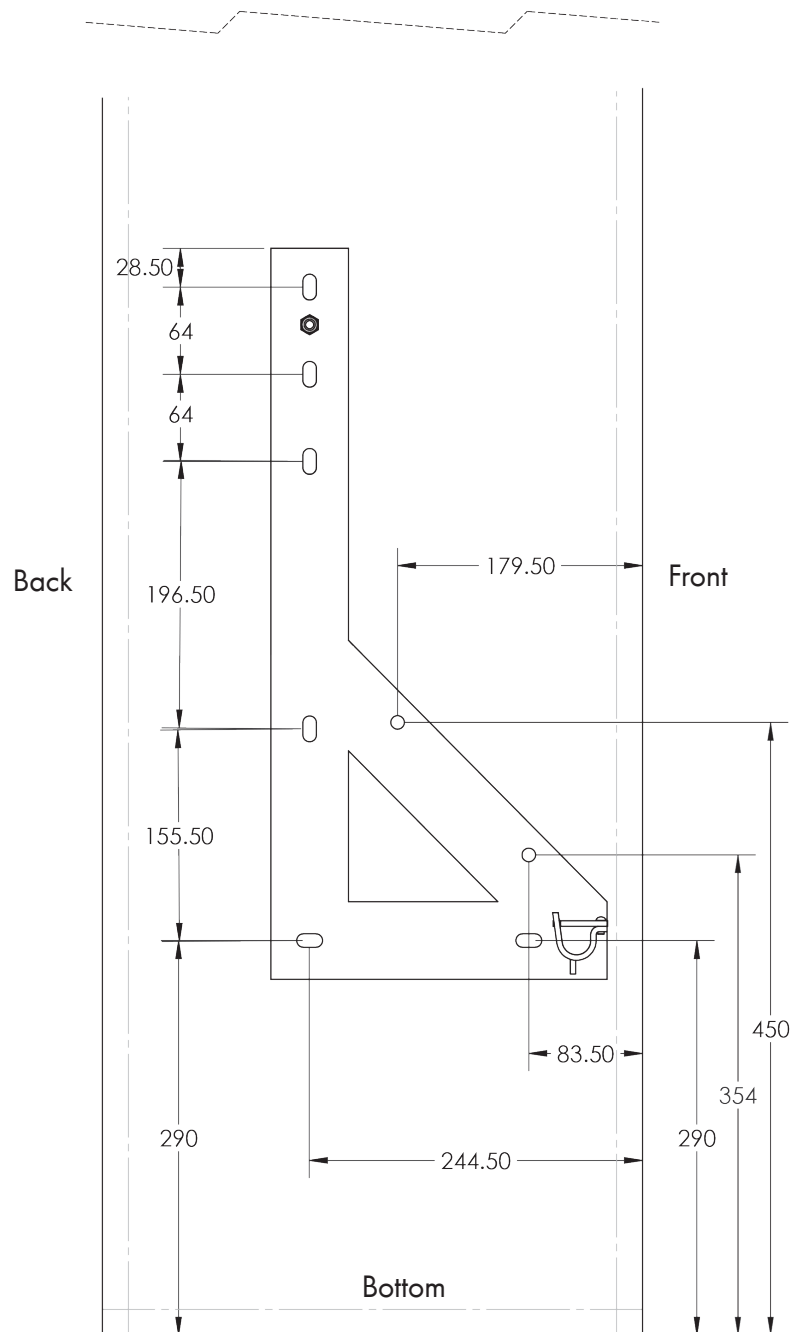


All measurements are for 19mm (3/4") board.

Step 1 Installing The Mounting Brackets

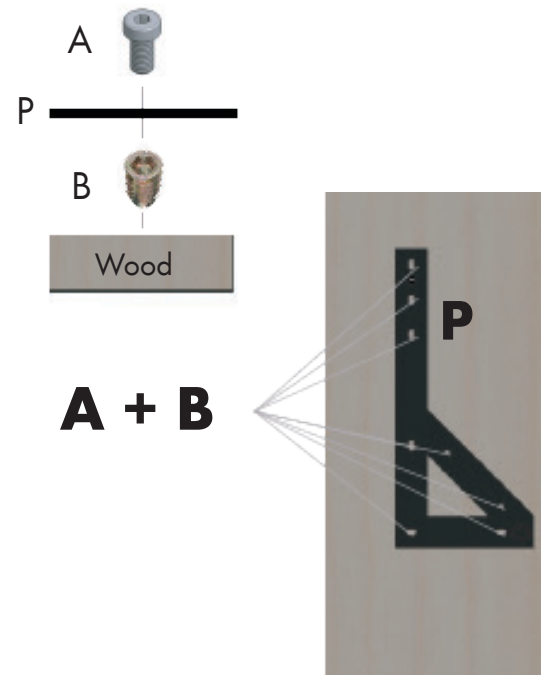
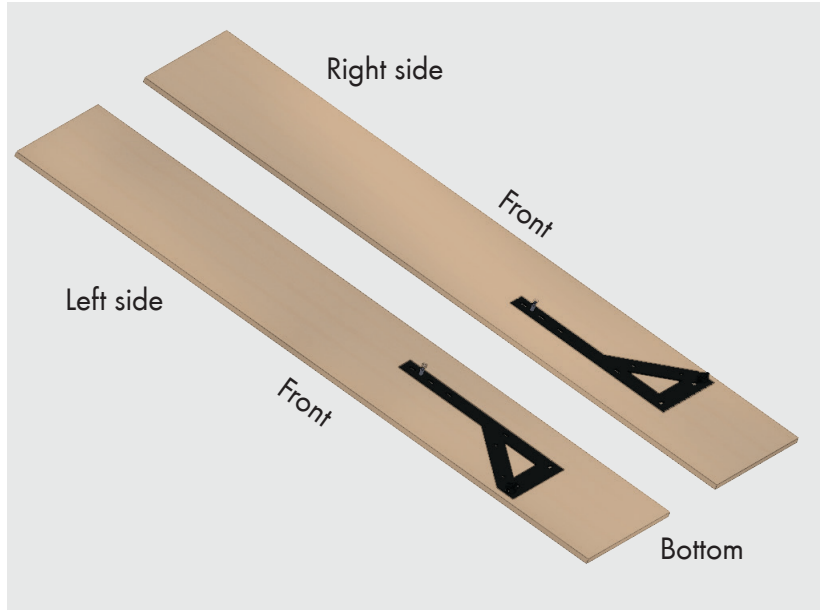


Step 2 Assembling The Cabinet

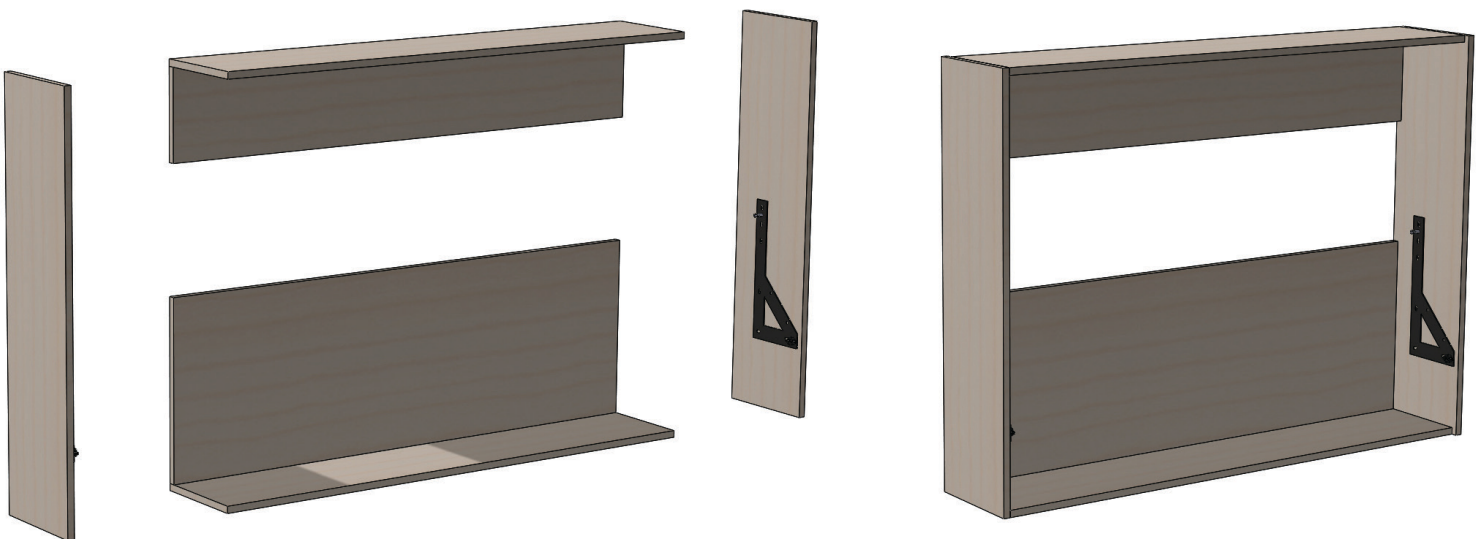


See conversion guide for suggested cabinet dimensions

Step 3 Securing To The Wall

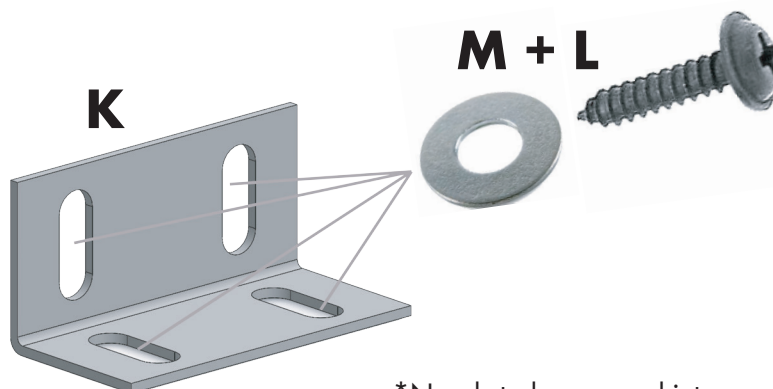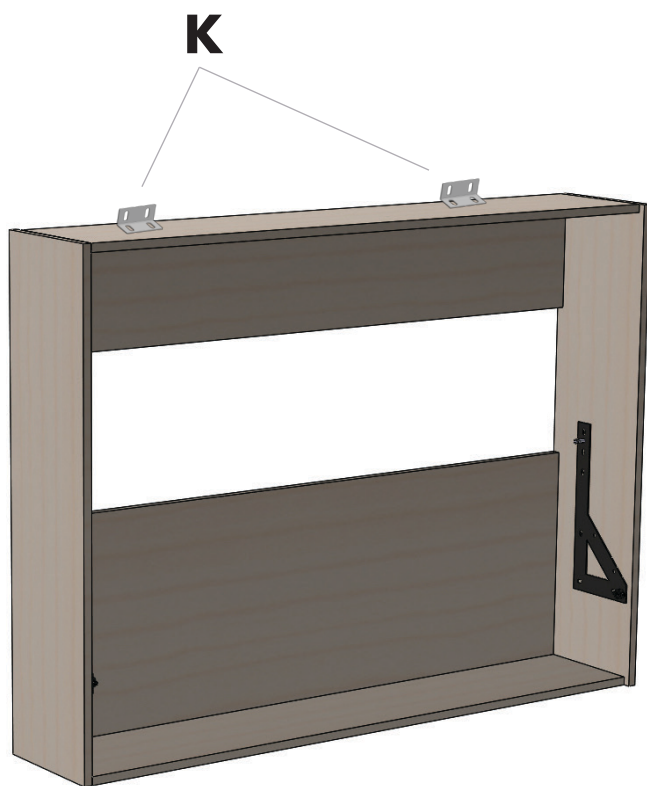


*Needs to be secured into at least two wood or metal studs.

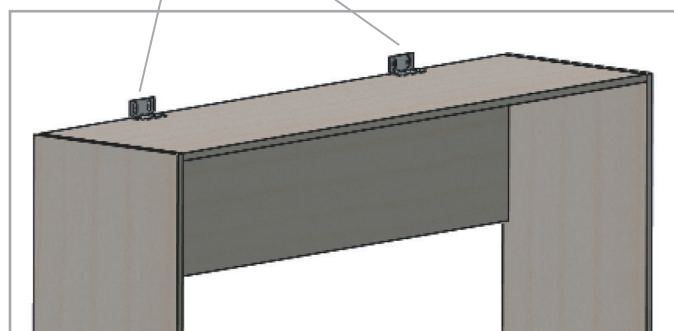


*Professional installation recommended.

Step 4 Mounting The Frame To The Doors

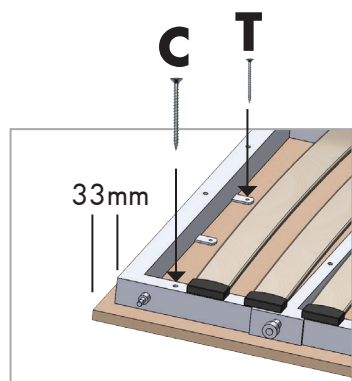


C = x 26

T = x 18

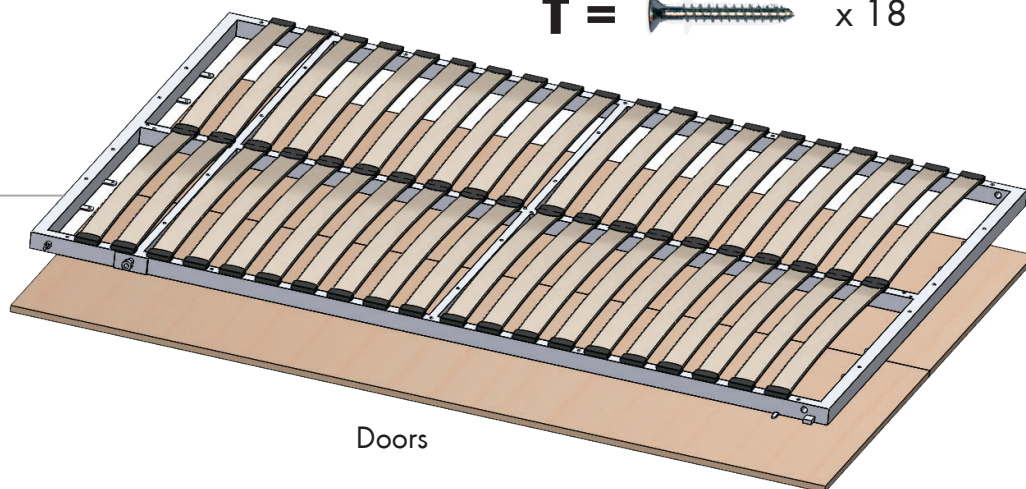


Doors

Step 5 Mounting The Frame To The Mounting Bracket

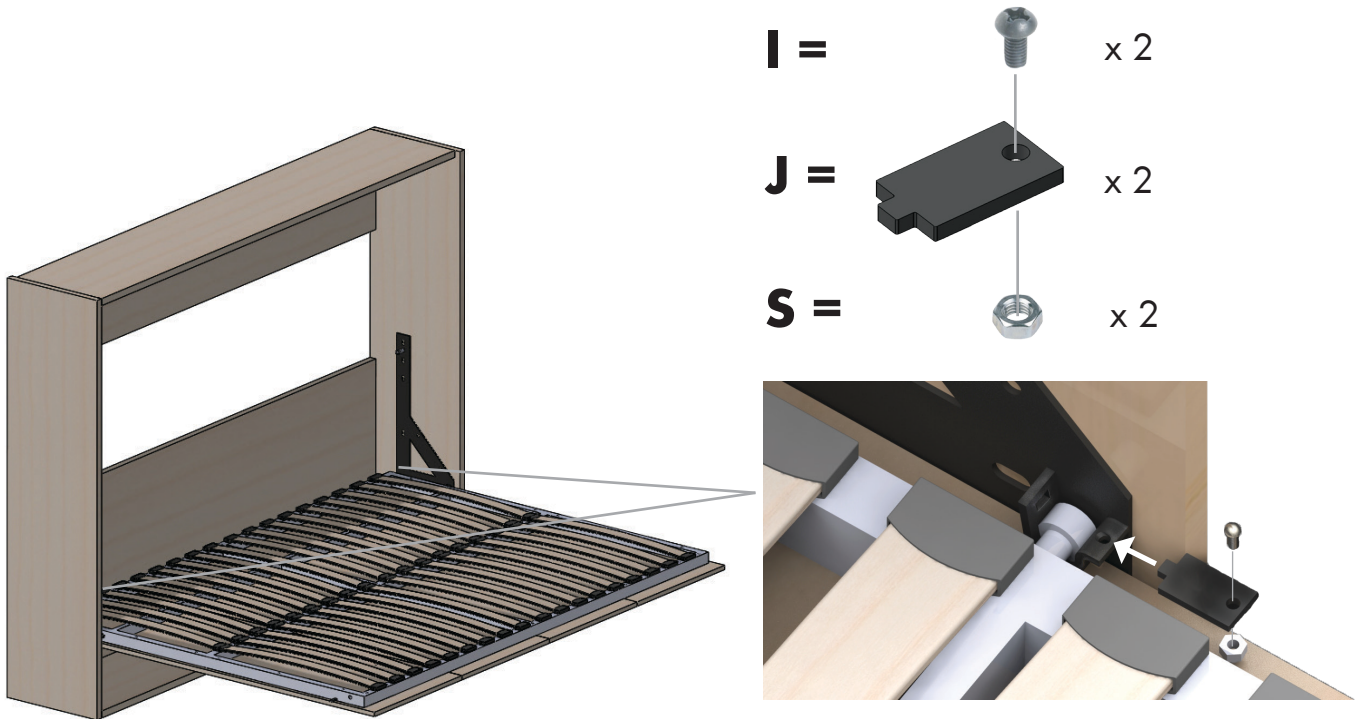


Step 6 Installing The Leg

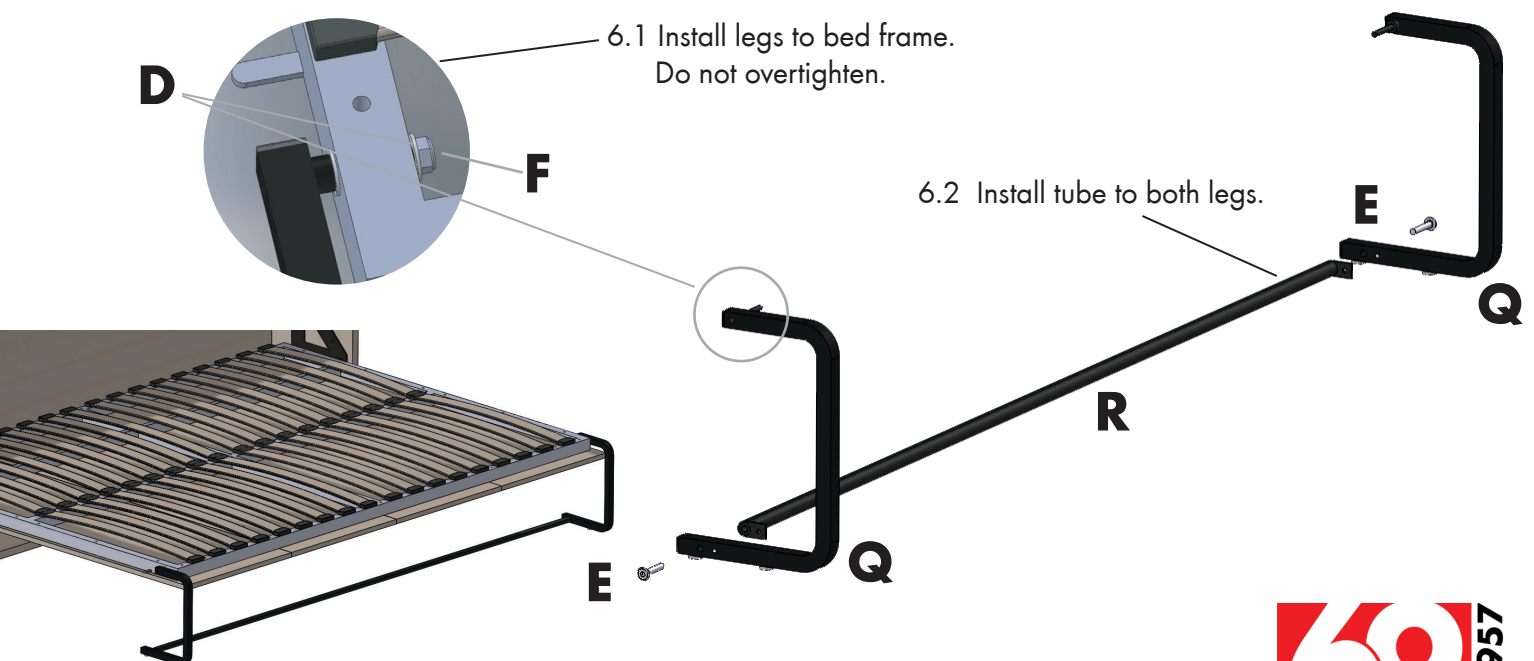


Step 7 Installing The Mattress Support

Insert the mattress support into the predrilled holes in the bed frame.

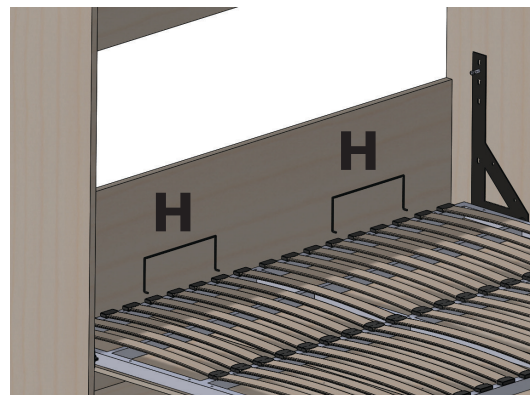

Step 8 Installing The Pistons


Turn end piece slightly for piston to fit smoothly onto the bolts.

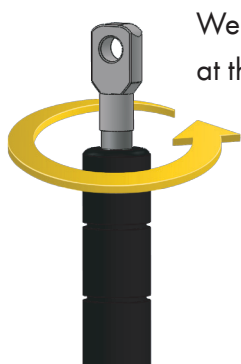



Weight capacity label goes at the top.

KG

F =  x 4

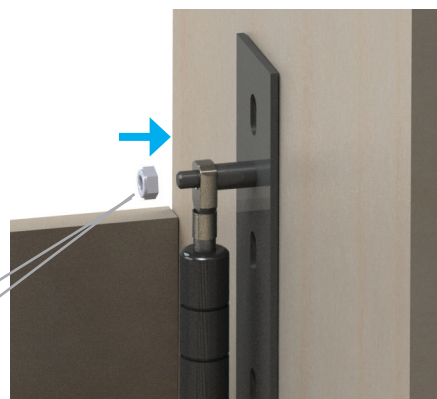

Screw nuts on top and bottom to secure pistons.

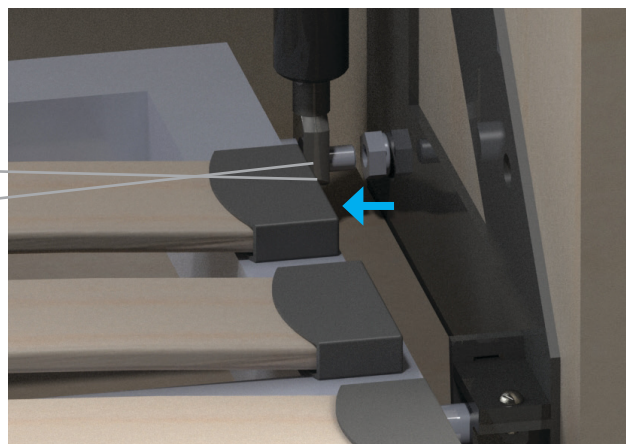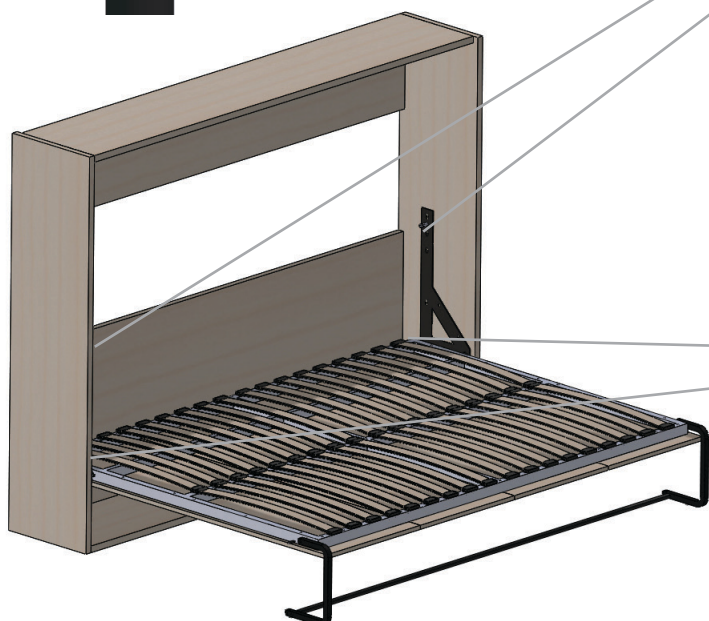

Step 9 Using The Wall Bed



The wall bed is assembled and shown in lowered and locked position. Install piston with weight label at the top.



Pivot the leg towards the inside of the unit. Make sure leg is fully closed.



Push down on the middle of the bed to unlock the pistons. Repeat this operation when you wish to lock the wall bed.



Pull up gently to close. Leg serves as mattress retaining system. Pistons insure that door closes properly and remains closed.

Important Note: Pro Value offers a limited warranty on slat bases used in the wall bed as well as the mechanisms. The warranty covers the replacement of parts with manufacturing defects and/or breakage caused by regular use. It does not cover damages caused by poor installation or misuse of the product. Professional installation suggested. The bed must be secured to the wall into wood or metal studs.

HORIZONTAL WALL BED INSTRUCTIONS

Würth Baer Supply
909 Forest Edge Drive
Vernon Hills, IL 60061
T: 800-289-2237
F: 888-558-2237
www.wurthbaersupply.com

Other locations:

West Haven, CT
Elk Grove Village, IL
Indianapolis, IN
Versailles, KY
Oak Park, MI
Eagan, MN

Fenton, MO
Kansas City, MO
Londonderry, NH
Edison, NJ
Pennsauken, NJ
Syracuse, NY
Guilderland Center, NY

Brooklyn Heights, OH
Columbus, OH
Middletown, OH
Bethlehem, PA
Harrisburg, PA
Rumford, RI
Pewaukee, WI