


Single Acting Spring Hinge Full Mortise Type: 4010-4020

(Step 1)

Install Hinges to door and jamb, tension collar may be positioned up or down, keep the tension collar in the same direction for all hinges on the door.

D Fasten Hinges securely with screws provided.

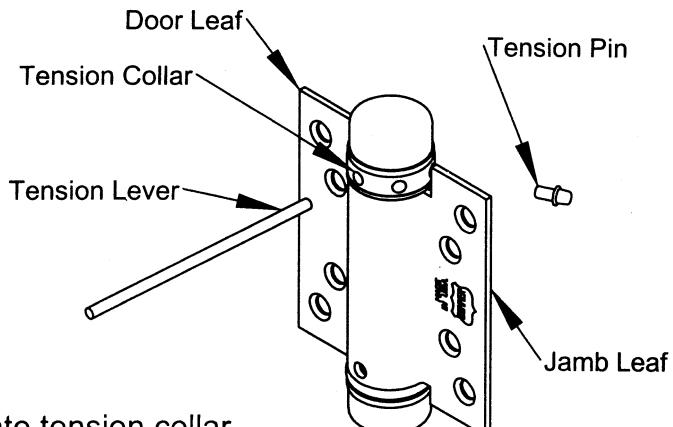

(Step 2)

Place door in closed position,

Insert Tension Lever into tension collar and rotate tension collar

Insert Tension Pin into open hole and recoil of spring will press tension pin against shoulder of Hinge Leaf.

(3 Holes of Tension is recommended but more maybe required to close door)

(Step 3)

If closing action of door is too fast decrease tension

If closing action is too slow increase tension.

(5 Holes of Tension is maximum recommended)

If door or hinges squeak or bind they are not properly fitted and may require extra lubrication at the hinge joints.

