


Installation Instructions

9813 Specimen Pass-Thru Cabinet

! IMPORTANT: If installed unit projects above top of wainscot, install aluminum channel or other filler in gap between finished wall and front panel of unit. Allow clearance for construction features that may protrude into rough wall opening. Always check local codes and ordinances prior to installation.

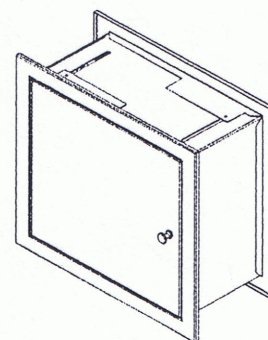

1. Rough-in the wall opening per dimensions shown in Figure 1.
2. Slide one front panel onto the cabinet so that the screw holes in the mounting tabs are aligned with the slot on the cabinet body.
3. Center the cabinet in the wall opening with right side up (arrow on "This Side Up" label points upward as shown in Figure 1).
4. Slide the second front panel into place so that the holes in the mounting tabs are aligned with the slot on the cabinet body.
5. Open the door. Insert the four #10 x 1-1/2" screws supplied through the slots of the body and front panel tabs at the mounting hole locations (Figure 1). **DO NOT tighten the screws at this time!**
6. Take care to ensure the entire perimeter of both front panels are positioned tight against the wall surface, then tighten the four screws to secure the unit in the wall.
7. Remove the protective vinyl and "This Side Up" labels from the doors and front panels.

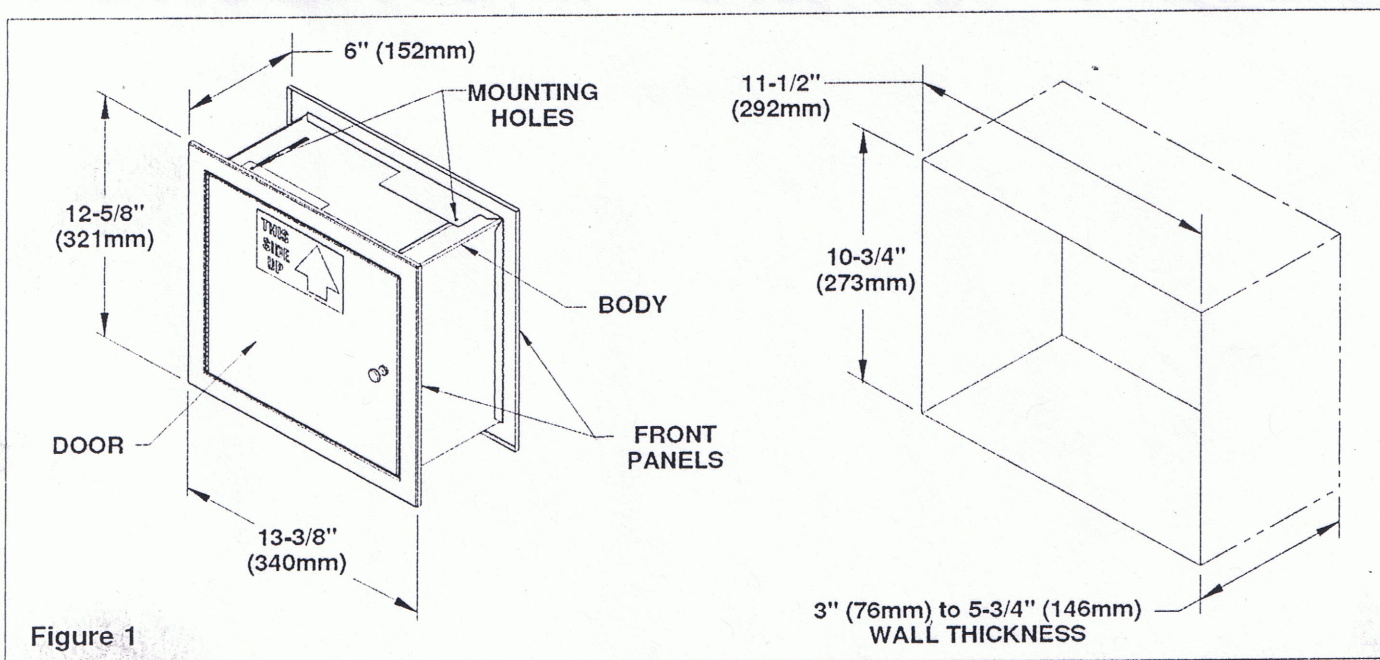


Figure 1

Bradley 