

Installation Instructions

Waste Receptacle Liners

Part Nos. P11-001, P11-003, P11-004, P11-005, P11-006, P11-007, P11-009, P11-014, P11-015, P11-019 & P11-020

Installation Instructions



IMPORTANT: If your waste receptacle has hooks for a liner with grommets (as shown in Figure 1), bend the liner clips down with a set of pliers (as shown in Figure 2).

1. Using alcohol rub supplied, clean the surface of the waste receptacle where the hook-and-loop fastener is to be applied.
 2. Insert the new vinyl-coated nylon liner into the waste receptacle, aligning the corners of the liner with the corners of the receptacle.
 3. Peel the plastic backing off the hook-and-loop fastener and attach the liner to the receptacle.
- NOTE: Wait 24 hours for hook-and-loop fastener to cure before using the waste receptacle.*

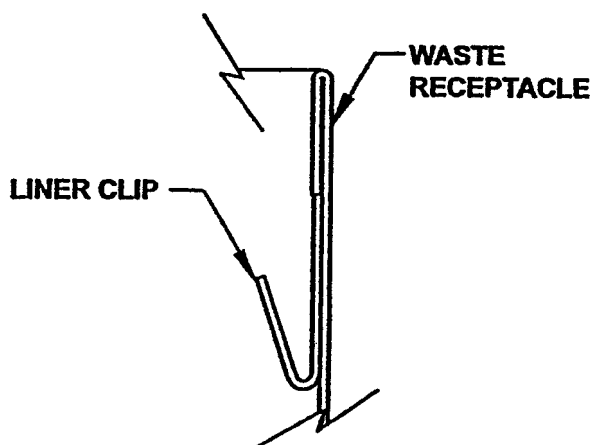


Figure 1

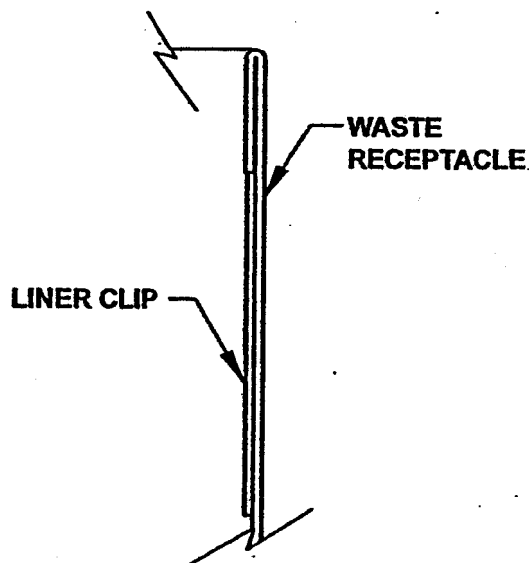


Figure 2

Bradley