

Burns Mounting Options

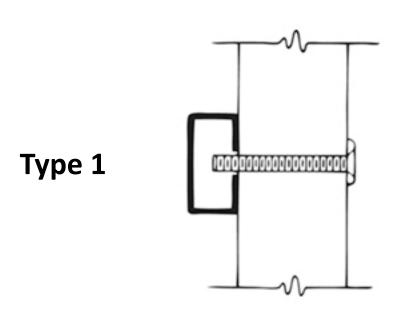

Standard Duty Thru Bolt with Finish Washer


Size: $1/4-20 \times 2-1/2$ " TB w/ Finish Washer Use for Door Pulls and Push Bars

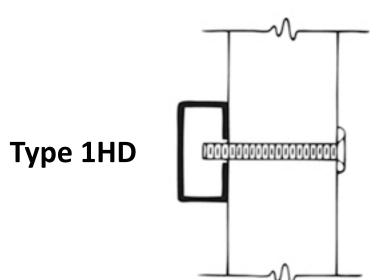

Heavy Duty Thru Bolt with Finish Washer


Size: $3/8-24 \times 2-1/2$ " TB w/ Finish Washer

Use for Door Pulls and Push Bars

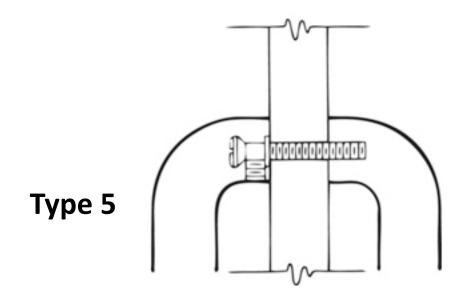

Standard Duty Back to Back Mounting


Size: 1/4-20 × 2-1/2" Conehead Use for Door Pulls and Push Bars

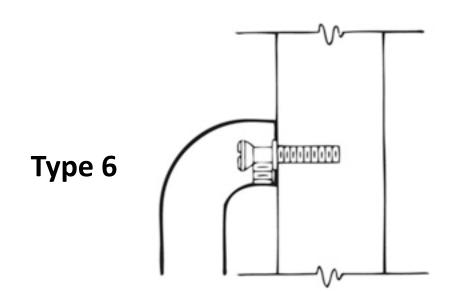

Standard Duty Concealed Mounting on metal doors

Size: $1/4-20 \times 1$ " Conehead

Use for Metal Door Pulls and Push Bars - tap door for 1/4-20 thread

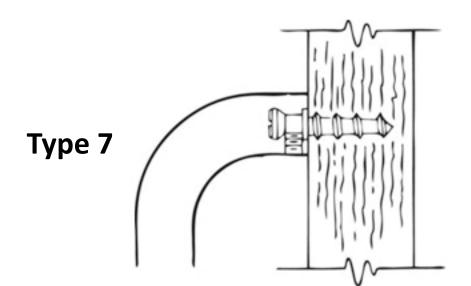


Concealed Mounting on wood door

Size: 1/4-20 Conehead w/ $\#8 \times 1-1/4$ " Wood Screw Use for Wood Door Pulls and Push Bars

Type 9

Standard Duty Decorative Thru Bolt Mounting

Size: Decorative Cap with 1/4-20 Threaded Stud Use: Decorative Cap used in place of Standard Duty Thru-Bolt on Door Pulls and Push Bars

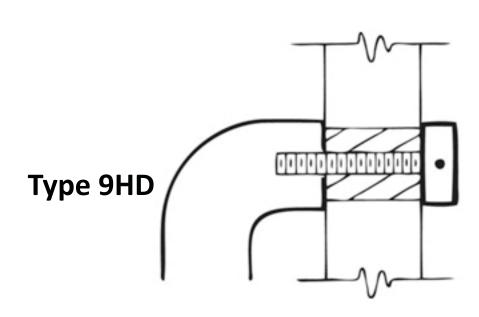


Heavy Duty Decorative Thru Bolt Mounting

Size: Decorative Cap with 3/8-24 Threaded Stud5/8" diameter Plexiglas

Sleeve. Plastic Washers.

Use for Metal or Wood Door Pulls and Push Bars

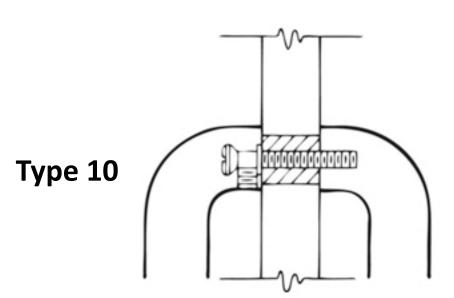

Standard Duty Back to Back Mounting for glass door

Size: $1/4-20 \times 1-1/4$ " Conehead. 5/8" diameter Plexiglas Sleeve. Metal

Washers. Plastic Washers

Use for Glass Door Pulls and Push Bars - Specify Glass Thickness