

Burns Mounting Options

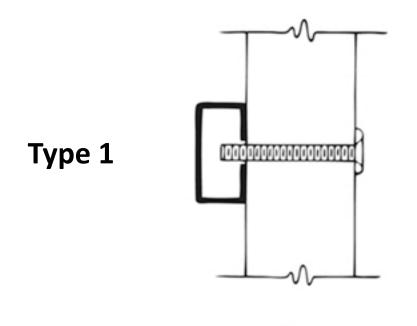

Standard Duty Thru Bolt with Finish Washer

Size: $1/4-20 \times 2-1/2$ " TB w/ Finish Washer Use for Door Pulls and Push Bars

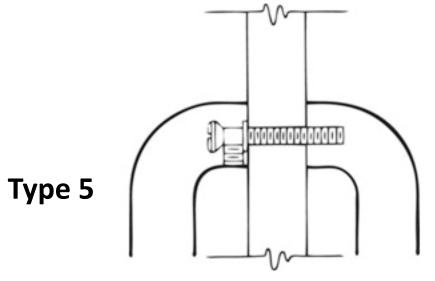

Standard Duty Back to Back Mounting

Size: $1/4-20 \times 2-1/2$ " Conehead Use for Door Pulls and Push Bars