


# Burns Mounting Options

**Type 1**

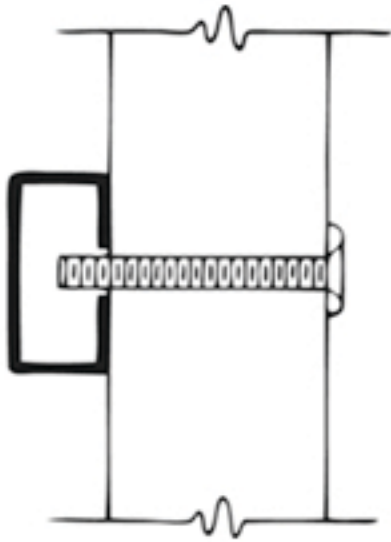


## **Standard Duty Thru Bolt with Finish Washer**

Size: 1/4-20 × 2-1/2" TB w/ Finish Washer

Use for Door Pulls and Push Bars

**Type 5**

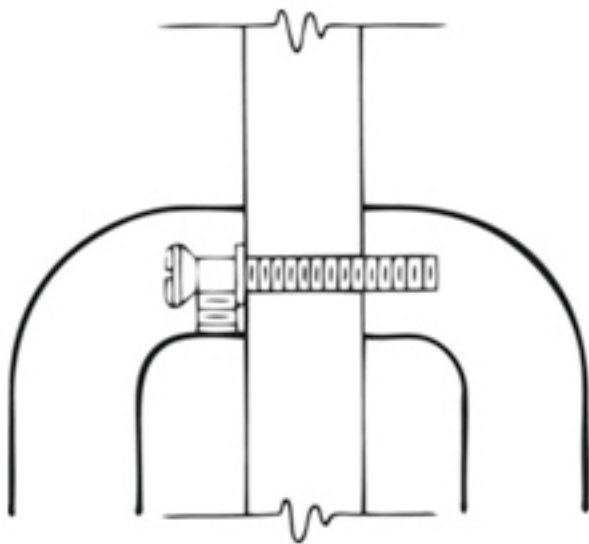


## **Standard Duty Back to Back Mounting**

Size: 1/4-20 × 2-1/2" Conehead

Use for Door Pulls and Push Bars

**Type 6**

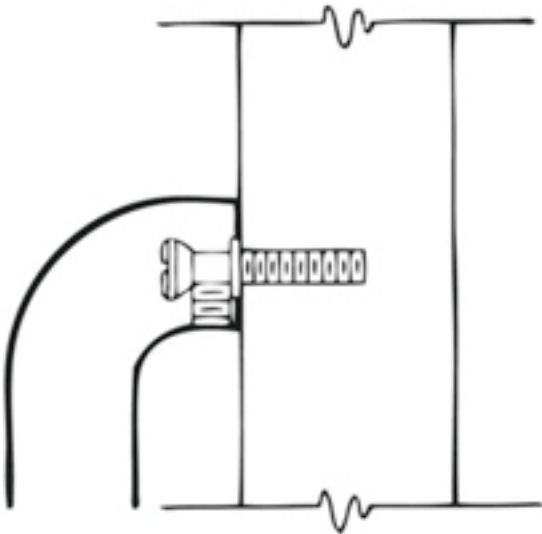


## **Standard Duty Concealed Mounting on metal doors**

Size: 1/4-20 × 1" Conehead

Use for Metal Door Pulls and Push Bars - tap door for 1/4-20 thread

**Type 7**

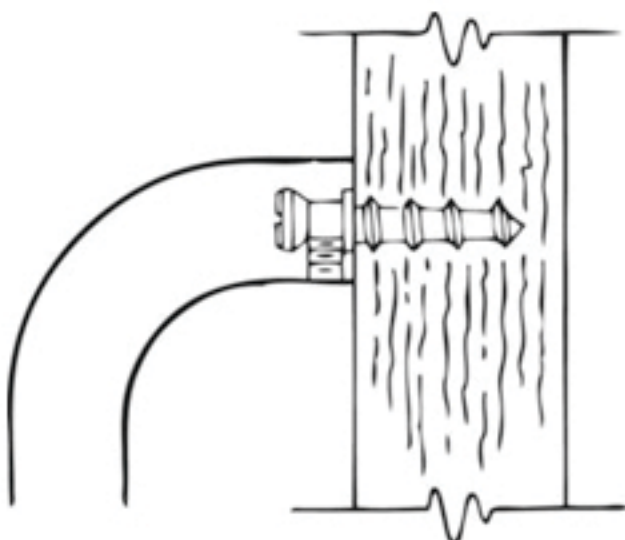

## **Concealed Mounting on wood door**

Size: 1/4-20 Conehead w/ #8 × 1-1/4" Wood Screw

Use for Wood Door Pulls and Push Bars