

Burns Mounting Options

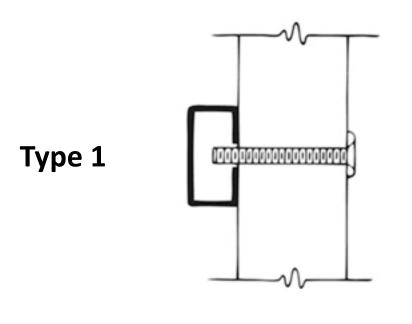


Standard Duty Thru Bolt with Finish Washer

Size: $1/4-20 \times 2-1/2$ " TB w/ Finish Washer Use for Door Pulls and Push Bars

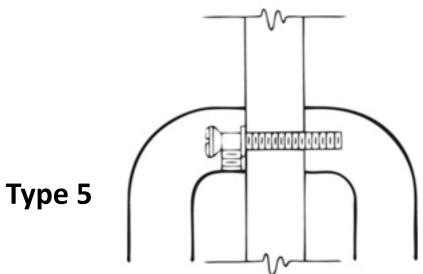

Standard Duty Back to Back Mounting


Size: $1/4-20 \times 2-1/2$ " Conehead Use for Door Pulls and Push Bars

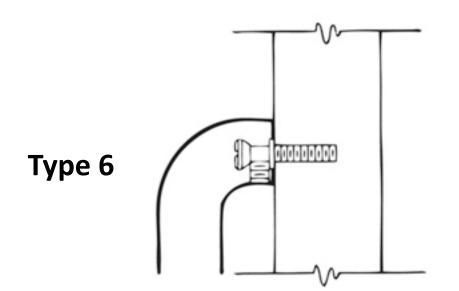

Standard Duty Concealed Mounting on metal doors


Size: $1/4-20 \times 1$ " Conehead

Use for Metal Door Pulls and Push Bars - tap door for 1/4-20 thread

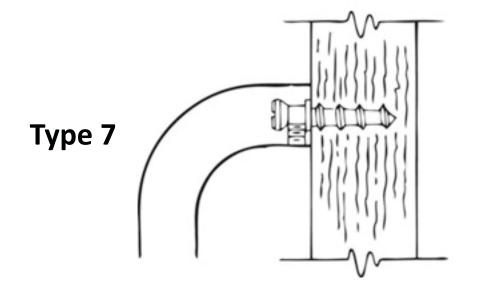


Concealed Mounting on wood door

Size: 1/4-20 Conehead w/ #8 × 1-1/4" Wood Screw Use for Wood Door Pulls and Push Bars

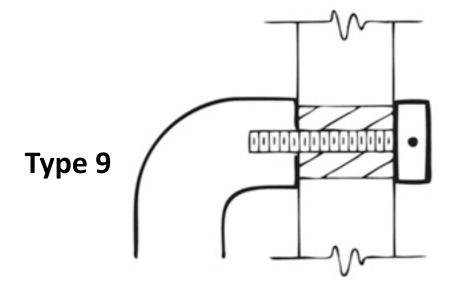

Standard Duty Decorative Thru Bolt Mounting

Size: Decorative Cap with 1/4-20 Threaded Stud
Use: Decorative Cap used in place of Standard Duty Thru-Bolt on Door Pulls
and Push Bars

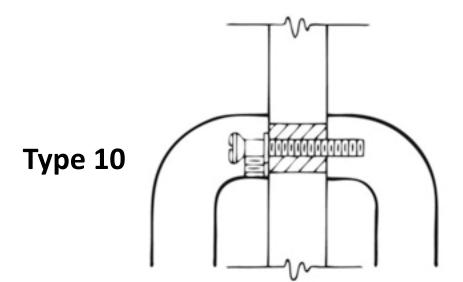

Standard Duty Back to Back Mounting for glass door

Size: 1/4-20 × 1-1/4" Conehead. 5/8" diameter Plexiglas Sleeve. Metal

Washers. Plastic Washers

Use for Glass Door Pulls and Push Bars - Specify Glass Thickness