


Burns Mounting Options

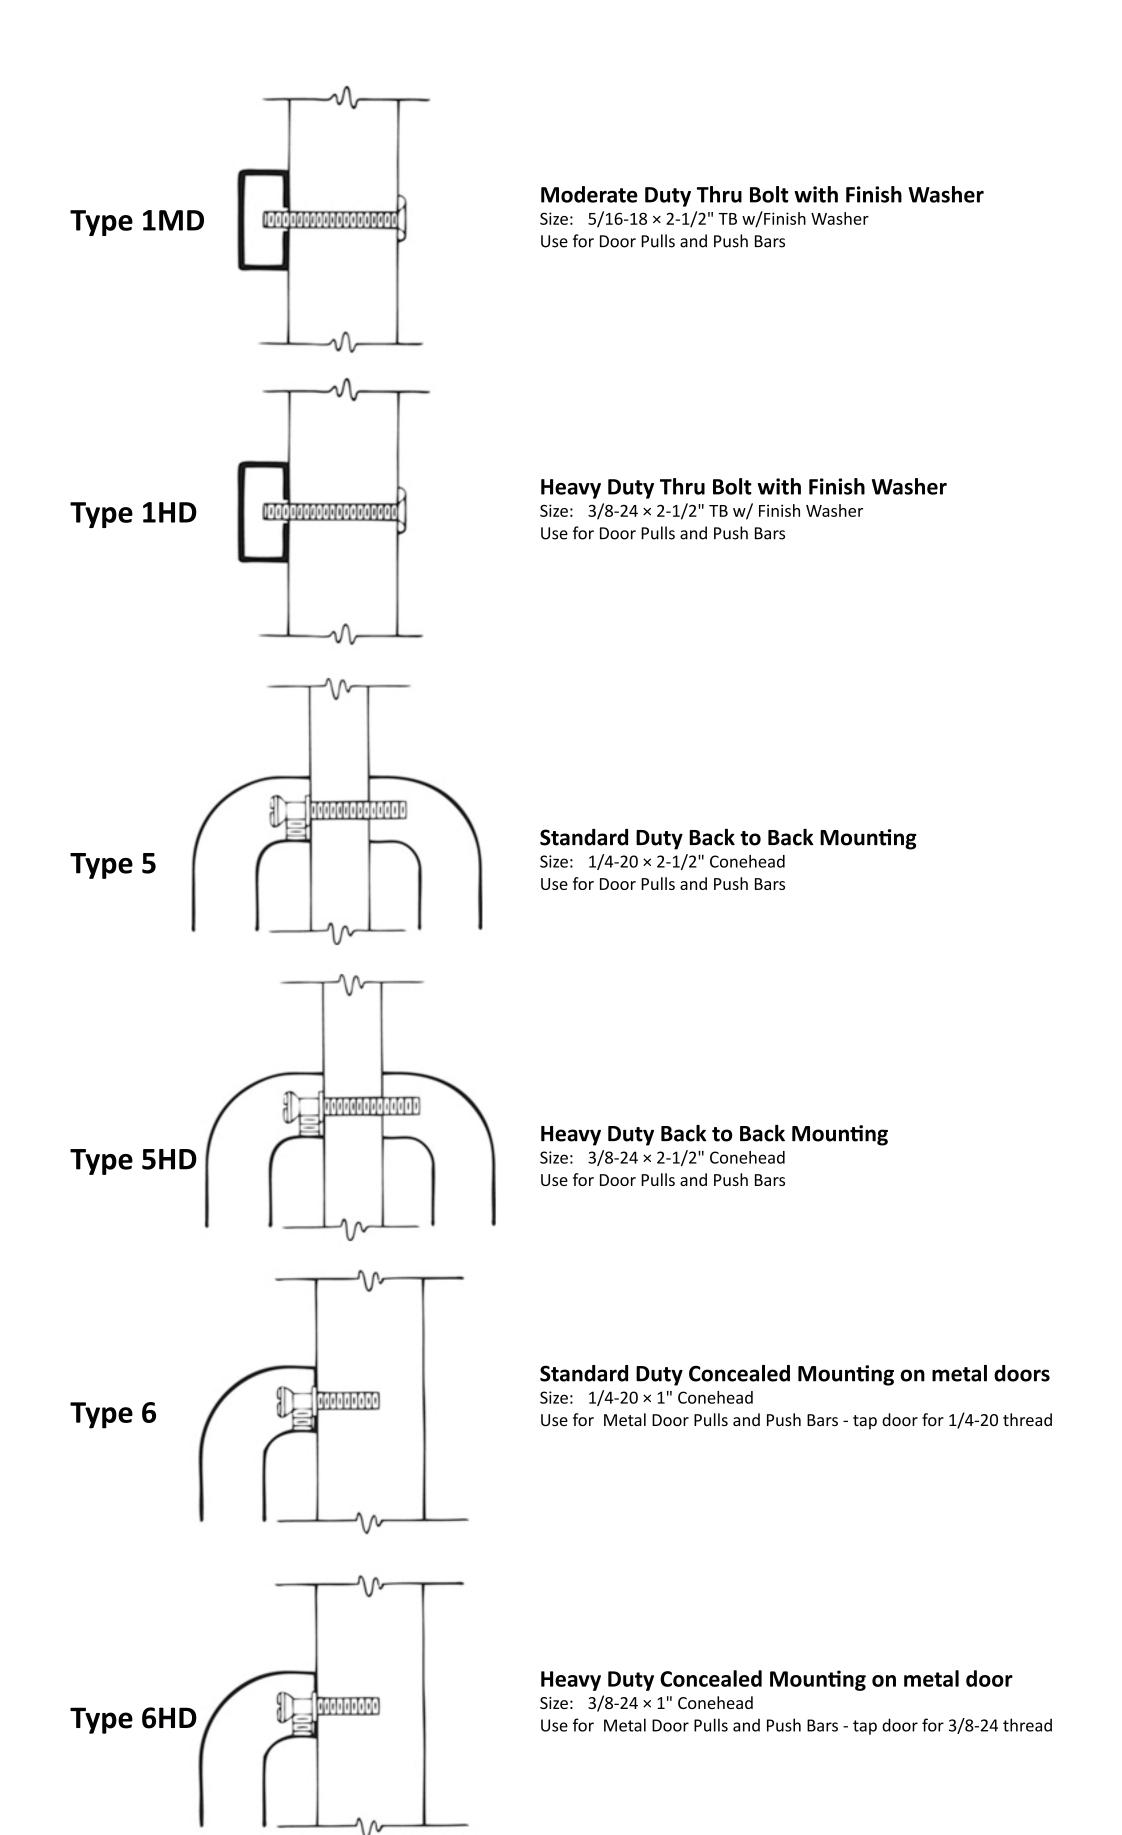

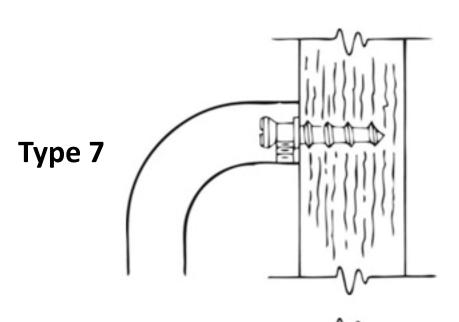


Concealed Mounting on wood door

Size: 1/4-20 Conehead w/ #8 × 1-1/4" Wood Screw Use for Wood Door Pulls and Push Bars

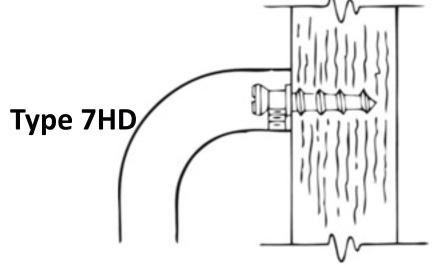


Heavy Duty Concealed Mounting on wood door

Size: 3/8-24 Conehead w/ #14 × 1-1/2" Wood Screw Use for Wood Door Pulls and Push Bars

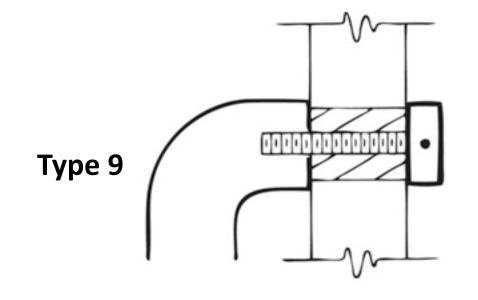

Standard Duty Decorative Thru Bolt Mounting


Size: Decorative Cap with 1/4-20 Threaded Stud
Use: Decorative Cap used in place of Standard Duty Thru-Bolt on Door Pulls
and Push Bars

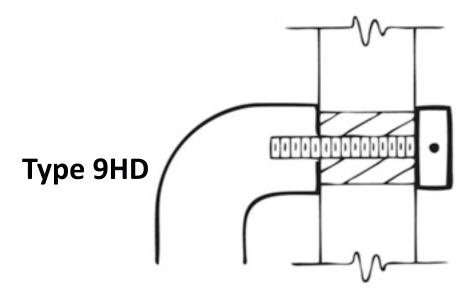

Heavy Duty Decorative Thru Bolt Mounting

Size: Decorative Cap with 3/8-24 Threaded Stud5/8" diameter Plexiglas Sleeve. Plastic Washers.


Use for Metal or Wood Door Pulls and Push Bars

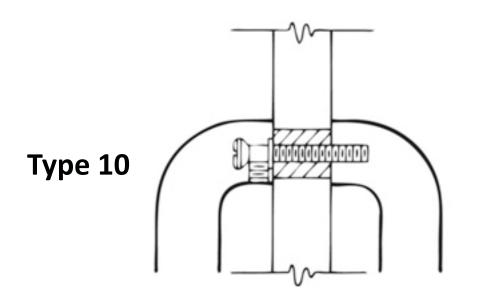

Standard Duty Back to Back Mounting for glass door

Size: $1/4-20 \times 1-1/4$ " Conehead. 5/8" diameter Plexiglas Sleeve. Metal Washers. Plastic Washers

Use for Glass Door Pulls and Push Bars - Specify Glass Thickness

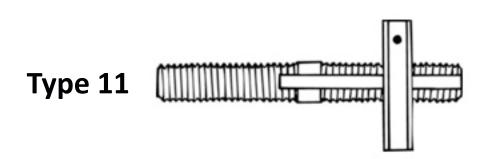

Heavy Duty Back to Back Mounting with Reverse Thread Stud and Spanner Collar

Size: $3/8-24 \times 3-1/2$ " LH/RH threaded stud. 1" or 1-1/4" diameter Spanner Collar Use for Heavy Duty Type of Back to Back Mounting with LH / RH Reverse Thread for Door Pulls and Push Bars