


MOUNTING INFORMATION

Sex nuts or through bolts are required for wood and plastic covered composite doors, and any type of door without reinforcements and recommended for wood core and metal clad (Kalamein) type doors.

RH SHOWN
LH OPPOSITE

Closer To Be Installed In A True Horizontal Position To Ensure Proper Closer Performance.

Hold-open	Stop	For Doors 28" To 32" Wide			For Doors 33" To 41" Wide			For Doors 42" To 48" Wide		
		A	B	C	A	B	C	A	B	C
85°	90°	11 (279.4)	10 (254)	5-1/2 (139.7)	13-1/8 (333.4)	12-1/4 (311.2)	7-5/8 (193.7)	15-1/8 (384.2)	14-3/8 (365.1)	9-5/8 (244.5)
90°	95°	10-1/2 (266.7)	9-1/2 (241.3)	5 (127)	12-5/8 (320.7)	11-5/8 (295.3)	7-1/8 (181)	14-1/2 (368.3)	13-3/4 (349.3)	9 (228.6)
95°	100°	10 (254)	9 (228.6)	4-1/2 (114.3)	12 (304.8)	11-1/8 (282.6)	6-1/2 (165.1)	13-7/8 (352.4)	13-1/8 (333.4)	8-3/8 (212.7)
100°	105°	9-1/2 (241.3)	8-1/2 (215.9)	4 (101.6)	11-5/8 (295.3)	10-5/8 (269.9)	6-1/8 (155.6)	13-1/4 (336.6)	12-1/2 (317.5)	7-3/4 (196.9)
105°	110°	9 (228.6)	8 (203.2)	3-1/2 (88.9)	11 (279.4)	10-1/8 (257.2)	5-1/2 (139.7)	12-3/4 (323.9)	12-1/8 (308)	7-1/4 (184.2)
110°	115°	8-1/2 (215.9)	7-1/2 (190.5)	3 (76.2)	10-1/2 (266.7)	9-1/2 (241.3)	5 (127)	12-1/4 (311.2)	11-1/2 (292.1)	6-3/4 (171.5)

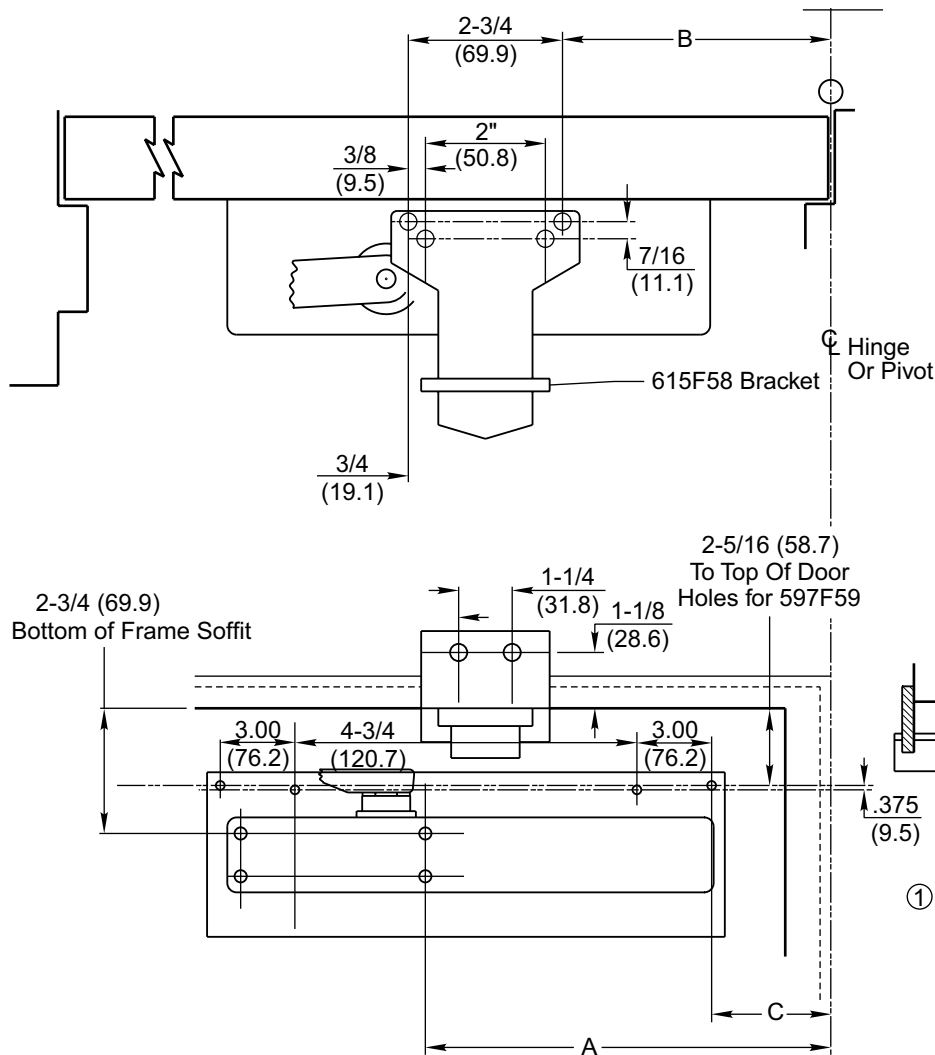

①

This page for Frame Reveals 1-7/8 to 4-5/8 (48mm to 117mm)
See page 2 for all Frame Reveals.

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

DC6210 With Spring Stop Arm
A11 or A12 Push Side Mounting
With Drop Plate 597F59
Standard Reinforcing
Bracket 615F58

Page 1 of 2

**Corbin
Russwin**®

www.corbinrusswin.com

Do Not Scale Drawing

Supersedes T30733

Dr.

App.

Date 09-04

Template
Number




T30733-1 Page 1 of 2

MOUNTING INFORMATION

Sex nuts or through bolts are required for wood and plastic covered composite doors, and any type of door without reinforcements and recommended for wood core and metal clad (Kalamein) type doors.


RH SHOWN
LH OPPOSITE

Closer To Be Installed In A True Horizontal Position To Ensure Proper Closer Performance.

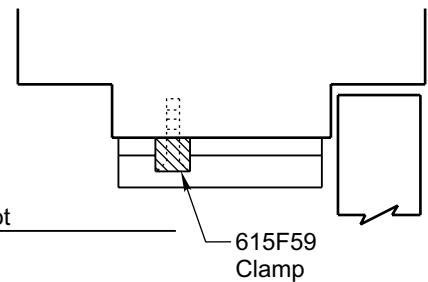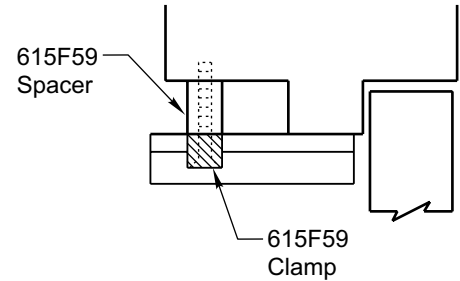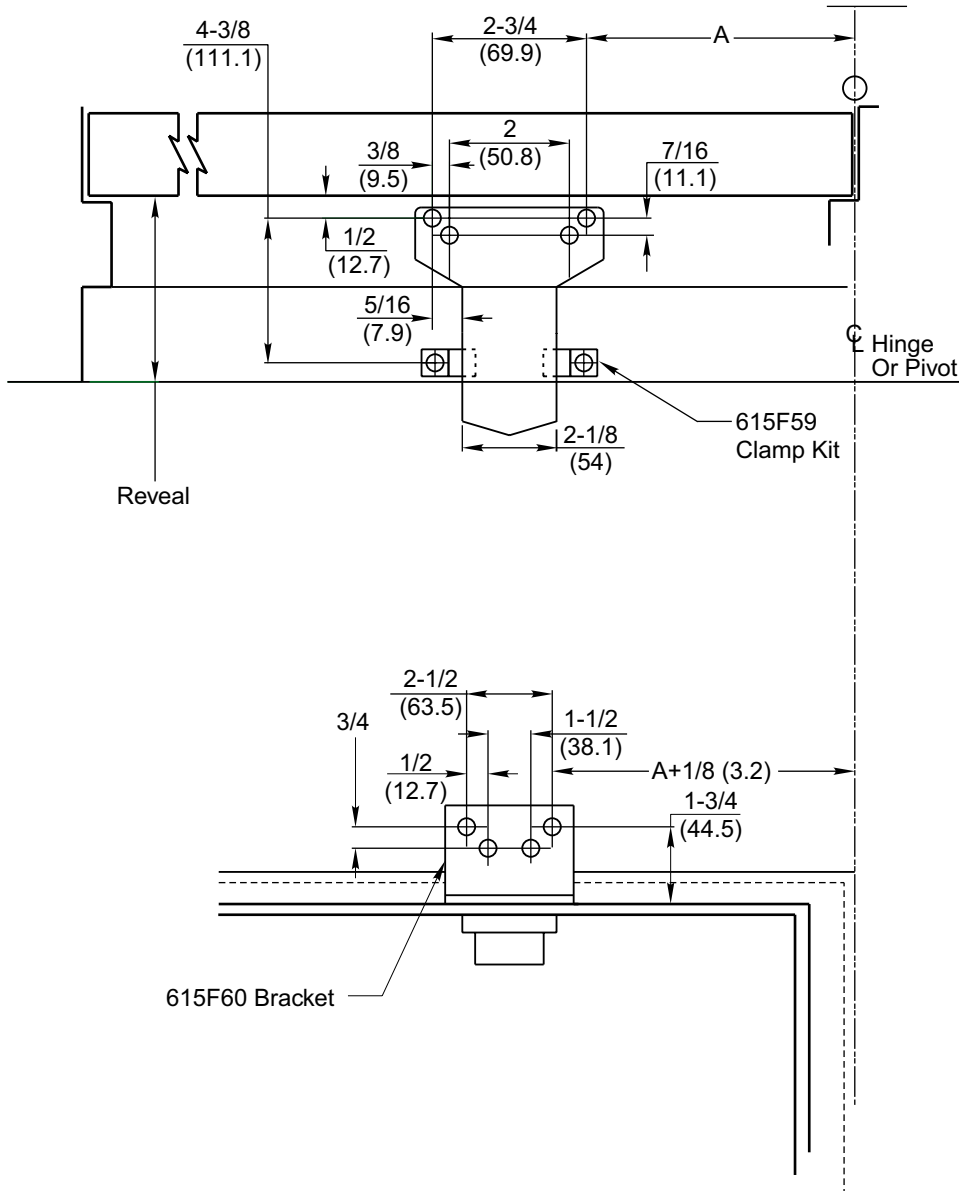

Frame Reveals Over 4-5/8
(Uses 615F59 Clamp Kit)

Flush Partitions
(Uses 615F60 Bracket)

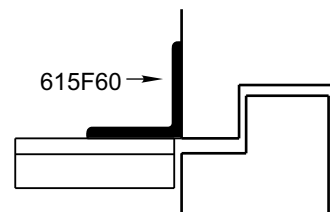

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

DC6210 With Spring Stop Arm
A11 or A12 Push Side Mounting
Optional Brackets
615F59 or 615F60

Page 2 of 2

**Corbin
Russwin**®

www.corbinrusswin.com

Do Not Scale Drawing

Supersedes T30733 Dr. App.

Date 09-04

Template Number T30733-1 Page 2 of 2