
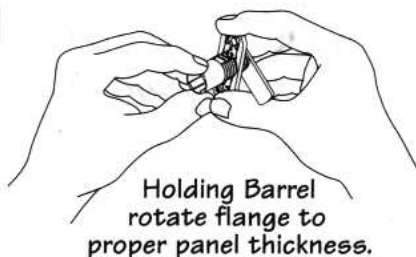


# CB-170 THICK PANEL CAM LOCK

- For panels  $\frac{3}{4}$ " thru  $1\frac{3}{8}$ " thick
- Bag contains a cylinder body, two cams and cam assembly nut.


## INSTALLATION STEPS

### STEP 1

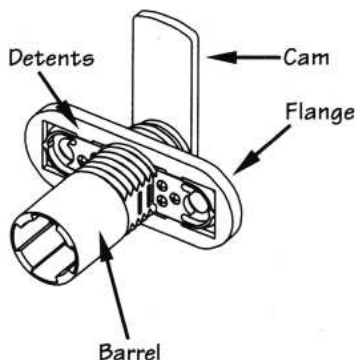

Holding Barrel rotate flange to proper panel thickness. Depth marks on the cylinder body can be used as a guide for setting the flange to the right depth. When finished, make sure that the detents are lined up with flat surfaces on the barrel.


### STEP 2

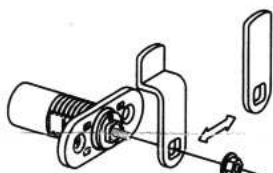

Install the cylinder body to the panel using two screws and tightening them securely so that the detents are firmly locked into position.

### STEP 3

Assemble desired cam to cylinder body using the cam assembly nut provided. This nut should always be tightened securely before installing a lock plug. Cams should be oriented so that the unit is locked when the key is turned counter-clockwise.

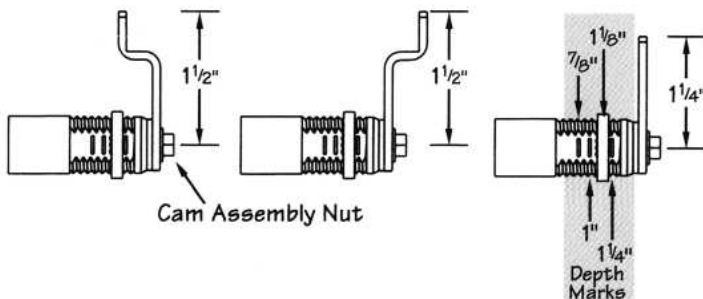

### STEP 4

Install the lock plug with the desired finish and key number, then check for proper lock action.

**CompX**  
**TIMBERLINE**

715 Center Street, Grayslake, IL 60030

Phone: 800.562.5227