


Kason Southern

A Division of Kason Industries, Inc.
 1078 Citizens Parkway, Suite-F
 Morrow, Ga. 30260
 Telephone No.: (678) 422-3274
 Fax No.: (678) 422-3278


PLEASE DELIVER THE FOLLOWING PAGES TO:

TO REMOVE LOCK FROM HANDLE:

1. REMOVE BACK PLATE FROM HANDLE.
2. PLACE A FLAT BLADE UNDER THE LOCKING BOLT.
3. PRY BOLT UPWARD UNTIL BOLT BREAKS AT LOCK BARREL.
4. REMOVE HEX NUT FROM LOCK BARREL AND RETRACT LOCK BARREL FROM HANDLE.

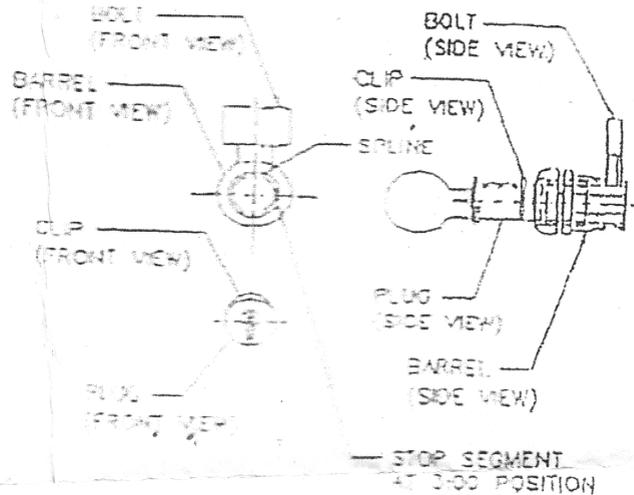


1

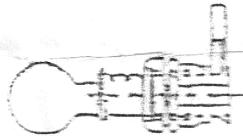


1. BOLT MUST BE IN EXTENDED POSITION.
2. GUIDE PLUG INTO BARREL UNTIL CLIP MEETS BARREL'S BORE STEP

2

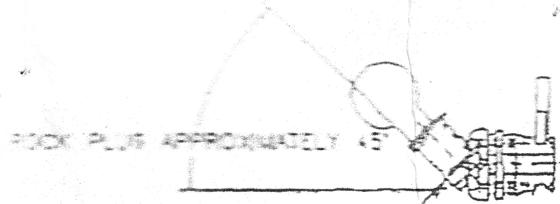

1. USE SPLINE AT 12:00 AS EDGE TO DEPRESS CLIP
2. PRESS FORCE IN DIRECTION OF ARROW.
3. THIS WILL DEPRESS CLIP & SPRING.

3

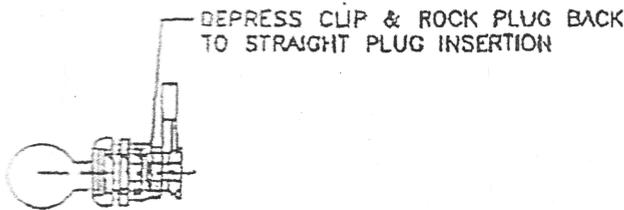

The barrel must be mounted into the handle before assembling the lock.

The stop segment (painted white) must be in the correct placement.

With the bolt ("T" shape bar) in the 9:00 position, the stop segment will be at the 12:00 position.

This is a one shot deal. If assembled incorrectly, the lock will not come apart again.

TO ASSEMBLE LOCK TO HANDLE:

1. ASSEMBLE LOCK BARREL TO HANDLE WITH STOP SEGMENT AT 3:00.
2. THREAD HEX NUT ONTO LOCK BARREL.
3. FOLLOW THE THREE PICTORIAL STEPS SHOWN TO THE LEFT.