


NO. 805 SERIES CONSTANT-LATCHING FLUSH BOLTS FOR METAL DOORS PREP ANSI 115.4-1993

THIS TEMPLATE APPLIES TO

ITEM NOS. 805, 805/8BFB

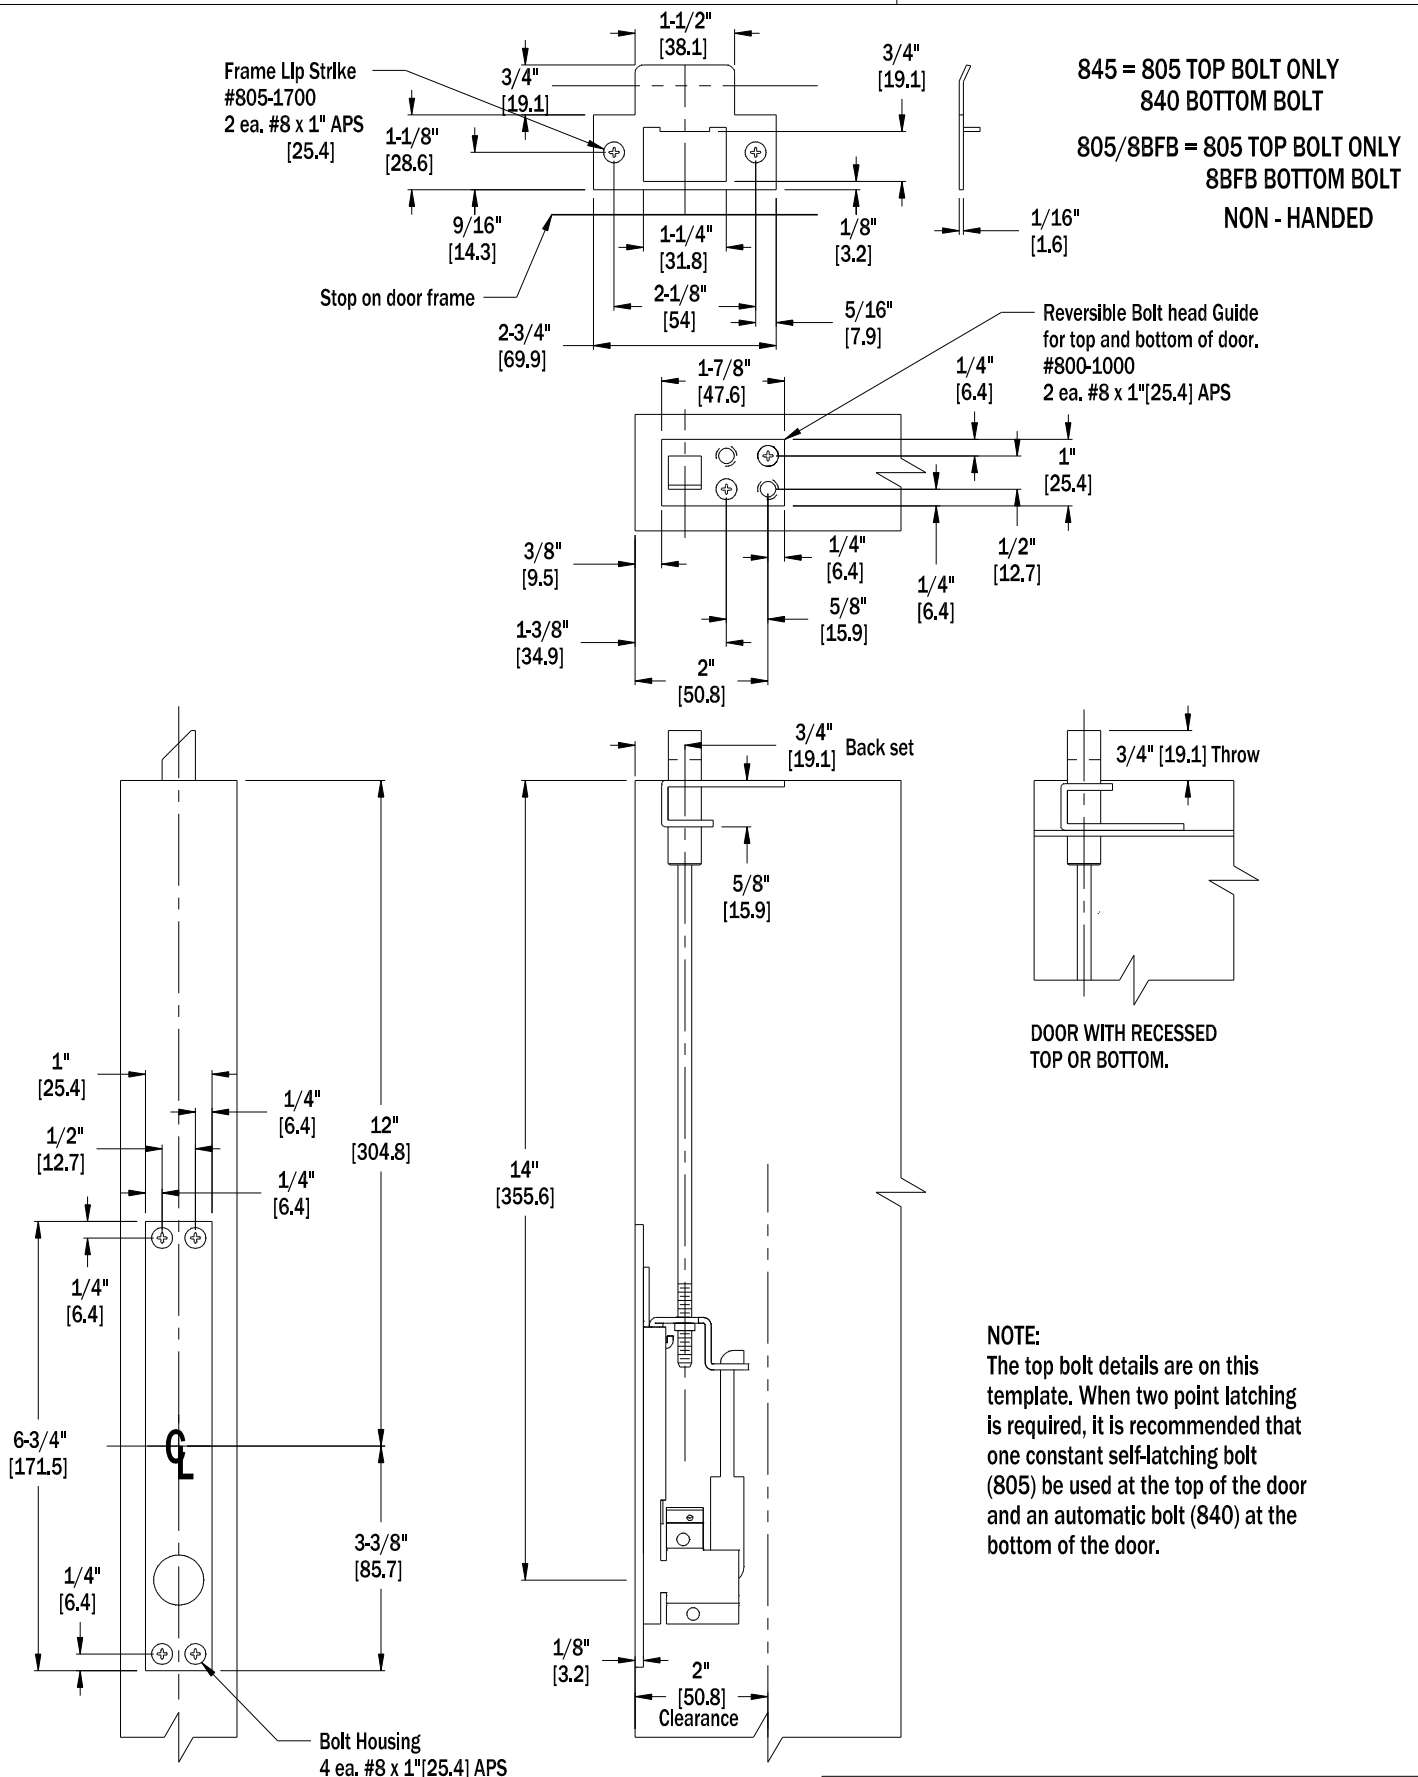

**DOOR CONTROLS
INTERNATIONAL™**

2362 BISHOP CIRCLE EAST
DEXTER, MI 48130 U.S.A.



Installation Instructions

Inactive Door

1. Measure 4"- 6" [101.6-152.4] from bottom of the Inactive Door.
2. Drill a 9/16" [14.3] dia. hole x 1-5/8" [41.3] deep for 8BFB.
3. Install 8BFB by striking squarely with a hammer.

Active Door

1. Drill a 1-3/32" [27.8] dia. hole x 7/8" [22.2] deep for Plug at the same height as the 8BFB.
2. Install plug in door by striking with a hammer.

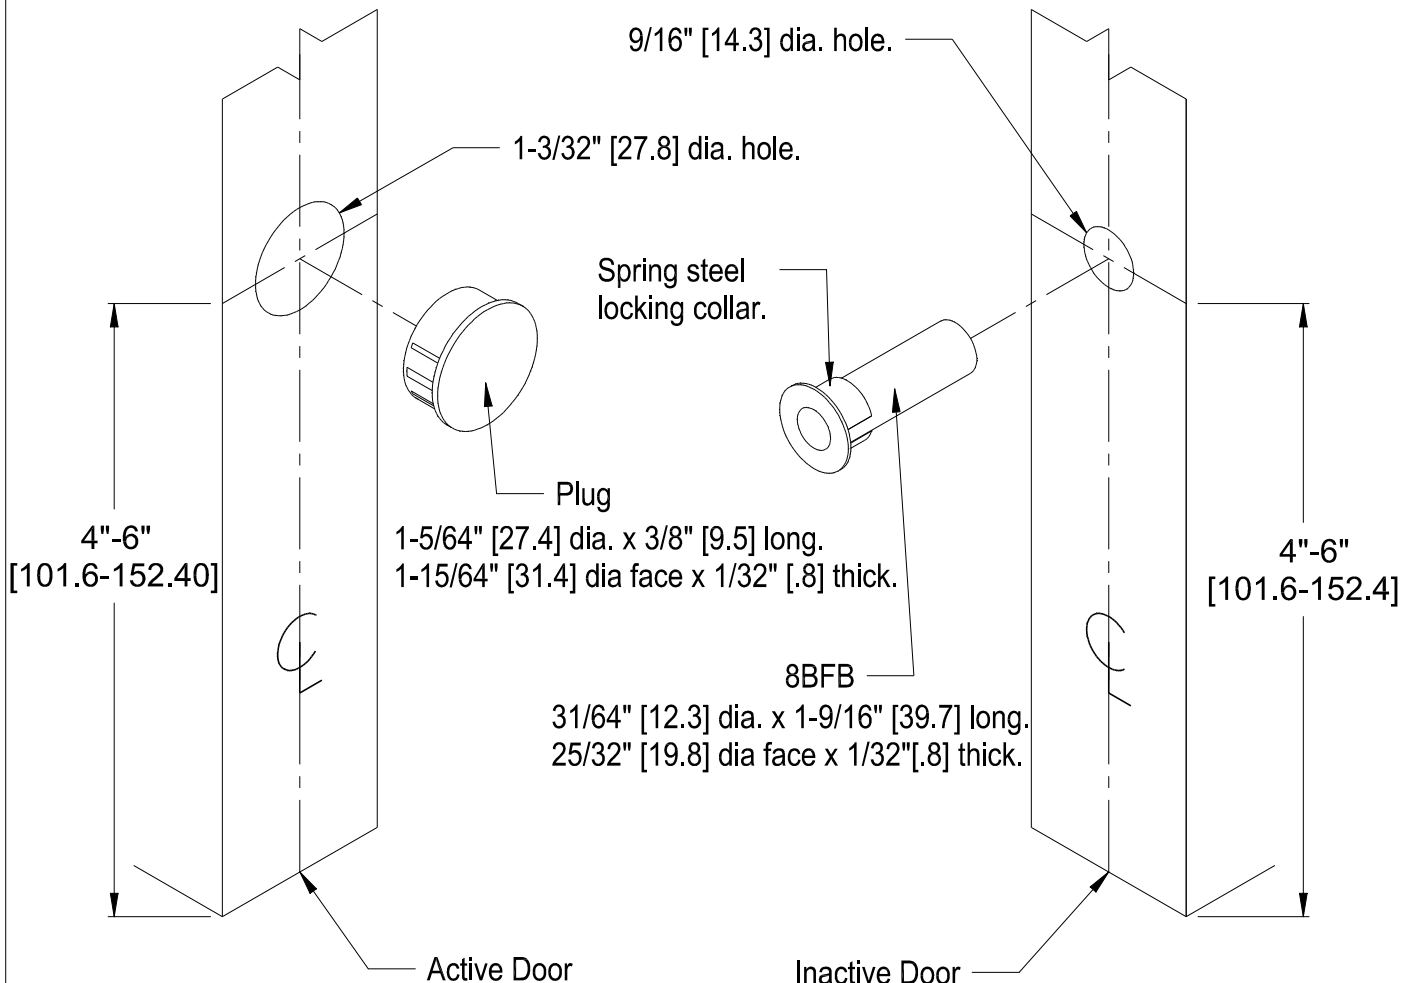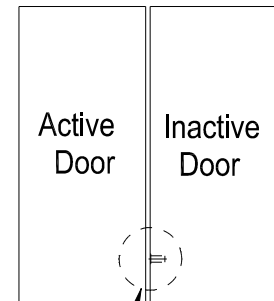

IMPORTANT: The 8BFB will project during a fire.
Do not cover with any edge mounted door hardware.