


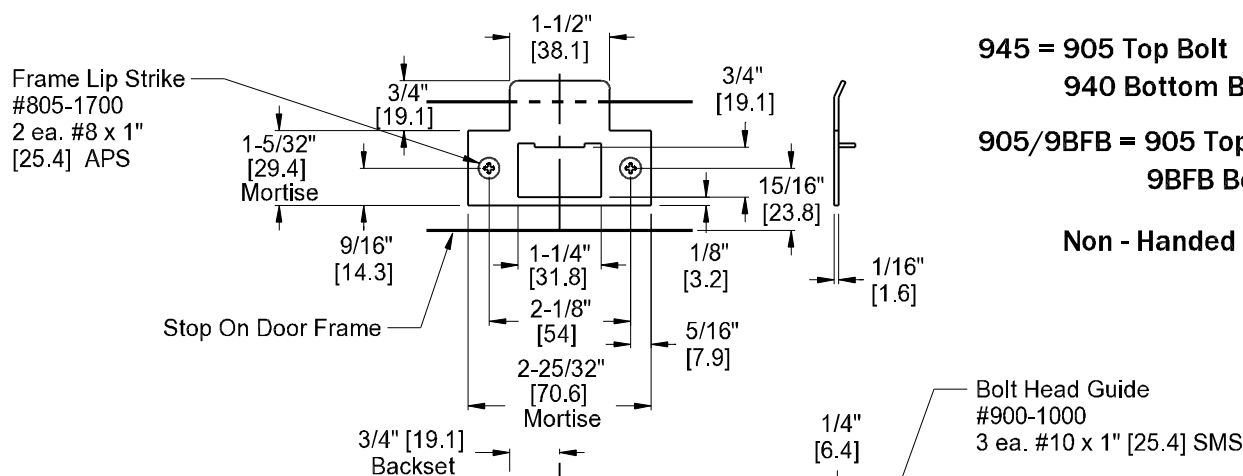

945 = 905 Top Bolt


940 Bottom Bolt

905/9BFB = 905 Top Bolt


9BFB Bottom Fire Bolt

Non - Handed

Door Face Delamination: Optional by others. Drill 3/16" [4.8] hole 3/8" [9.5] deep in location shown on both sides of door. Tap holes for 8-32 MS. Install 2ea. 8-32 x 1/2" [12.7] FHMS

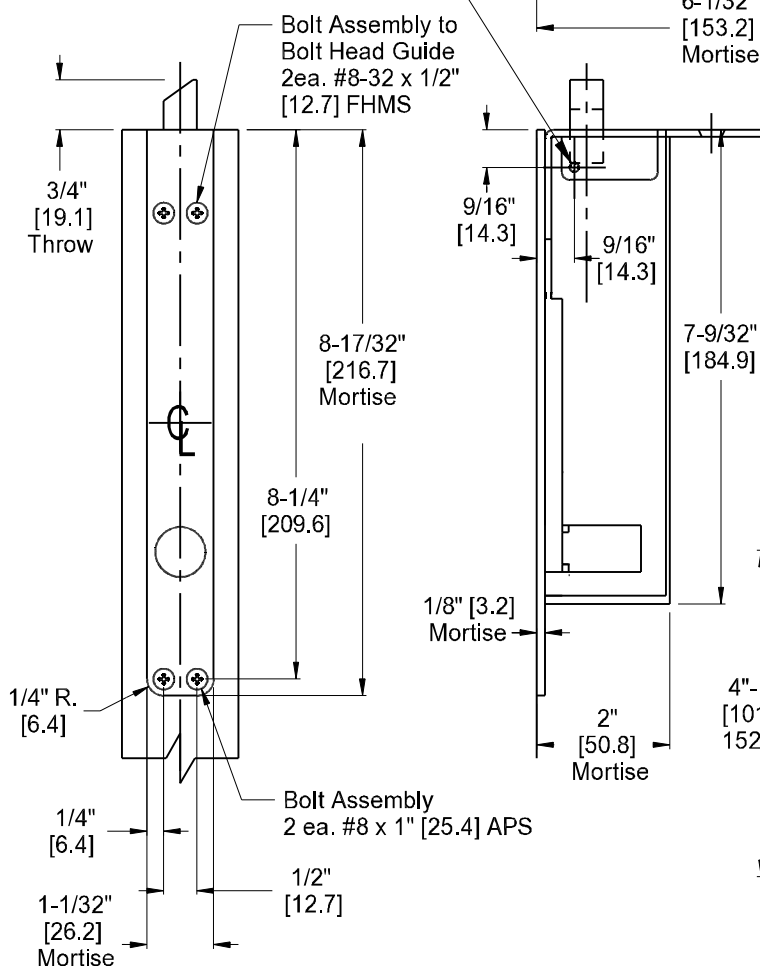

## 9BFB Mounting Instructions

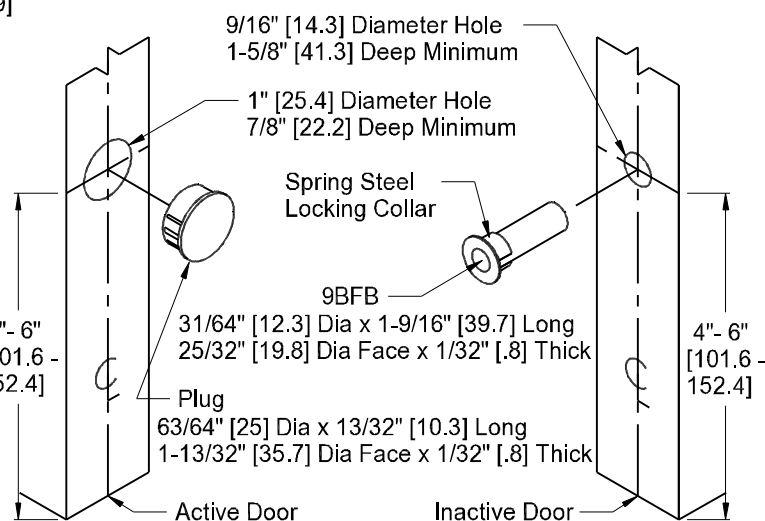

**IMPORTANT:** The 9BFB will project during a fire. Do not cover with any edge mounted door hardware.

Dimensions in [ ] denotes millimeters



**DOOR CONTROLS  
INTERNATIONAL**

2362 Bishop Circle East  
Dexter, MI 48130 U.S.A.