



PATENTED

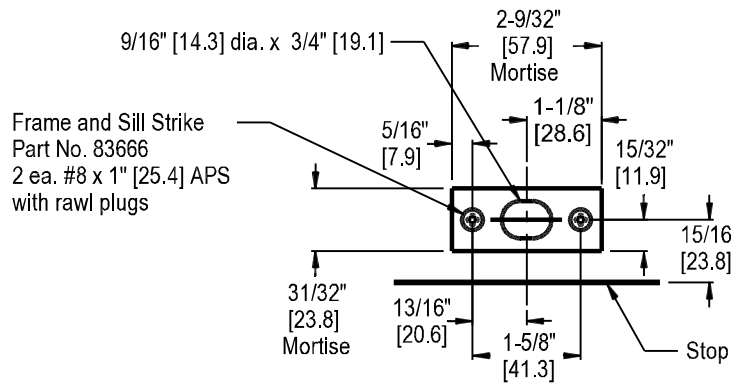


860/960 = Single Bolt
862/962 = Set of Bolts
860/960/BFB = Single Bolt
Bottom Fire Bolt
See reverse side for BFB Template
Non - Handed

Active Door Strike
 Part No. 800-1500
 2 ea. #8 x 1" [25.4] APS


REQUIRES 1-1/2" [38.1] BACKSET

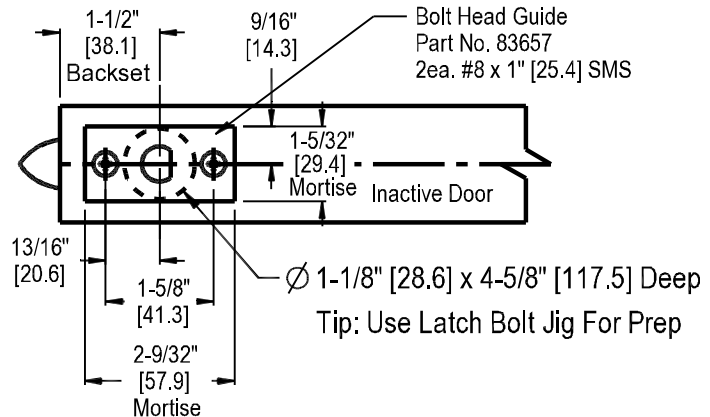


3/32" [2.4] thick shims are available for the active door strike. Part No. 800-1600

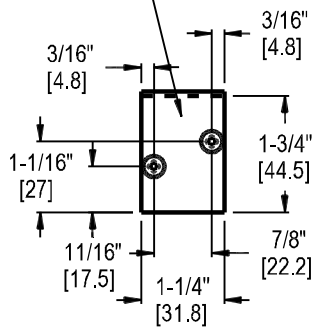


7/8" [22.2] Throw

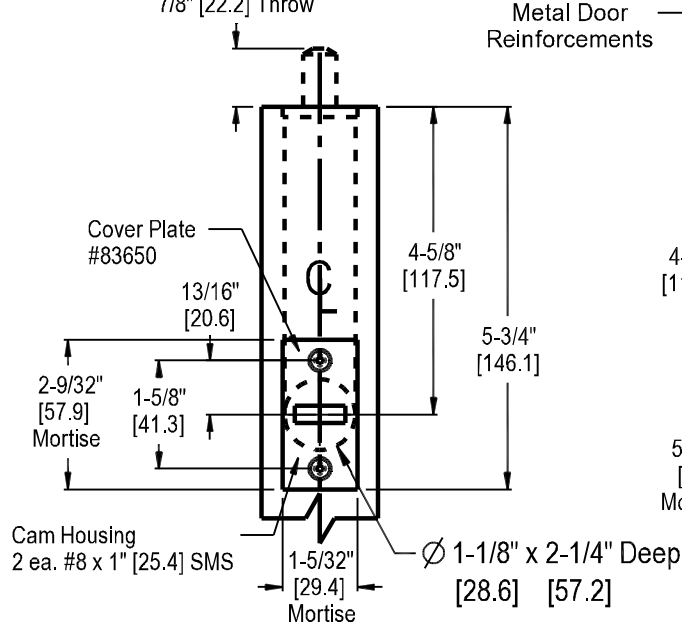

Metal/Wood Door

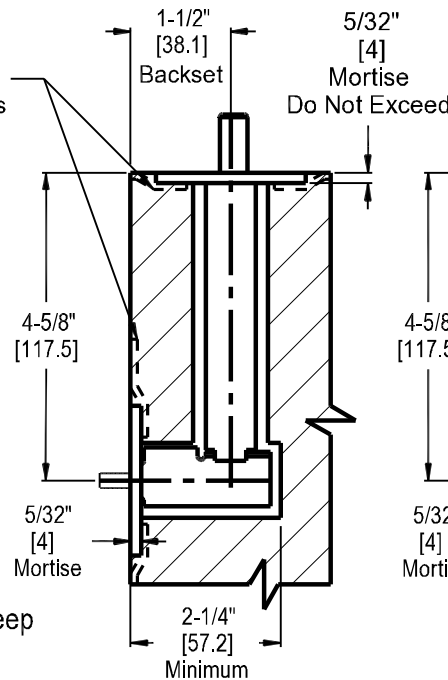

Metal/Wood Door

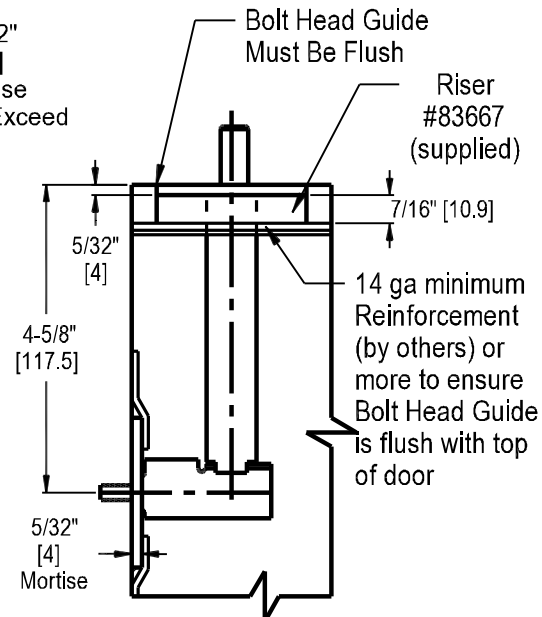

Recessed Channel Metal Door

Dimensions in [] denotes millimeters



DOOR CONTROLS INTERNATIONAL™

2362 Bishop Circle East
 Dexter, MI 48130 U.S.A.



Bolt Installation

PATENTED


1. Remove Tie and install Bolt Housing.

2. Install Cam Housing into grooves of Bolt Housing. See Inset.
Secure Trim Plate with 2 ea. #8 APS


DO NOT SECURE

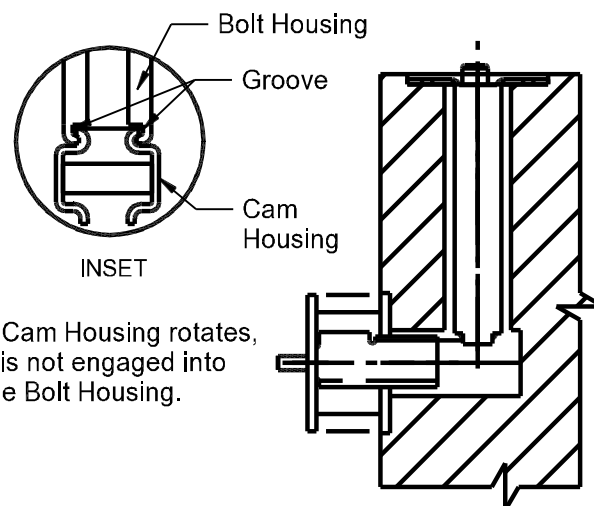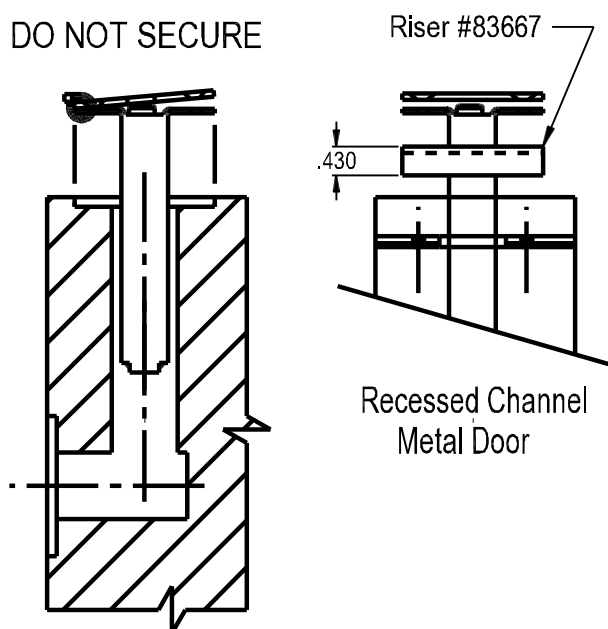

3. Adjust Bolt Head 0" to 1/16" [1.6] above Bolt Head Guide.
Secure with 2 ea. #8 APS

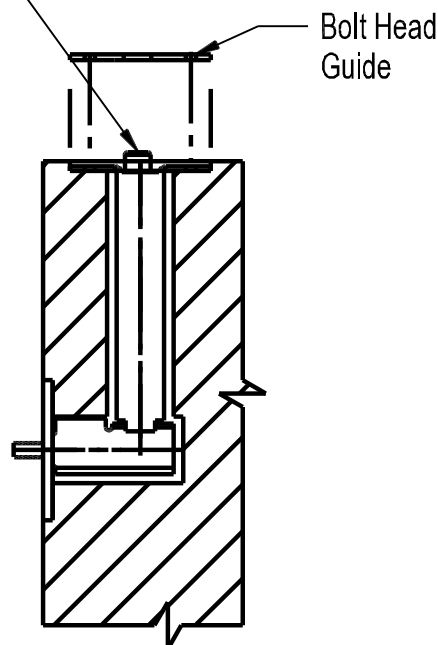

BFB Mounting Instructions

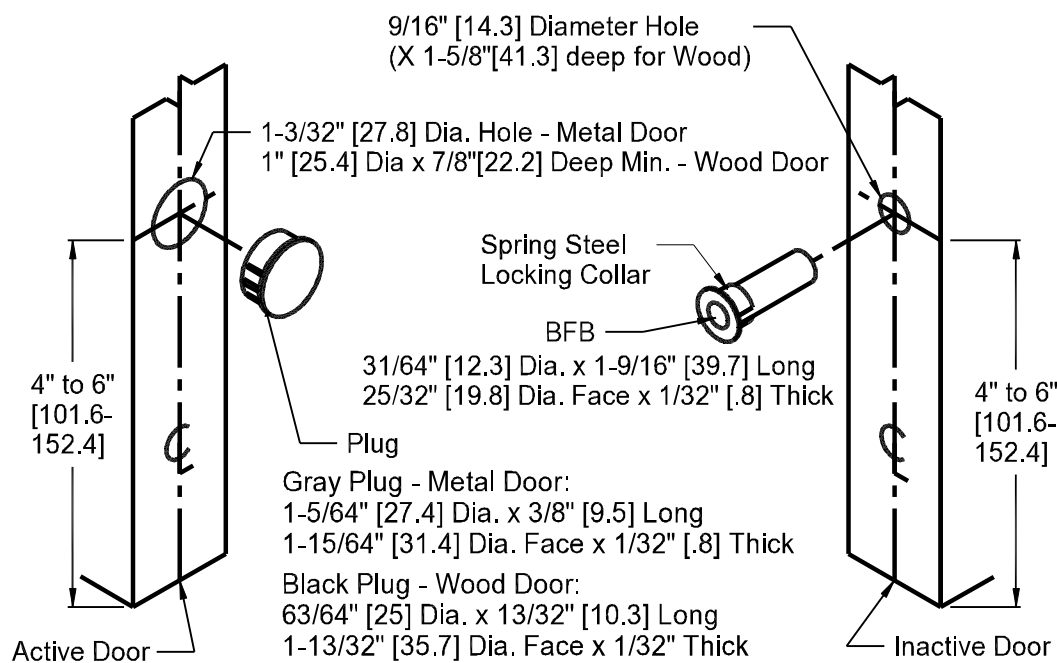

Dimensions in [] denotes millimeters



**DOOR CONTROLS
INTERNATIONAL™**

2362 Bishop Circle East
Dexter, MI 48130 U.S.A.